

Service Manual



The photo shows the model KE-4242/UC.

**ORDER NO.
CRT 1095**

CASSETTE CAR STEREO WITH FM/AM ELECTRONIC TUNER

KE-4242 UC

KE-4515 US

NOTE: This service manual is designed to be used together with Model KE-3232/UC Service Manual (CRT1090). Refer to it for finding parts numbers and circuit description, etc. which are not shown in this manual.

SPECIFICATIONS

General

Power source 14.4 V DC (10.8 — 15.6 V allowable)
Grounding system Negative type
Max. current consumption 2.5 A
Dimensions (chassis) 170(W) × 50(H) × 130(D) mm
[6-3/4(W) × 2(H) × 5-1/8(D) in.]
(nose) 105(W) × 42(H) × 36(D) mm
[4-1/8(W) × 1-5/8(H) × 1-3/8(D) in.]
Shaft interval 130 or 147 mm (5-1/8 or 5-3/4 in.)
Weight 1.5 kg (3.3 lbs.)

Amplifier

Continuous power output is 3.2 W per channel min. into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.
Maximum power output 8.5 W × 2/7 W × 4 (EIAJ)
Load impedance 4 Ω (4 — 8 Ω allowable)
Maximum output level/output impedance (RCA) 500 mV/100 Ω
Tone controls (bass) ±10 dB (100 Hz)
(treble) ±10 dB (10 kHz)
Loudness contour +8 dB (100 Hz) (volume: -30 dB)

Tape player

Tape Compact cassette tape (C-30 — C-90)
Tape speed 4.76 cm/sec. (+0.14 cm/sec., -0.05 cm/sec.)
Fast forward/rewind time Approx. 100 sec. for C-60
Wow & flutter 0.13% (WRMS)
Frequency response Metal: 50 — 17,000 Hz (±3 dB)
Normal: 50 — 14,000 Hz (±3 dB)
Stereo separation 45 dB
Signal-to-noise ratio 52 dB (IHF-A network)

FM tuner

Frequency range 87.9 — 107.9 MHz
Usable sensitivity 12 dBf (1.1 μV/75Ω, mono)
50 dB quieting sensitivity 17 dBf (1.9 μV/75Ω, mono)
Signal-to-noise ratio 70 dB (IHF-A network)
Distortion 0.3% (at 65 dBf, 1 kHz, stereo)
Frequency response 50 — 15,000 Hz (±3 dB)
Stereo separation 40 dB (at 65 dBf, 1 kHz)
Selectivity 70 dB (2 ACA)

AM tuner

Frequency range 530 — 1,620 kHz
Usable sensitivity 18 μV (25 dB) (S/N: 20 dB)
Selectivity 50 dB (±10 kHz)

These specifications were determined and are presented in accordance with specification standards established by the Ad Hoc Committee of Car Stereo Manufacturers.

Note:

Specifications and the design are subject to possible modifications without notice due to improvements.

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A. TEL: [213] 835-6177
PIONEER ELECTRONICS OF CANADA, INC. 505 Cochrane Drive, Markham, Ontario L3R 6B8 Canada TEL: [416] 479-4411
PIONEER ELECTRONIC [EUROPE] N.V. Keetberglaan 1, 2740 Beveren, Belgium TEL: 03/775 · 28 · 08
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911

FT ©FEB. 1987 Printed in Japan

1710

ADJUSTMENT

HEAD AZIMUTH ADJUSTMENT

- Connection Diagram

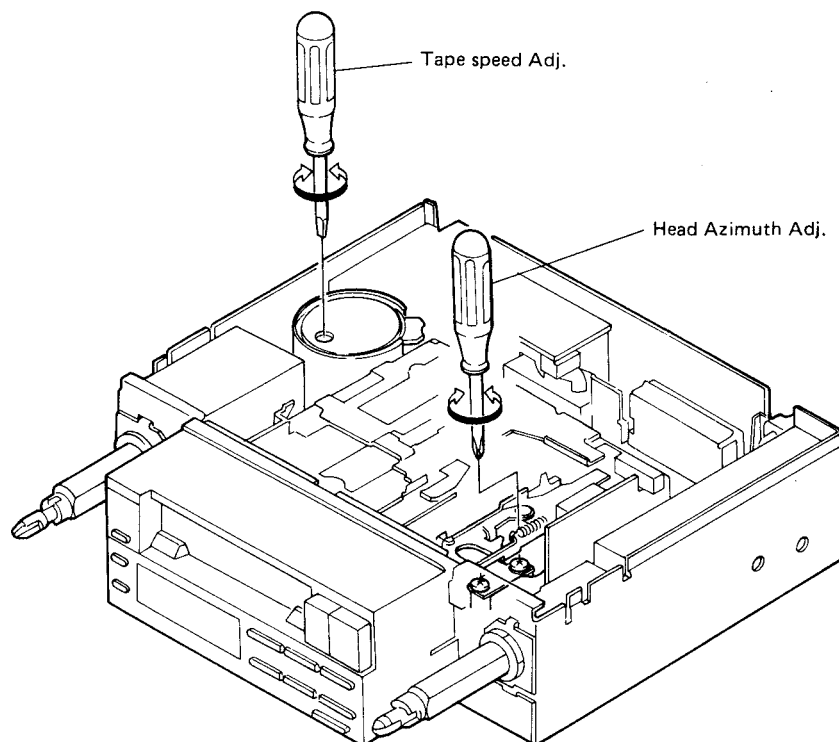


Fig. 1

- To Adjust

1. Play "A" side of STD-341A (10kHz, -20dB). Adjust each screw for maximum output in forward and reverse directions.
2. Play "B" side in forward and reverse directions to confirm adjustment.

TAPE SPEED ADJUSTMENT

- Connection Diagram (shown in Fig. 1)

- To adjust

1. Reproduce STD-301 (3kHz, -10dB). Adjust the semi-fixed resistor so that the frequency counter shows 3,010Hz (+30Hz, -30Hz).

FM IF ADJUSTMENT

● Connection Diagram

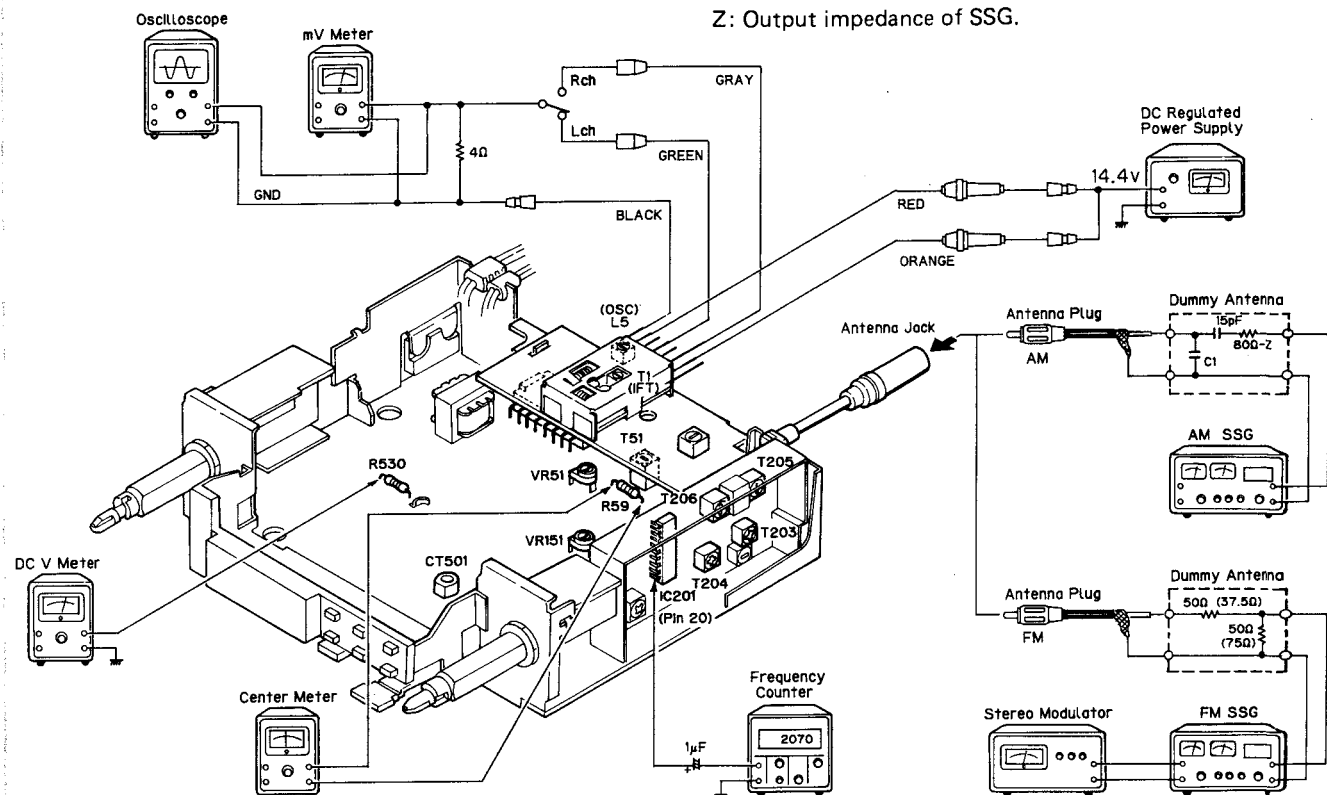


Fig. 2

● To Adjust

1. Apply a signal of 98.1MHz, 400Hz, 100% modulation and 60dB (μ V) from the FM SSG and tune 98.1MHz.
2. Adjust T51 to make the center meter show 0.

AUTO LEVEL ADJUSTMENT

● Connection Diagram (shown in Fig. 2)

● To Adjust

1. Set SSG at 98.1MHz and tune using the tuning button.
2. Set SSG to an output level of 35 dB (μ V), and adjust VR151 to a separation of 5 dB (between the right and left channels).

NOTICE:

Select C1 so that total capacity of 80pF is attained from the direction of the receiver jack.

Z: Output impedance of SSG.

FM SCAN SENSITIVITY

● Connection Diagram (shown in Fig. 2)

● To Adjust

1. Turn off the Local Station Seek switch.
2. Add a 98.1MHz (400Hz, 100% modulation) output level 25dB (μ V) signal from the SSG.
3. Push the SEEK button, and adjust VR51 so that the SEEK stops.
4. Set the SSG output level to 14dB (μ V). And check to make sure that the SEEK doesn't stop.
5. Push the Local Station Seek switch and set it to Local.
6. Check to make sure that the SEEK stops when the SSG output level is 47 ± 10 dB (μ V).
7. If it is not within specifications, repeat the procedure starting at step one.

AM (MW) TRACKING ADJUSTMENT

- Connection Diagram (shown in Fig. 2)

- To Adjust

Frequency of AM SSG	Displayed Frequency	Adjusting Point	DC V Meter	mV Meter
1.	1,620 kHz	For Confirmation only	Less than 7.4V	
2.	530 kHz	For Confirmation only	More than 0.7V	
3. 600 kHz (400 Hz, 30% modulation) output level 25 dB (μ V)	600 kHz	T203, T204 T205, T206		Maximum output
600 kHz 4. 1,000 kHz (400 Hz, 30% modulation) 1,400 kHz output level 35 dB (μ V)	600 kHz 1,000 kHz 1,400 kHz	For Confirmation Only		The difference between the maximum and minimum output levels at 600 kHz, 1,000 kHz, and 1,400 kHz must be 6 dB or less.

FM TRACKING ADJUSTMENT

- Connection Diagram (shown in Fig. 2)

- To Adjust

Frequency of FM SSG	Displayed Frequency	Adjusting Point	DC V Meter	mV Meter
1.	107.9 MHz	L5	Less than 7.4V	
2.	87.9 MHz	For confirmation only	More than 1.6V	
3. 98.1 MHz (400 Hz, 100% modulation) output level 5 ~ 10 dB (μ V)	98.1 MHz	T1		Maximum output

REFERENCE OSCILLATION FREQUENCY ADJUSTMENT

- Connection Diagram (shown in Fig. 2)

- To Adjust

1. Set the AM position.
2. Set the LCD display to 1620KHz.
3. Adjust CT501 so that the frequency counter display becomes 2070kHz \pm 40Hz.


SCHEMATIC CIRCUIT DIAGRAM

A

B

C

D

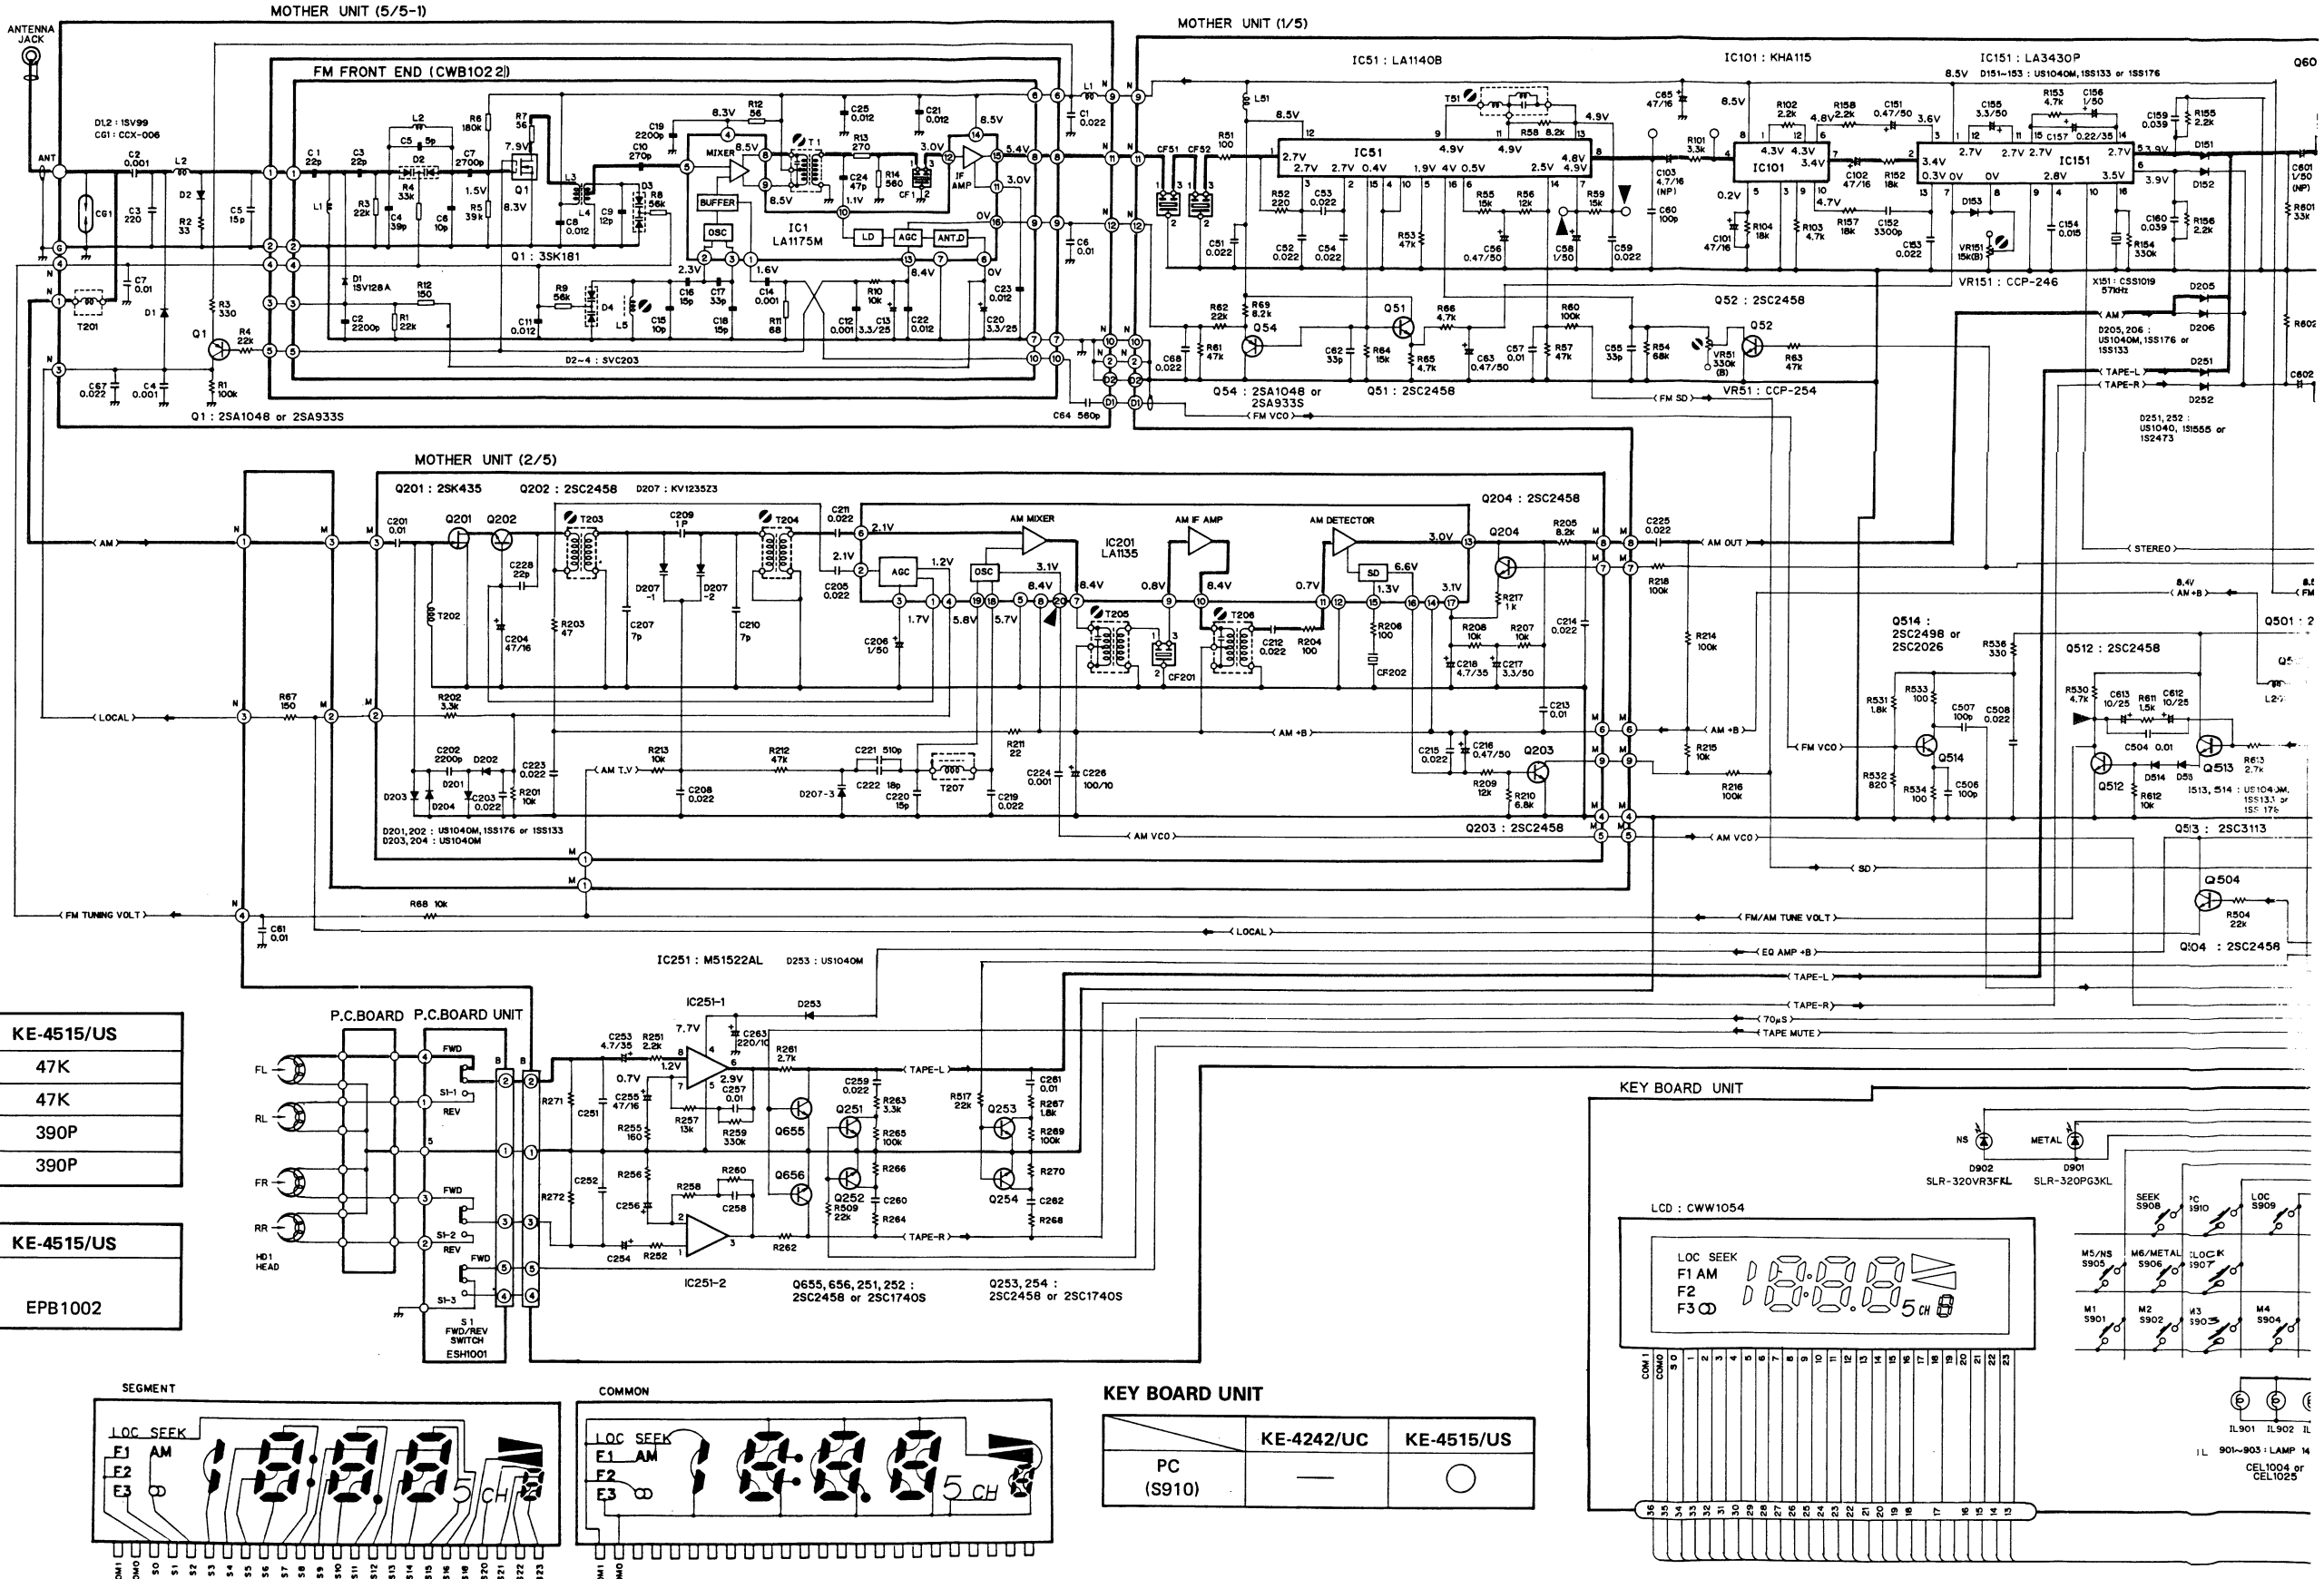

MOTHER UNIT (1/5)

	KE-4242/UC	KE-4515/US
R271	—	47K
R272	—	47K
C251	470P	390P
C252	470P	390P

	KE-4242/UC	KE-4515/US
HDI HEAD	EPB1001	EPB1002

KEY BOARD UNIT

	KE-4242/UC	KE-4515/US
PC (S910)	—	○

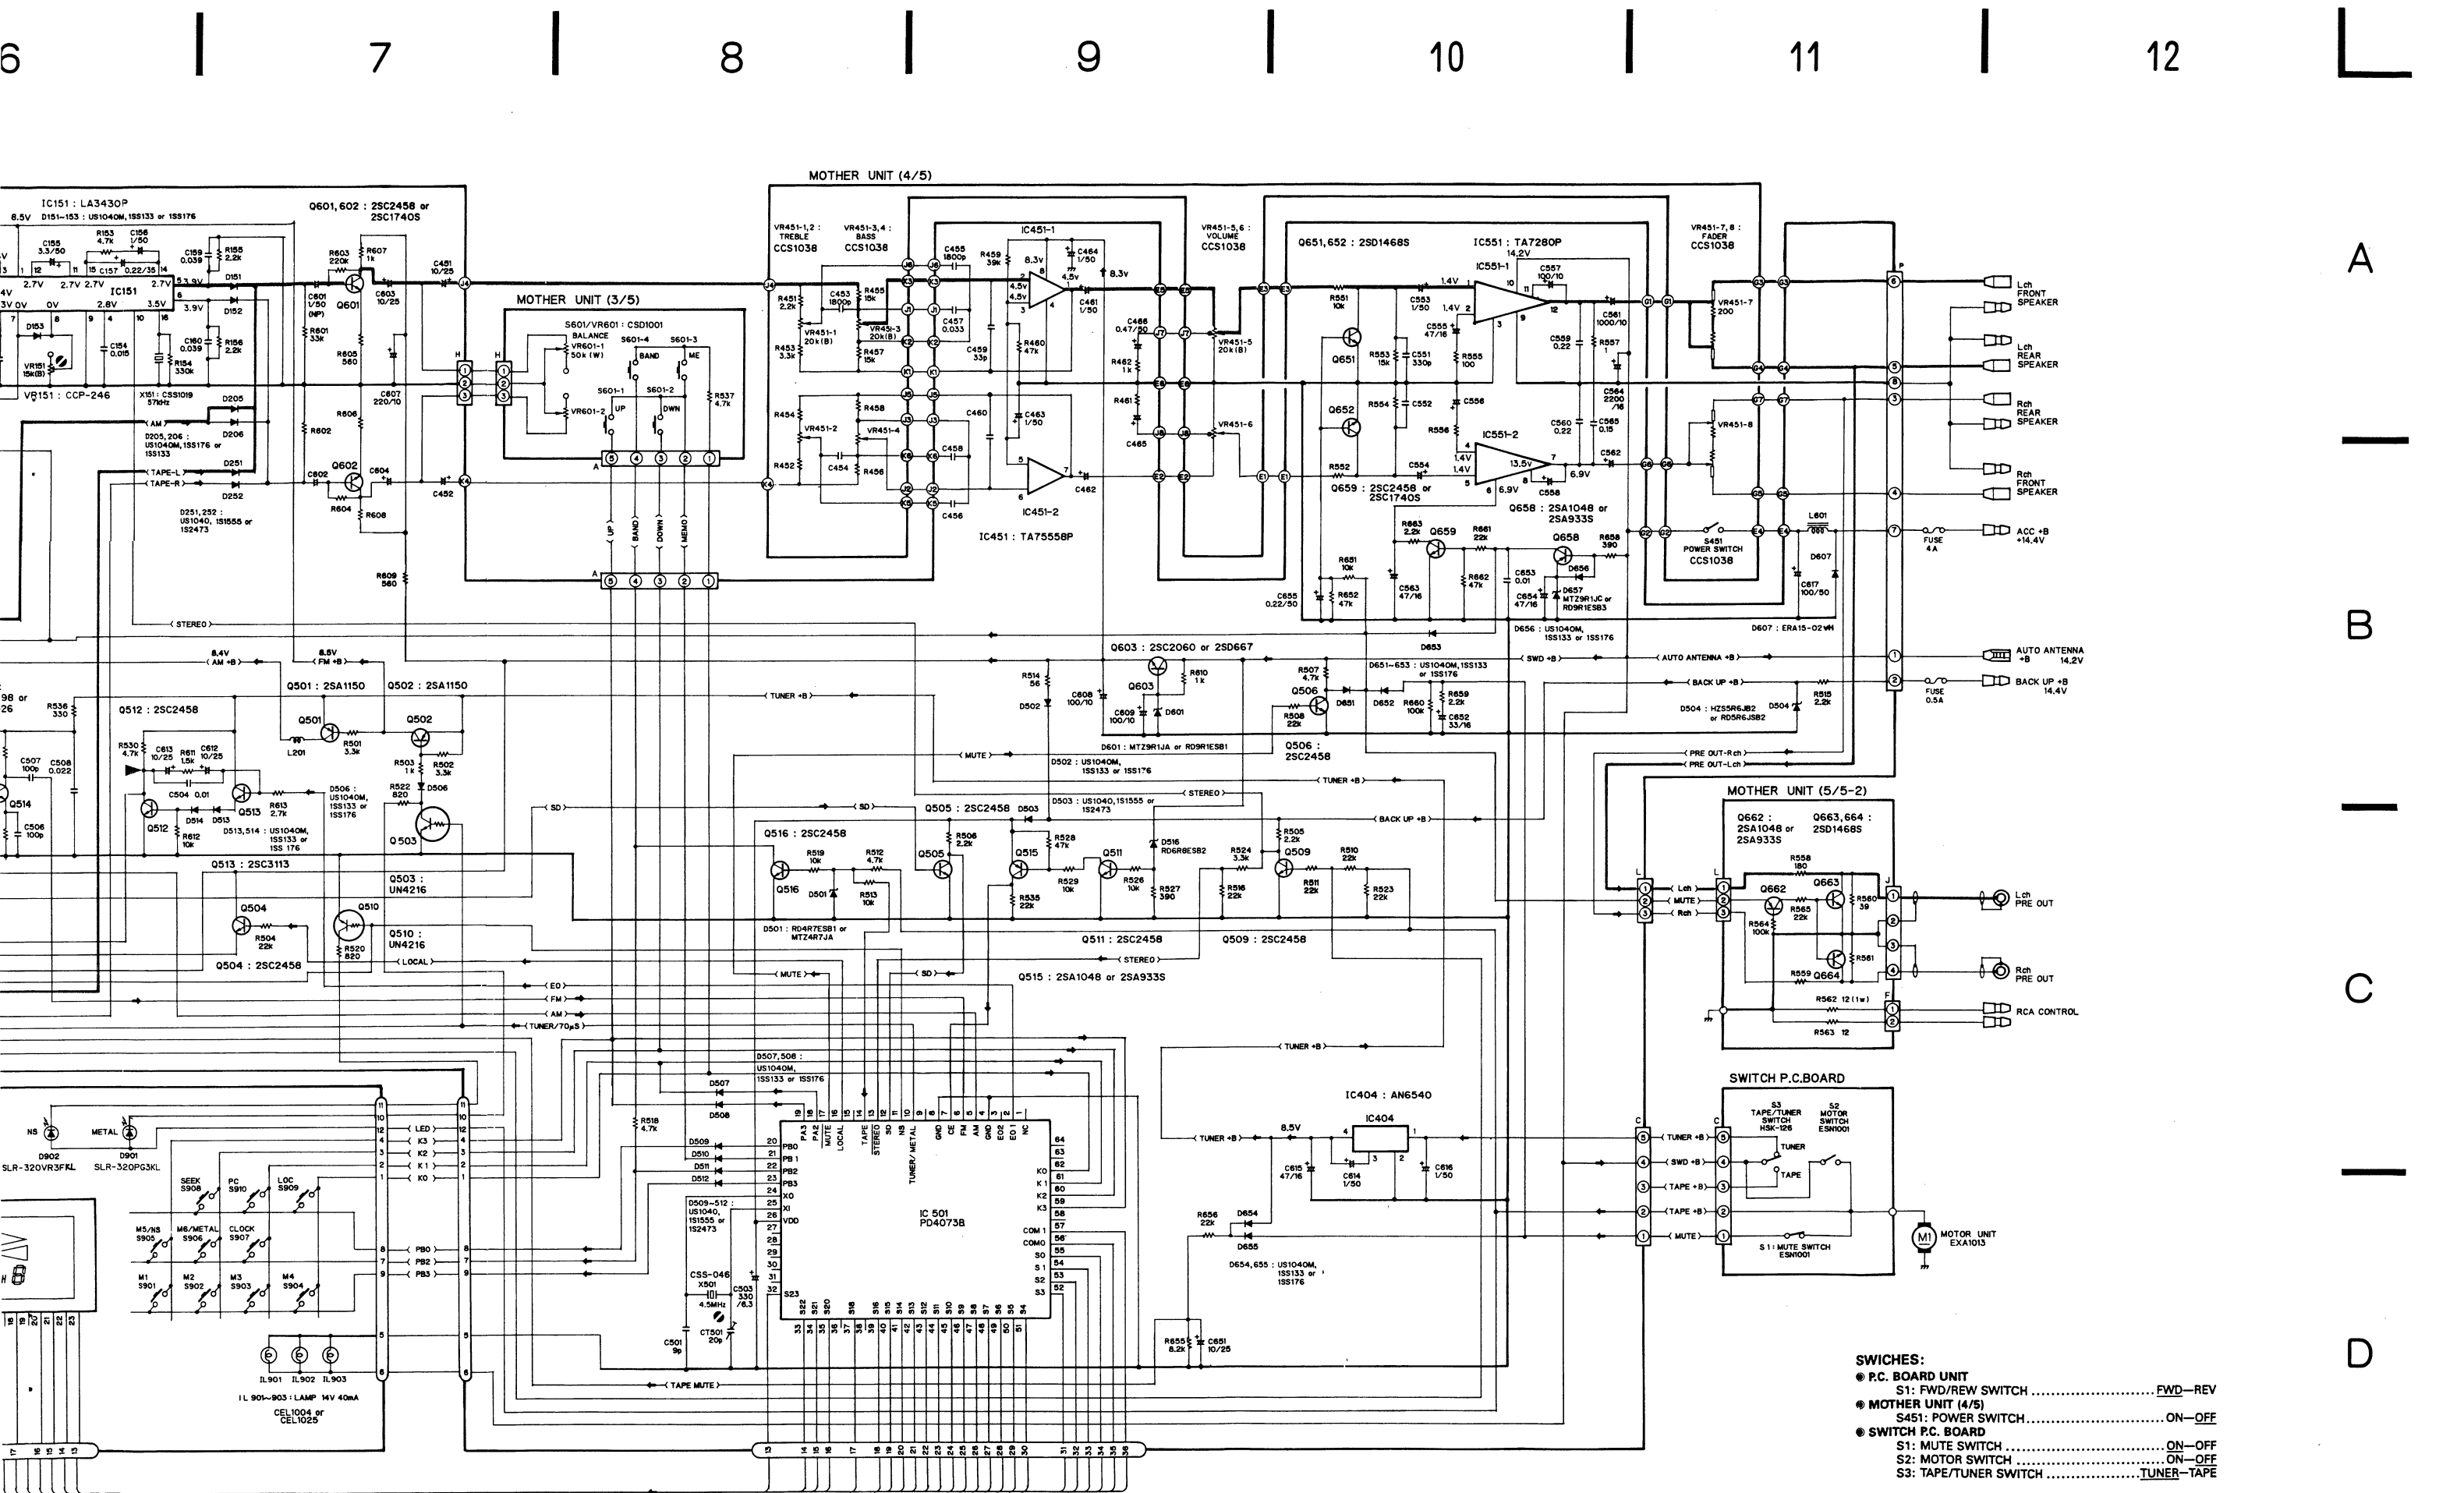
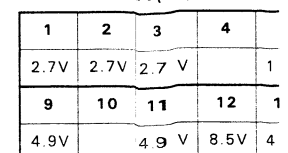


Fig 3

6



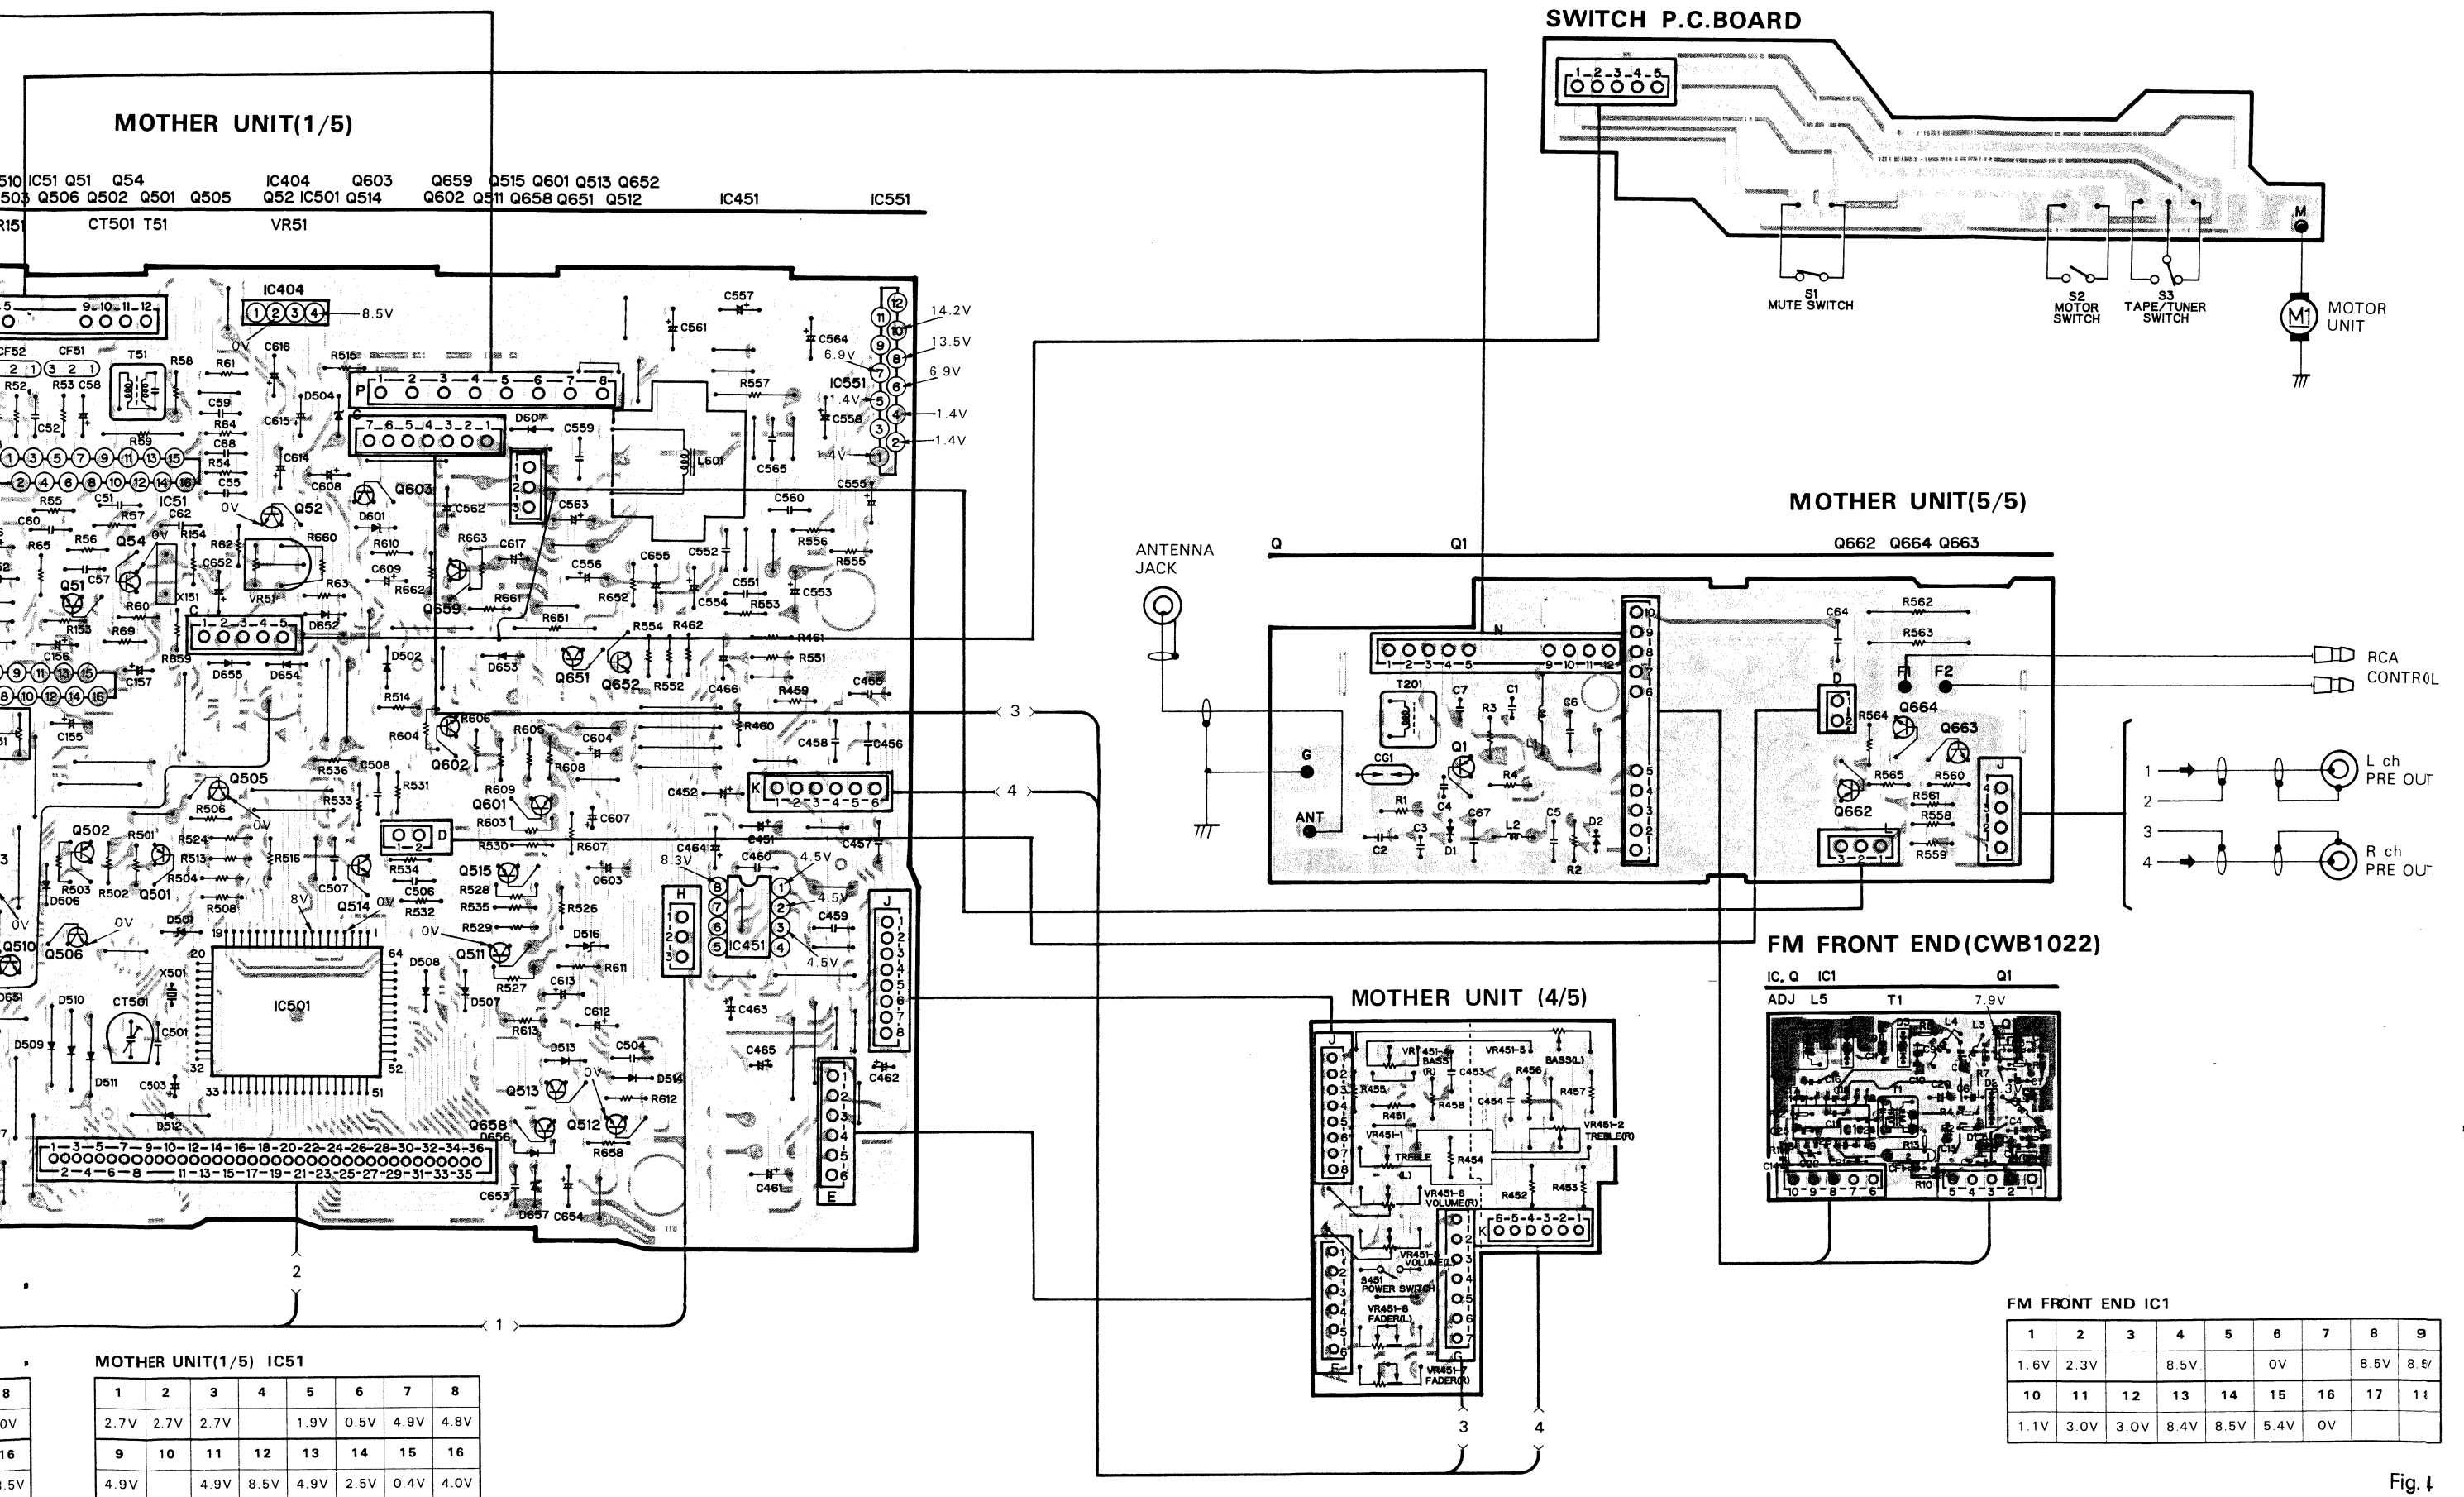


Fig. 1

EXPLODED VIEW

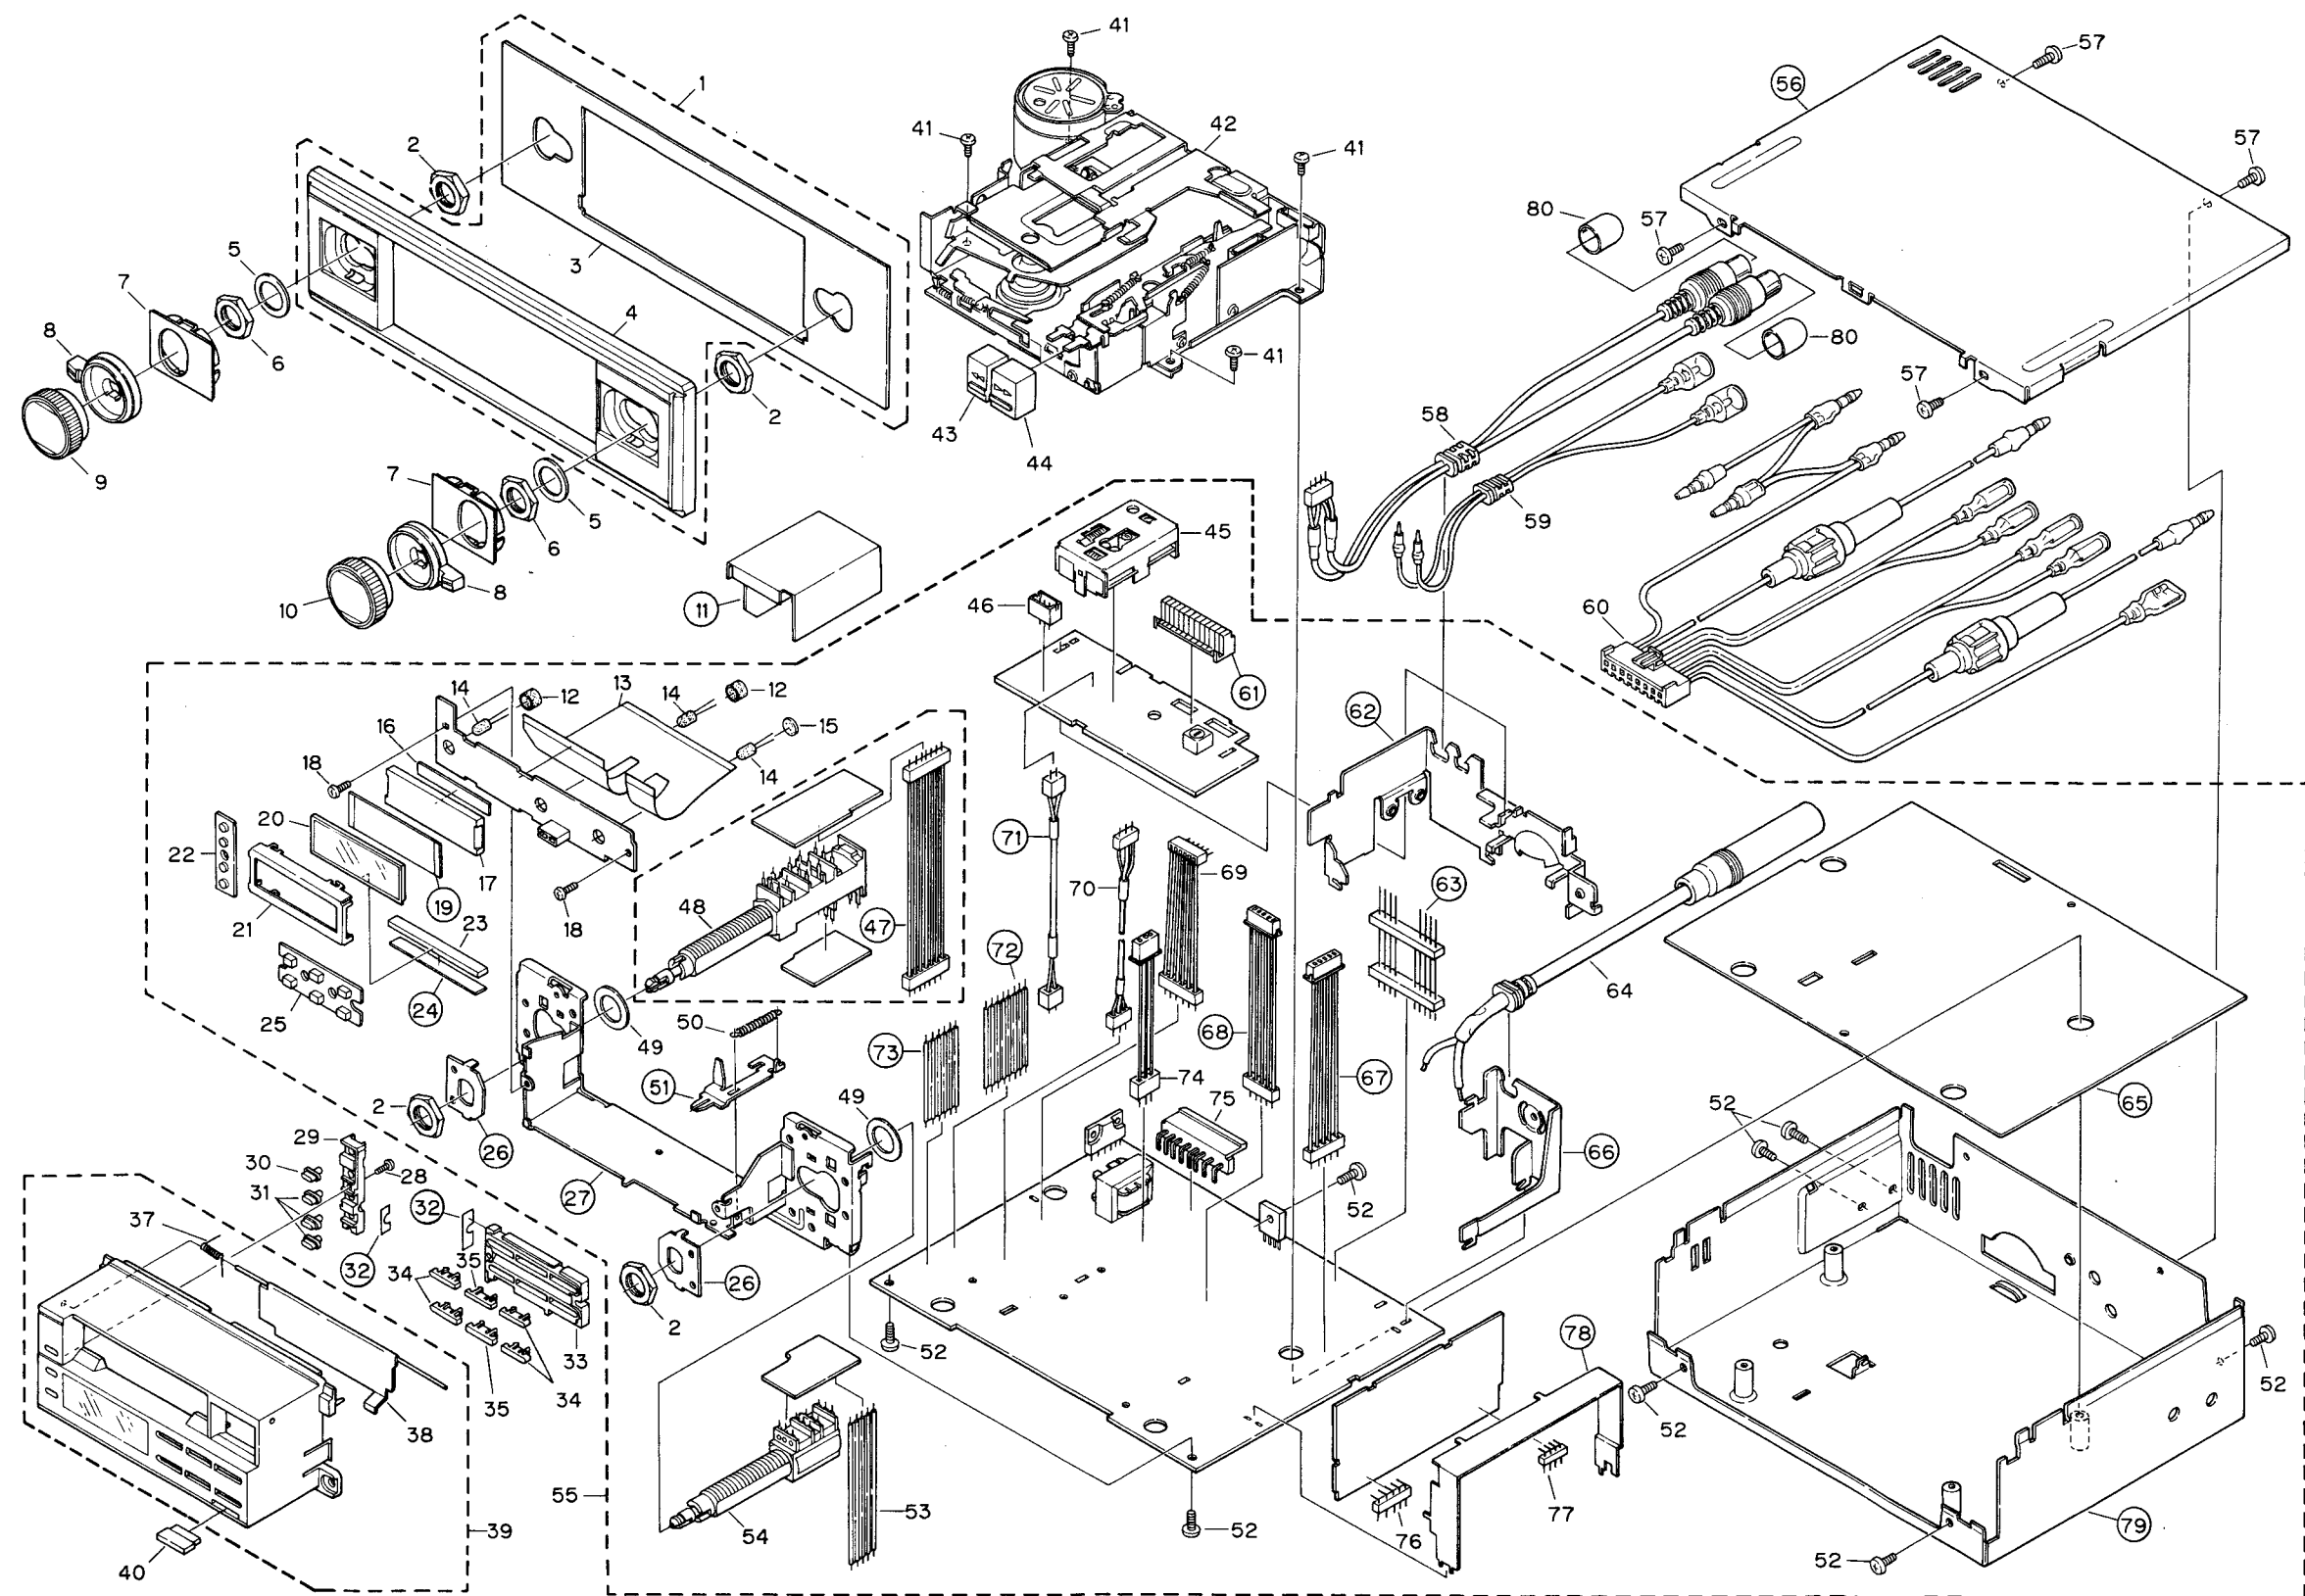


Fig. 5

● Part List

- NOTE:
- For your parts Stock Control, the fast moving items are indicated with the marks ★★ and ★.
 - ★★: GENERALLY MOVES FASTER THAN ★.
 - This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
 - Parts whose parts numbers are omitted are subject to being not supplied.
 - Parts marked by “●” are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	CXA1629	Panel Assy	●	42.	EXK1130	Cassette Mechanism Assy (KE-4242/UC)
	2.	CBN-028	Nut			EXK1150	Cassette Mechanism Assy (KE-4515/US)
	3.	CNG-633	Plate		43.	CAC1277	Button
	4.	CNS1226	Panel	★			
	5.	CND-646	Spacer		44.	CAC1276	Button
	6.	CBN-028	Nut	★	45.	CWB1022	FM Front End
★	7.	CNK-292	Cap		46.	CKS-567	Plug (3P)
★	8.	CAA1054	Knob (KE-4242/UC)		47.		Connector
★	9.	CAA1058	Knob (KE-4515/US)	★★	48.	CCS1038	Volume/Switch
★	10.	CAA1011	Knob				
	11.	CAA1055	Knob		39.	CBE-084	Spacer
	12.	Insulator			50.	CBH1084	Spring
	13.	CNV1088	Bush		51.		Lever
	14.	CNP1296	P.C. Board		52.	BMZ30P060FMC	Screw
★★	15.	CEL1004 or	Lamp, 14V 40mA		53.	CDE1409	Connector
	16.	CEL1025		★★	54.	CSD1001	Volume/Switch
	17.	CNV1102	Bush		55.	CWM1350	Tuner Amp Assy (KE-4242/UC)
	18.	CNN-137	Spacer			CWM1351	Tuner Amp Assy (KE-4515/US)
	19.	CNY-215	Lens		56.		Case
	20.	PMZ20P050FMC	Screw		57.	BMZ30P040FMC	Screw
	21.				58.	CDE1126	Connector
	22.				59.	CDE1381	Cord
	23.				60.	CDE1419	Cord Assy
	24.				61.		Connector
	25.				62.		Heat Sink
	26.						
	27.				63.		Plug (8P)
	28.				64.	CDH1061	Antenna Cable
	29.				65.		Insulator
	30.				66.		Holder
	31.				67.		Connector (5P)
	32.						
	33.				68.		Connector (5P)
	34.				69.	CDE1412	Connector (6P)
	35.				70.	CDK-206	Connector (3P)
	36.				71.		Connector (2P)
	37.				72.		Connector (8P)
	38.						
	39.				73.		Connector (6P)
	40.				74.	CDE1410	Connector (3P)
	41.				75.	CKS-465	Plug (8P)
					76.	CKS-128	Plug (5P)
					77.	CKS-127	Plug (4P)
					78.		Holder
					79.		Chassis Unit
					80.	CNW-829	Cap

ELECTRICAL PARTS LIST

- NOTE:
- When ordering resistors, first convert resistance values into code form as shown in the following examples.
- Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).
- 560Ω 56 × 10¹ 561..... RD1/4PS 5 6 1 J
- 47kΩ 47 × 10³ 473..... RD1/4PS 4 7 3 J
- 0.5Ω 0R5..... RN2H 0 5 K
- 1Ω 010..... RS1P 0 1 0 K
- Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).
- 5.62kΩ 562 × 10¹..... RN1/4SR 5 6 2 1 F
- For your parts Stock Control, the fast moving items are indicated with the marks ★★ and ★.
 - ★★: GENERALLY MOVES FASTER THAN ★.
 - This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
 - Parts whose parts numbers are omitted are subject to being not supplied.

MOTHER UNIT
MISCELLANEOUS

Mark	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
★★	IC51	LA1140B	★	D207	KV1235Z3
★★	IC101	KHA115	★	D251, 252, 503, 509 — 512	US1040 or
★★	IC151	LA3430P			1S1555 or
★★	IC201	LA1135			1S2473
★★	IC251	M51522AL	★	D501	RD4R7ESB1 or
★★	IC404	AN6540			MTZ4R7JA
★★	IC451	TA75558P	★	D504	HZS5R6JB2 or
★★	IC501	PD4073B			RD5R6JSB2
★★	IC551	TA7280P	★	D516	RD6R8ESB2
★★	Q1, 54, 515, 658, 662	2SA1048 or 2SA933S	★	D601	MTZ9R1JA or
★★	Q51, 52, 202 — 204	2SC2458	★	D607	RD9R1ESB1
★★	Q201	2SK435	★	D657	ERA15-02VH
★★	Q251 — 254	2SC2458 or 2SC1740S			MTZ9R1JC or
		2SA1150			RD9R1ESB3
★★	Q501, 502		L1	Ferri-Inductor	CTF-156
★★	Q503, 510	UN4216	L2	Ferri-Inductor	CTF1038
★★	Q504 — 506, 509, 511, 512, 516	2SC2458	L51	Ferri-Inductor	CTF-155
★★	Q513	2SC3113	L201	Ferri-Inductor	CTF-157
★★	Q514	2SC2498 or 2SC2026	L601	Coil	CTF-002
			T51	Coil	CTC-198
★★	Q601, 602, 655, 656, 659	2SC2458 or 2SC1740S	T201	Coil	CTB1011
★★	Q603	2SC2060 or 2SD667	T202	Coil	CTB1012
★★	Q651, 652	2SD1468S	T203, 204	Coil	CTB1013
			T205	Coil	CTE1011
			T206	Coil	CTE1012
★★	Q663, 664	2SD1468S	T207	Coil	CTB1014
★	D151 — 153, 201, 202, 205, 206, 253, 502, 506 — 508, 513, 514, 651 — 656	US1040M or 1SS176 or 1SS133	CF51, 52	Ceramic Filter	CTF-182
★	D203, 204, 253	US1040M	CF201	Filter	CTF-240
			CF202	Ceramic Resonator	CTF-247
			★ ★	VR51	Semi-fixed, 330kΩ (B)

Mark	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
★ ★	VR151 Semi-fixed, 15kΩ (B)	CCP-246		C209	CCPCH010M50L
★ ★	VR451/S451 Volume/Switch	CCS1038		C217	CEA3R3M50L2
	(TREBLE, BASS, FADER/ POWER)			C218	CEA4R7M35L2
				C220	CCDCH150J50L
				C221	CQPA511G2A
	CG1	CCX-006			
	CT501 Trimmer, 20P	CCG-070		C222	CCCRH180J50
	X151 Ceramic Resonator, 57kHz	CSS1019		C224	CKPYB102K50L
	X501 X'tal, 4.5MHz	CSS-046		C226	CEA101M10L2
★ ★	S601/VR601 Switch/Volume	CSD1001		C228	CCDSL220J50L
	(BAND, MEMO/TONE, BALANCE)			C251, 252 (KE-4242/UC)	CKPYB471K50L

RESISTORS

Mark	Symbol & Description	Part No.
	R51 – 58, 60 – 69, 101 – 104, 152 – 158, 201 – 218, 251, 252, 255 – 270, 451 – 462, 501 – 506, 508, – 520, 522, 524 – 537, 551 – 556, 558 – 561, 564, 565, 601 – 613, 652, 655, 658 – 663	RD1/4PS□□□JL
	R59, 507, 523, 557, 651, 656	RD1/4PM□□□J
	R562, 563	RS1P□□□JL
	R271, 272 (KE-4515/US)	RD1/4PS □□□JL

CAPACITORS

Mark	Symbol & Description	Part No.
	C1, 51 — 54, 59, 67, 68, 153, 203	CGCYX223K25
	C2	CCDPH390J50
	C3, 228	CCDSL220J50L
	C4	CKDBC102K25
	C5	CCL-068
	C55, 62	CCCSL330J50
	C6, 7, 57, 61, 201, 213	CGCYX103K25
	C56, 63, 151, 216	CEAR47M50LS2
	C58, 156, 616	CEA010M50LS2
	C60	CKPYB101K50L
	C64	CKCYB561K50
	C65, 204	CEA470M16L2
	C101, 102, 255, 256	CEA470M16LS
	C103	CEA4R7M16NPLL
	C152	CGCYX332K25
	C154	CKDBC153K25
	C155	CEA3R3M50LS
	C157	CSZAR22M35
	C159, 160	CKDBC393K25
	C161	CEA220M16L2
	C202	CGCYX222K25
	C205, 208, 211, 212, 214, 215, 219, 223, 225	CGCYX223K25
	C206, 614	CEA010M50LS2
	C207, 210	CCDSH070D50

Mark	Symbol & Description	Part No.
	C209	CCPCH010M50L
	C217	CEA3R3M50L2
	C218	CEA4R7M35L2
	C220	CCDCH150J50L
	C221	CQPA511G2A
	C222	CCCRH180J50
	C224	CKPYB102K50L
	C226	CEA101M10L2
	C228	CCDSL220J50L
	C251, 252 (KE-4242/UC)	CKPYB471K50L
	C251, 252 (KE-4515/US)	CKPYB391K50L
	C253, 254	CEANL4R7M35LL
	C255, 256	CEA470M16LS
	C257, 258, 261, 262	CGCYX103K25
	C259, 260	CGCYX223K25
	C263	CEA221M10L2
	C451, 452	CEA100M25LS
	C453 – 456	CQMA182K50LL
	C457, 458	CQMA333J50L
	C459, 460	CCPSL330J50L
	C461, 464	CEA010M50LS2
	C462, 463	CEA010M50L2
	C465	CEAR47M50L2
	C466	CEAR47M50LS2
	C501	CCCCH090D50
	C503	CEA331M6R3L2
	C504, 653	CGCYX103K25
	C506, 507	CKPYB101K50L
	C508	CKDBC223K25
	C551, 552	CKDYB331K50
	C553, 554	CEA010M50LS2
	C555, 556, 563	CEA470M16L2
	C557, 558	CEA101M10L2
	C559, 560	CQMA224J50L
	C561, 562	CEA102M10L2
	C564	CEA222M16L2
	C565	CQMA154J50L
	C601, 602	CEA010M50NPLL
	C603, 604	CEA100M25LS
	C607	CEA221M10L2
	C608, 609	CEA101M10L2
	C612, 613	CEA100M25LS
	C615	CEA470M16L2
	C617	CEA101M50L2
	C651	CEA100M25LS
	C652	CEA330M16LS
	C654	CEA470M16LS
	C655	CEAR22M50LS2

KEY BOARD UNIT

Mark	Symbol & Description	Part No.
★	LCD	CWW1054
★	D901 LED (METAL)	SLR-320PG3KL
★	D902 LED(NS)	SLR-320VR3FKL
★★	IL901 – 903 Lamp, 14V 40mA	CEL1004 or CEL1025

SWITCH P.C. BOARD

Mark	Symbol & Description	Part No.
★★	S1, 2 Switch (MUTE, MOTOR)	ESN1001
★★	S3 Switch (TAPE/TUNER)	HSK-126

P.C. BOARD UNIT

Mark	Symbol & Description	Part No.
★★	S1 Switch (FWD/REV)	ESH1001

Miscellaneous Parts List

Mark	Symbol & Description	Part No.
★★	HD1 Head (KE-4242/UC)	EPB1001
★★	HD1 Head (KE-4515/US)	EPB1002
★★	M1 Motor	EXA1013


CASSETTE MECHANISM ASSY EXPLODED VIEW
● Part List (Page 71)

KE-3232/UC			KE-4242/UC	KE-4515/US	
Mark	No.	Part No.	Part No.	Part No.	Description
	43.	ENV1016	ENV1016	ENV1024	Tape Guide
★★	60.	EPB1001	EPB1001	EPB1002	Head
	62.	ENP1003	ENP1003	ENP1007	P.C. Board

PACKING METHOD
● Part List (Page 79)

KE-3232/UC			KE-4242/UC	KE-4515/US	
Mark	No.	Part No.	Part No.	Part No.	Description
	1.	CHG1270	CHG1265	CHG1269	Carton
	2.	CXA1773	CXA1773	CXA1637	Knob Assy
★	2-2.	CAA1054	CAA1054	CAA1058	Knob
	4.	CRD1124	CRD1125	CRB1082	Owner's Manual
	12.	CHL1270	CHL1265	CHL1269	Contain Box

Service Manual

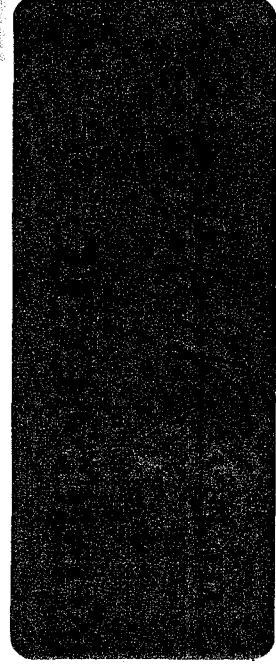

The photo shows the model KE-3232/UC.

ORDER NO.
CRT 1090

CASSETTE CAR STEREO WITH FM/AM ELECTRONIC TUNER

KE-3232

UC, ES

KE-3011

US

KE-2222

UC, ES

KE-2515

US

NOTE:

- See the separate manual CRT1094 for the cassette mechanism Assy (EXK1130).

CONTENTS

1. SPECIFICATIONS	1	13. CONNECTION DIAGRAM (KE-2222/UC)	40
2. CONNECTION	2	14. SCHEMATIC CIRCUIT DIAGRAM (KE-2515/US)	44
3. BLOCK DIAGRAM	4	15. CONNECTION DIAGRAM (KE-2515/US)	48
4. LEVEL DIAGRAM	8	16. SCHEMATIC CIRCUIT DIAGRAM (KE-3232/ES)	52
5. OPERATION	9	17. CONNECTION DIAGRAM (KE-3232/ES)	56
6. DISASSEMBLY	12	18. SCHEMATIC CIRCUIT DIAGRAM (KE-2222/ES)	60
7. ADJUSTMENT	14	19. CONNECTION DIAGRAM (KE-2222/ES)	64
8. SCHEMATIC CIRCUIT DIAGRAM (KE-3232/UC)	20	20. EXPLODED VIEW	68
9. CONNECTION DIAGRAM (KE-3232/UC)	24	21. CASSETTE MECHANISM ASSY EXPLODED VIEW	71
10. SCHEMATIC CIRCUIT DIAGRAM (KE-3011/US)	28	22. ELECTRICAL PARTS LIST	74
11. CONNECTION DIAGRAM (KE-3011/US)	32	23. PACKING METHOD	79
12. SCHEMATIC CIRCUIT DIAGRAM (KE-2222/UC)	36		

PIONEER ELECTRONIC CORPORATION

4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A. TEL: (213) 420-5700
PIONEER ELECTRONIC (EUROPE) N.V. Keetberglaan 1, 2740 Beveren, Belgium TEL: 03/776.28.08
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia
TEL: (03) 580-9911

1094

FT©NOV. 1986 Printed in Japan

1. SPECIFICATIONS

General

Power source	14.4V DC (10.8 — 15.6V allowable)
Grounding system	Negative type
Max. Current consumption	
(KE-3232/UC, ES, 3011/US)	2.5A
(KE-2222/UC, ES, 2515/US)	1.8A
Dimensions (chassis)	170(W) x 50(H) x 130(D)mm
(nose)	[6-3/4(W) x 2H x 5-1/8(D)in.]
	[4-1/8(W) x 1-5/8(H) x 1-3/8(D)in.]
Shaft interval	130 or 147mm [5-1/8 or 5-3/4in.]

Weight

(KE-3232/UC, ES, 3011/US)	1.5kg (3.3lbs)
(KE-2222/UC, ES, 2515/US)	1.4kg (3.1lbs)

Amplifier

Continuous power output is 3.2W per channel min. into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.

Maximum power output	8.5W x 2/7W x 4 (EIAJ)
	(KE-2515/US) 8.5W x 2 (EIAJ)
Continuous power output (KE-3232/ES)	
.	4.5W x 2/3.5W x 4 (1%dist. at 1kHz)
Continuous power output (KE-2222/ES)	
.	4.5W x 2 (1% dist. at 1kHz)

Load impedance

(KE-3232/UC, ES, 3011/US)	4 Ω (4—8 Ω allowable)
(KE-2222/UC, ES, 2515/US)	4 Ω (2—8 Ω allowable)

Maximum output level/output impedance (RCA)

(KE-3232/UC)	500mV/100 Ω
Tone controls (bass) (KE-3232/UC, ES)	\pm 10dB (100Hz)
(treble) (KE-3232/UC, ES)	\pm 10dB (10kHz)
Loudness countour	+8dB (100Hz) (Volume: —30dB)
Loudness countour (KE-3232/ES, 2222/ES)	
.	+12dB (100Hz), +7dB (10kHz) (Volume: —30dB)

Tape player

Tape	Compact cassette tape (C-30 — C-90)
Tape speed	4.76cm/sec. (+0.14cm/sec., —0.05cm/sec.)
Fast forward/rewind time	Approx. 100sec. for C-60
Wow & flutter	0.13% (WRMS)

Frequency response (KE-3232/UC, ES, 3011/US)

.	Metal: 50 — 17,000 Hz (\pm 3dB)
	Normal: 50 — 14,000Hz (\pm 3dB)
Frequency response (KE-2222/UC, ES, 2515/US)	
.	50 — 14,000Hz (\pm 3dB)

Stereo separation.

. 45dB

Signal-to-noise ratio

(KE-3232/UC, 2222/UC, 3011/US, 2515/US)	
.	52dB (IHF-A network)
(KE-3232/ES, 2222/ES)	52dB (IEC-A network)

FM tuner

Frequency range	
(KE-3232/UC, 3011/US, 2222/UC, 2515/US)	
.87.9 — 10.79MHz
(KE-3232/ES, 2222/ES)87.5 — 108MHz
Usable sensitivity.	12dBf (1.1 μ V/75 Ω , mono)
50dB quieting sensitivity	17dBf (1.9 μ V/75 Ω , mono)
Signal-to-noise ratio	
(KE-3232/UC, 2222/UC, 3011/US, 2515/US)	
.	70dB (IHF-A network)
Signal-to-noise ratio (KE-3232/ES, 2222/ES)	
.	70dB (IEC-A network)
Distortion0.3% (at 65dBf, 1kHz, stereo)
Frequency response.50 — 15,000 Hz (\pm 3dB)
Stereo separation.	35dB (at 65dBf, 1kHz)
AM tuner (KE-3232/UC, 2222/UC, 3011/US, 2515/US)	
Frequency range	530 — 1,620kHz
Usable sensitivity.	18 μ V (25dB) (S/N: 20dB)
Selectivity	50dB (\pm 10kHz)
AM tuner (KE-3232/ES, 2222/ES)	
Frequency range (Initial setting).	531 — 1,602kHz
(New setting).	530 — 1,620kHz
Usable sensitivity.	18 μ V (25dB) (S/N: 20dB)
Selectivity (Initial setting).	50dB (\pm 9kHz)
(New setting).	50dB (\pm 10kHz)

These specifications were determined and are presented in accordance with specification standards established by the Ad Hoc Committee of Car Stereo Manufacturers.

Note:

Specifications and the design are subject to possible modification without notice due to improvements.

2. CONNECTION

Note:

- To avoid shorts in the electrical system, be sure to disconnect the battery ⊖ cable before beginning installation.
- Replace fuses only with the types stipulated on the fuse holder.
- Be sure to properly connect the color coded leads. Failure to do so can cause malfunctions.
- Cover unused terminals with tape to prevent electrical shorts. (KE-3232)
- Refer to the power amp owner's manual when connecting a power amp (sold separately) to the pin jack.
- When using a separately available power amp with RCA terminal in a 4-speaker system with fader control capabilities, connect the brown leads from this unit to the green and gray output leads of this unit. (KE-3232)

Black (ground)	To vehicle (metal) body.
Blue	System control/Auto-antenna relay control terminal (Max. 300 mA 12 V DC).
Orange	To terminal always supplied with power regardless of ignition switch position.
Red	To electric terminal controlled by ignition switch (12 V DC) ON/OFF.

KE-3232 2-speaker system

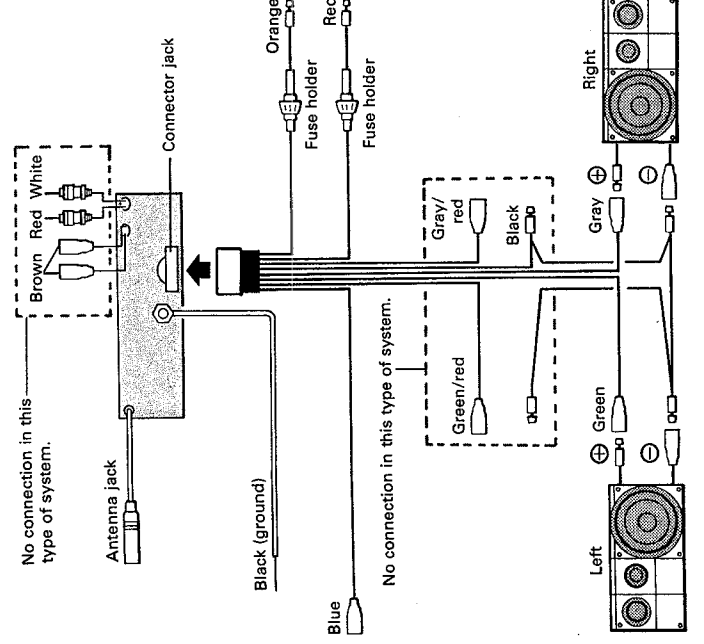


Fig. 1

KE-3232 4-speaker system 1

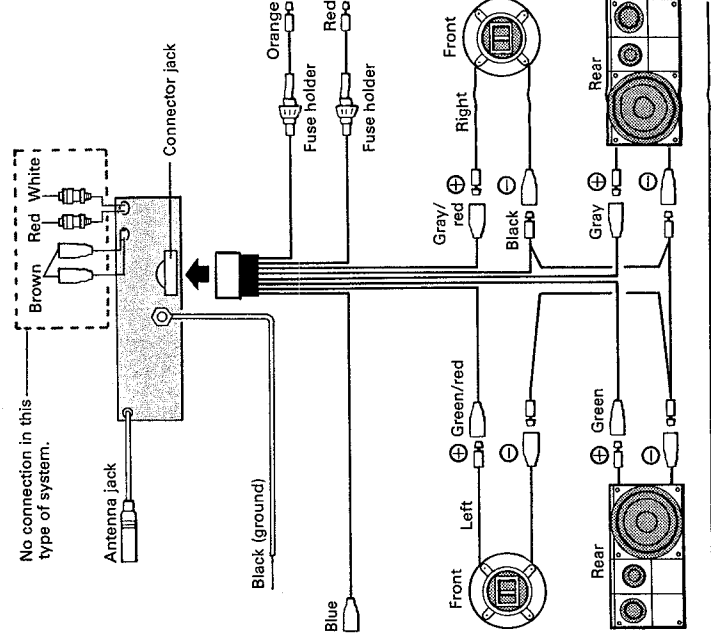


Fig. 2

3. BLOCK DIAGRAM

• KE-3232/UC

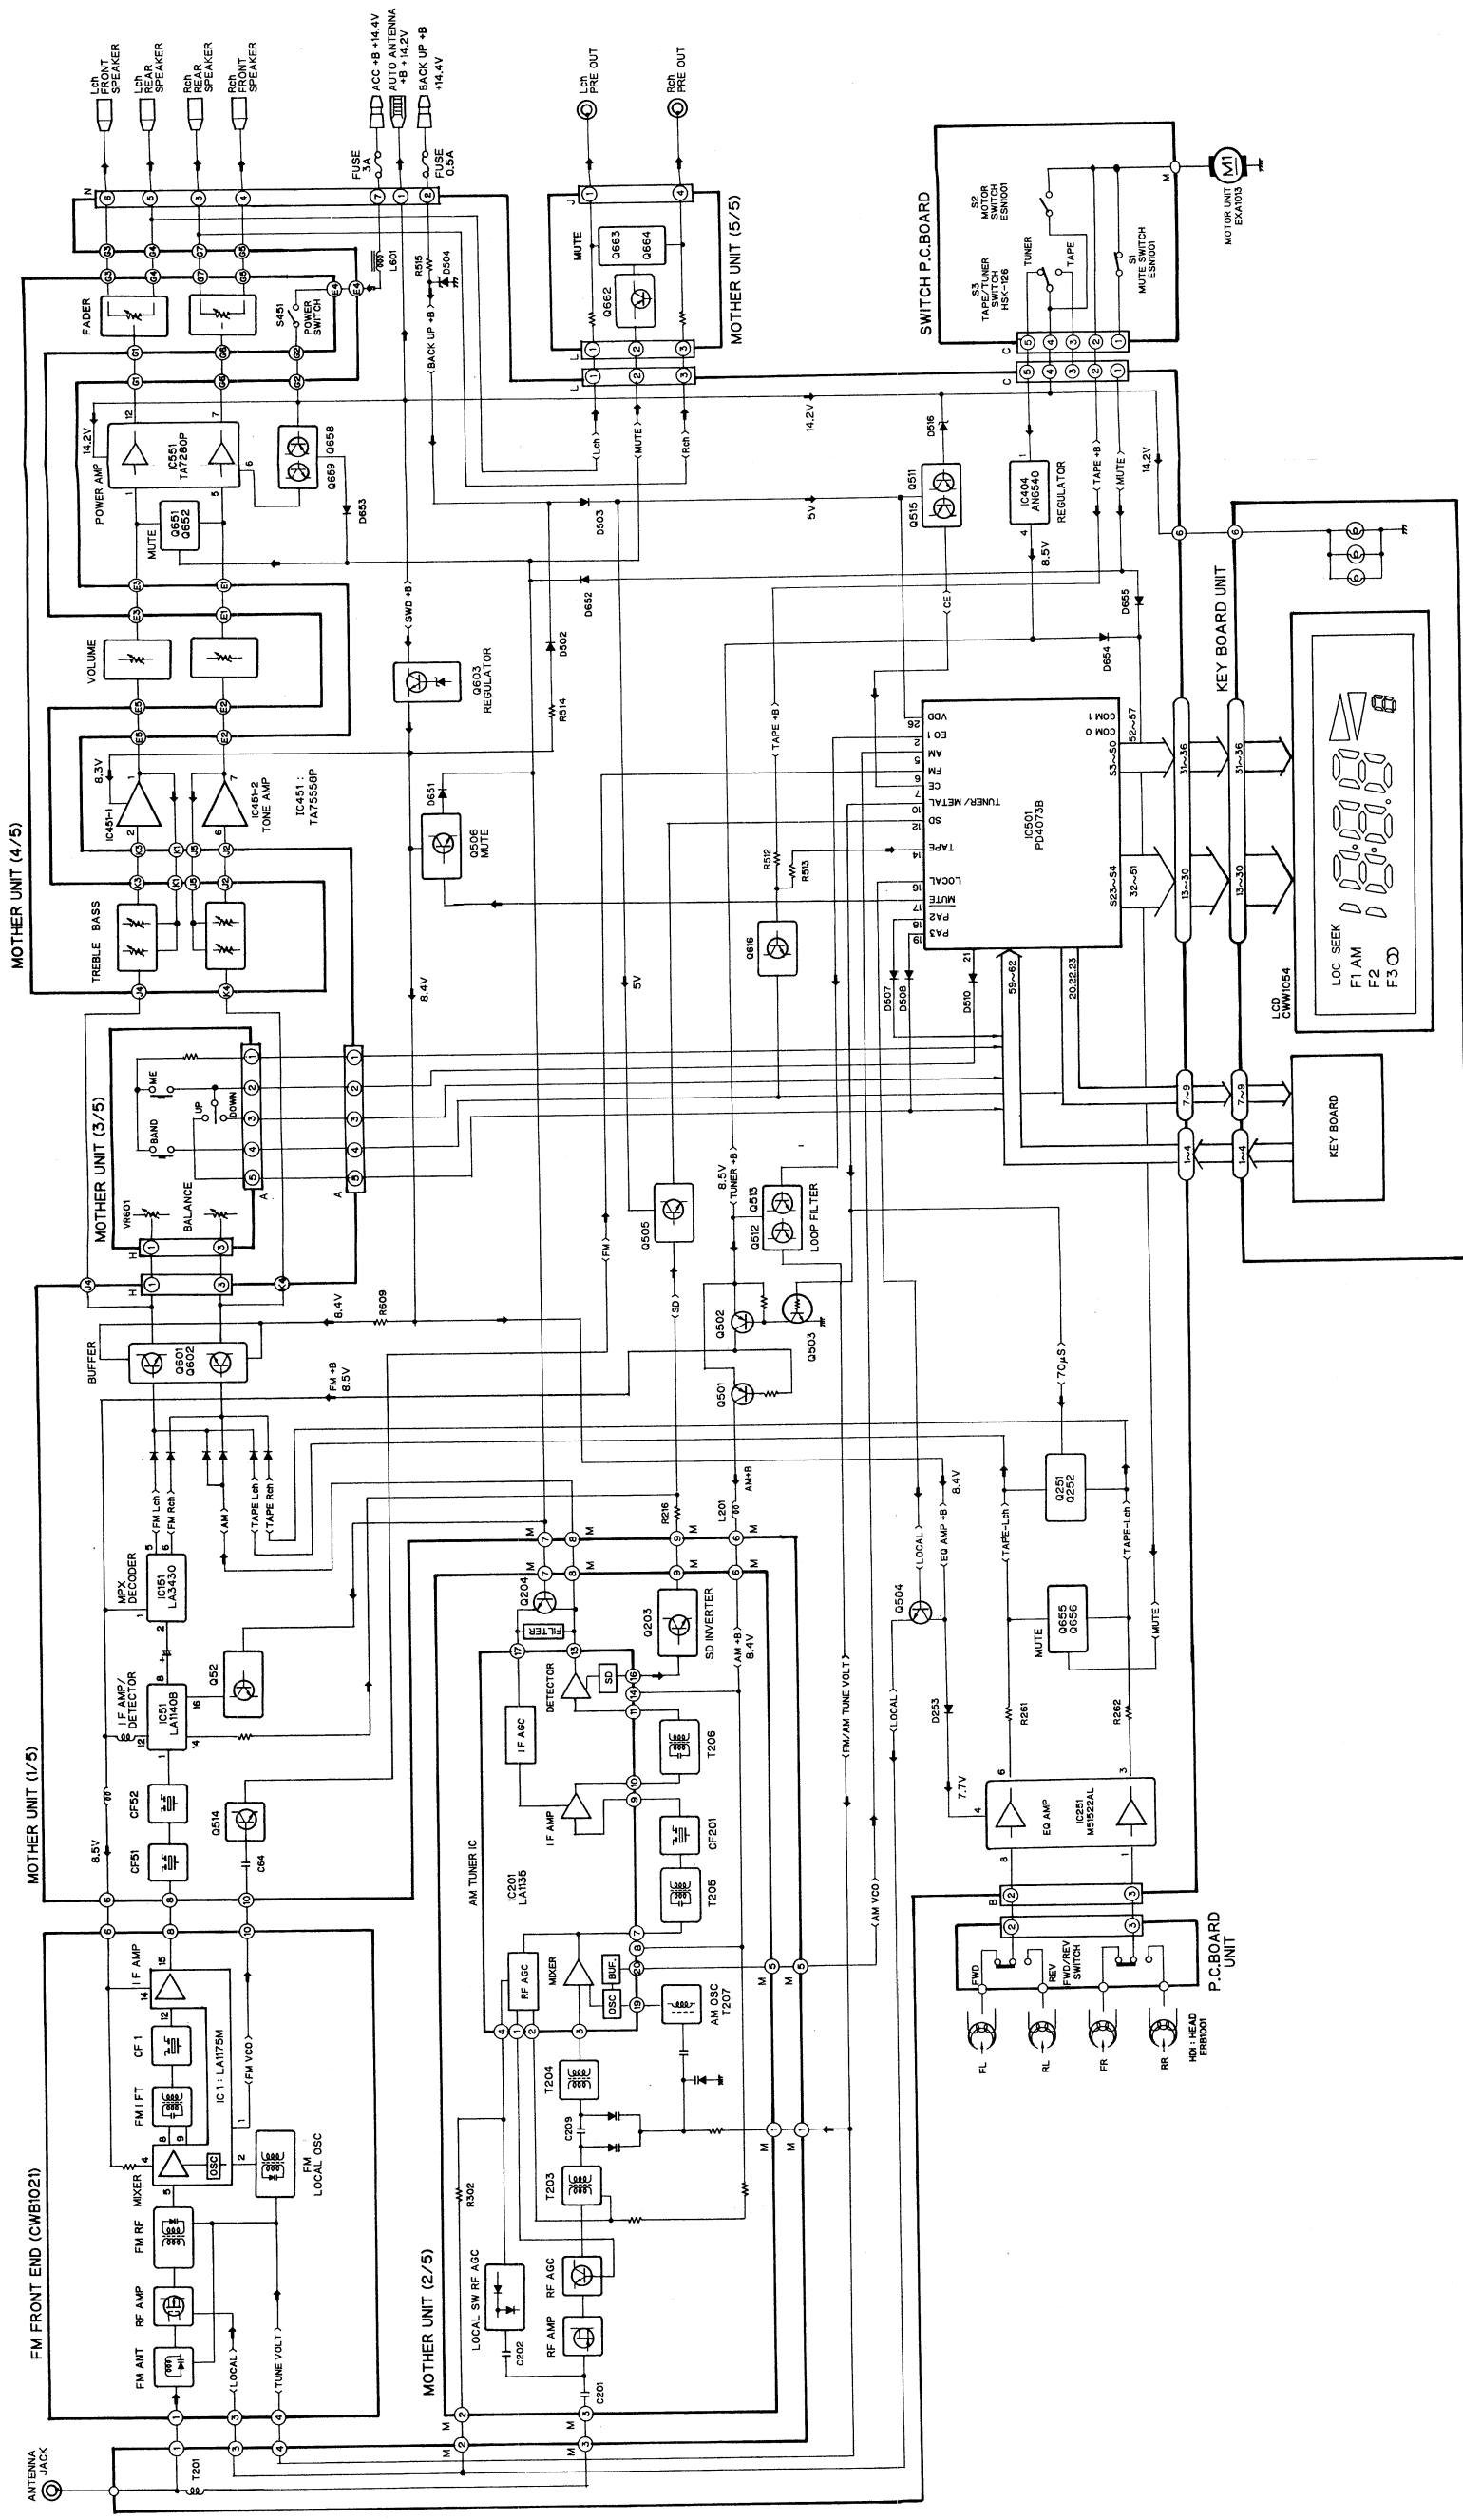


Fig. 5

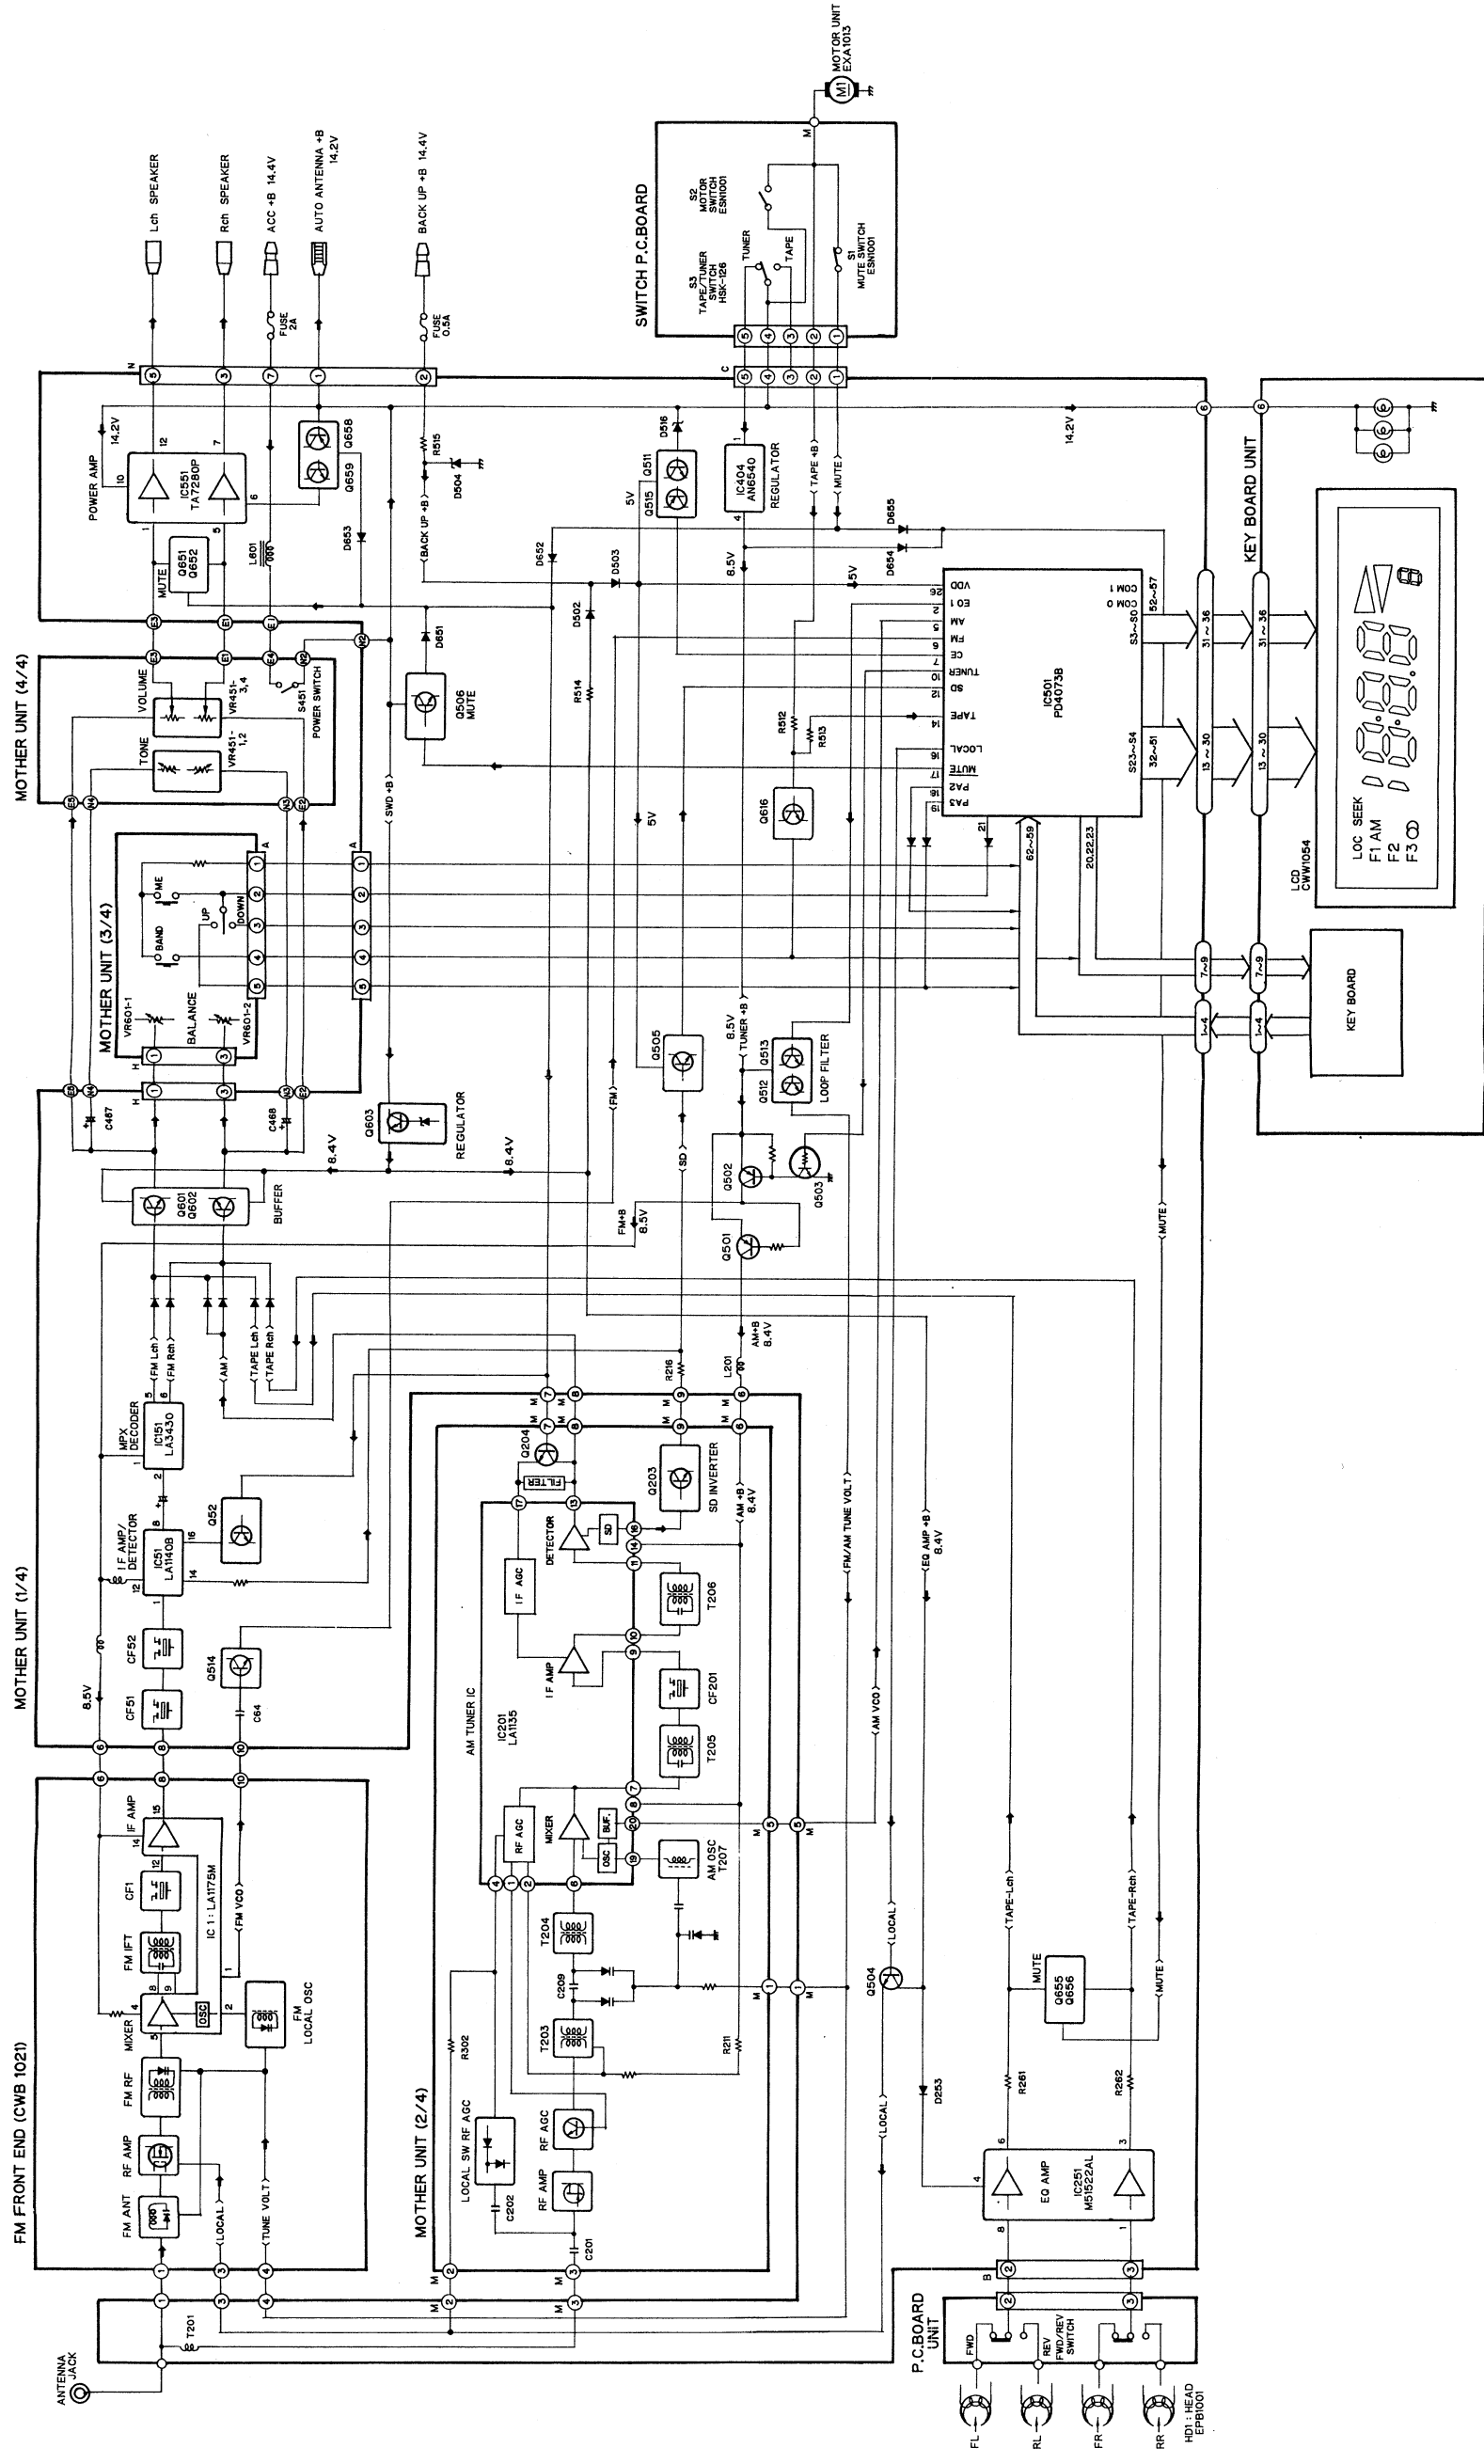


Fig. 6

4. LEVEL DIAGRAM

- KE-3232/UC, ES, 3011/US

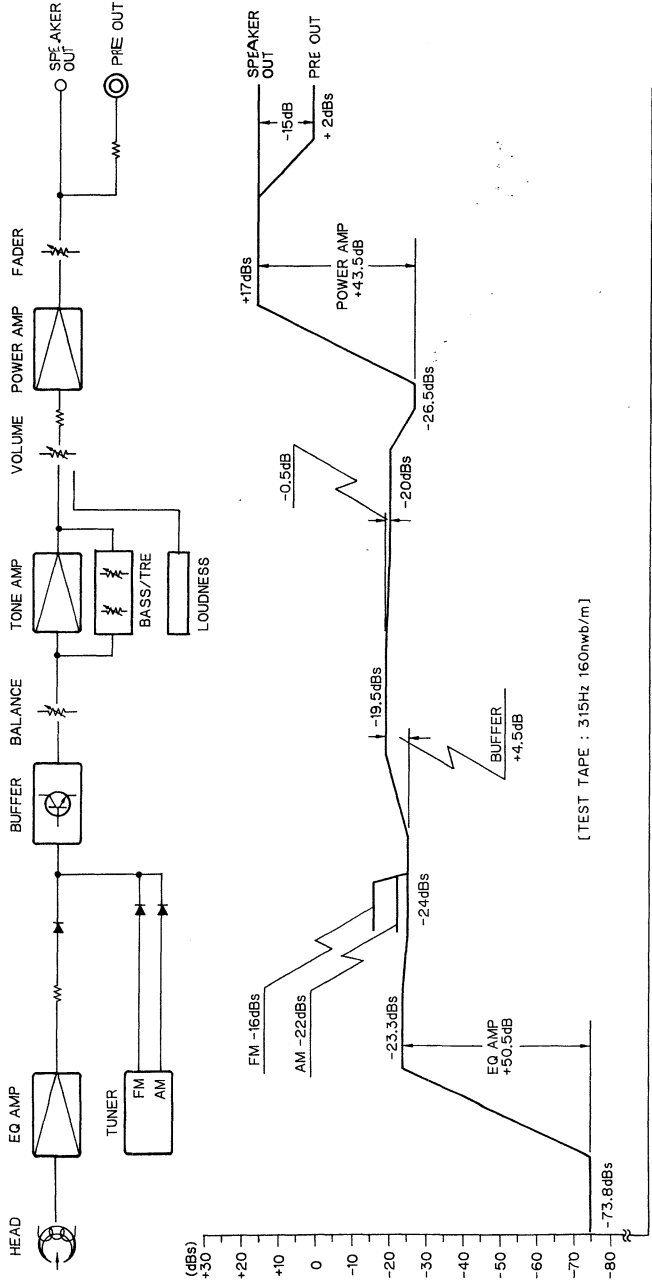


Fig. 7

- KE-2222/UC, ES, 2515/US

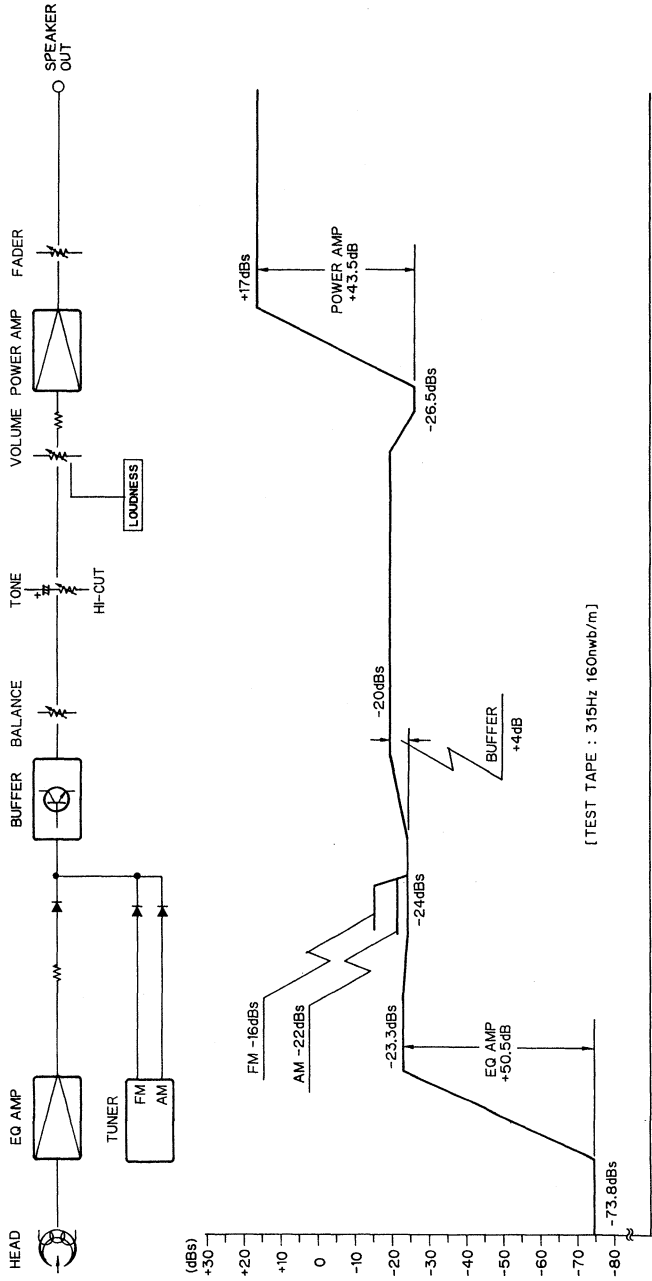


Fig. 8

5. OPERATION

• Using the Radio

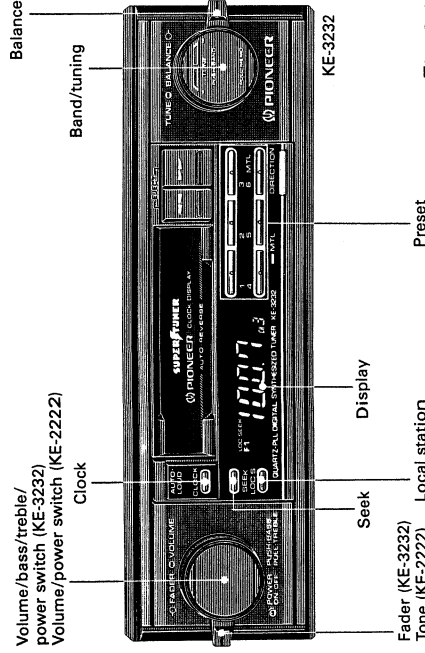


Fig. 9-1

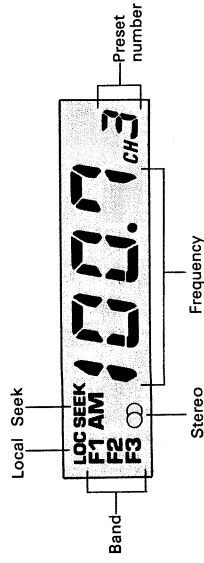


Fig. 9-2

• Local Station Switch

Pressing this switch lowers the seek tuning reception sensitivity so that only stronger signals can be tuned in. This feature is convenient when driving through areas that have numerous radio stations. When this switch is depressed, the local indicator will be illuminated on the display.

• Fader Control (KE-3232)

This control is used to adjust the balance between the front and rear speakers when using a 4-speaker system. Turning the control upwards decreases the volume of the rear speakers, while turning it downwards decreases the volume of the front speakers. With 2-speaker systems, set this control to a horizontal position.

Important

A considerable amount of sound will continue to be produced from speakers of a 4-speaker system which have been cut by setting the fader control either to the front speakers or rear speakers. This tendency is especially noticeable when an separately available amp is connected. This is normal and does not indicate malfunction.

• Auto-Loudness

When playing back a tape or listening to the radio at low volume, the low tone is automatically emphasized.

• Clock Switch

Each press causes the display to switch between clock and frequency.

• Before attempting operation...

- Reduce the volume by turning the volume control knob to the left.
- Set the fader control to the left horizontal. (KE-3232)
- 1. Turning the power switch to the right causes power to switch ON and the current frequency to appear on the display.
- 2. Press the band switch to select the band.
- 3. Press the seek button and the seek tuning indicator will be displayed.
- 4. Turn the tuning knob to the left or right to tune in the desired frequency. (Turning to the right will increase the frequency.)
- 5. Adjust the volume and balance.

KE-3232

- 6. Adjust the tone to the desired position. To adjust low tone, turn the volume knob while pressing it. For high tones, turn the volume knob after it has been pulled out until it clicks into place. Return the volume knob after adjusting the tone.

KE-2222

- 6. Adjust the tone.

• To enter a frequency into the preset memory...

- 7. Pull the tuning knob and preset number will flash. (approximately 5 seconds)
- Within 5 seconds, press one of the preset buttons (1 – 6) to enter the frequency into the memory. At this time the number of the button pressed will be displayed. Six FM1 frequencies, six FM2 frequencies, six FM3 frequencies and six AM frequencies can be entered.

Seek Tuning

Press the seek button, and tuning to the next higher or lower broadcast on the band can be accomplished automatically by simply turning the tuning knob to the left or right. FM frequencies change in 0.2 MHz steps while those in the AM band change in 10 kHz steps.

Preset Tuning

Pressing the preset button instantly tunes in the frequency programmed in the memory for that button.

Preset Scan Tuning (KE-2515/US)

Pressing the preset scan button (CH indicator flashes) causes previously stored frequencies to be tuned in sequentially for eight seconds each. Press again when the desired frequency is tuned in to cancel preset scan tuning.

Manual Tuning

When manual tuning is employed, FM frequencies change in 0.2 MHz steps while AM frequencies change in 10 kHz steps.

1. Press the seek button and the seek tuning indicator will disappear from the display.
2. Change the frequency by turning the tuning knob to the left or right. Turning the knob once will change the frequency one step (see above). Holding the tuning knob in either direction will successively change the frequency at the prescribed step.

● Using the Tape Deck

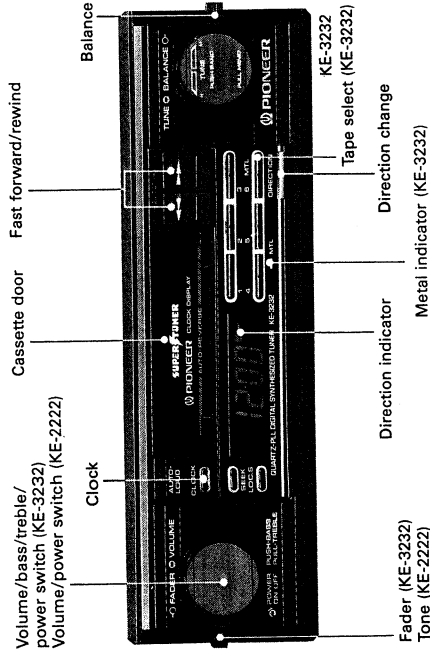


Fig. 10

● Before attempting operation...

- Reduce the volume by turning the volume control knob to the left.
- Set the fader control to the left horizontal. (KE-3232)
- 1. Turning the power switch to the right causes power to switch ON.
- 2. Loading a cassette tape into the load slot causes playback to begin automatically. At this time, the tape transport direction is noted on the display, along with the current time. The unit automatically switches to tape playback even if the radio is ON when the cassette is loaded.
- 3. Adjust the volume and balance.

KE-3232

- 4. Adjust the tone to the desired position. To adjust low tone, turn the volume knob while pressing it. For high tones, turn the volume knob after it has been pulled out until it clicks into place.

● Setting the Time

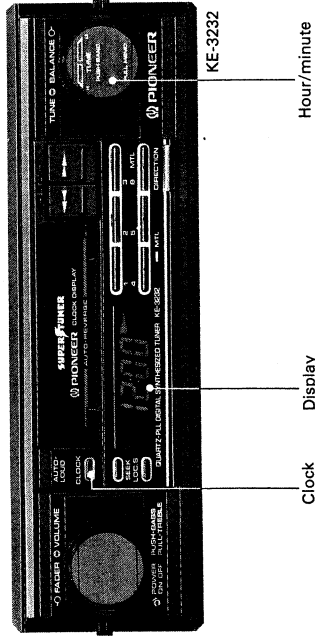


Fig. 11-1

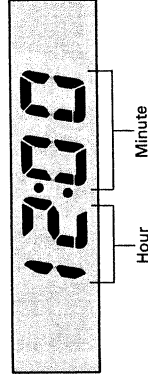


Fig. 11-2

Return the volume knob after adjusting the tone.

KE-2222

4. Adjust the tone.

5. When tape playback reaches the end of the tape, playback will automatically switch from the side being played to the opposite side (ie. Side A to Side B or vice versa) (Auto-reverse). To eject the tape during playback, simultaneously press the fast forward and rewind buttons.

- Do not try to eject the cassette immediately after insertion, as it will cause malfunction. Wait a few seconds.
- Be sure to eject the tape when the vehicle's ignition is turned OFF, leaving the tape in the unit can deform the pinch roller causing wow and flutter during tape playback.

● Fast Forward/Rewind

Since the transport can be in either direction, both the left and right high-speed tape transport buttons can be regarded as fast forward/rewind buttons.

For fast forward, press the high-speed tape transport button that corresponds to the direction that is shown by the direction indicator. When the end of the tape is reached, playback will automatically begin from the opposite side of the tape (Auto-reverse).

For rewind, press the button that is opposite that of the direction shown by the direction indicator. When the end of the tape is reached, playback will automatically begin from the beginning of the same side of the tape (Auto-replay).

Fast forward and rewind can be terminated by pressing the respective opposite high-speed tape transport button.

● Direction Change Button

This button is used to switch from one side of the tape to the other (from Side A to Side B or vice versa).

● Tape Select Switch (KE-3232)

This switch is used to switch to the proper mode for the tape being used and should be depressed when using chrome or metal tapes.

1. Press the clock switch to switch to the time display.
2. Pull the hour/minute control knob towards you and turn it to the left to advance hours. Turn to the right to advance minutes. Holding the knob in either position consecutively advances the respective hour/minute display.

- Switching the Tuning Steps (KE-3232/ES, 2222/ES)
- Tuning Step Switch

The tuning step switch is located on the bottom of the unit and is set at shipment from the factory as shown in Fig. 12-1. The setting of this switch should be changed to that shown in Fig. 12-2 for use in North America, Central America, or South America.

- Be sure to disconnect the  terminal connector from the car battery to prevent short circuits.

Specification		Initial Setting	New Setting
AM	Tuning steps	9 kHz steps	10 kHz steps
	Frequency range	531 — 1,602 kHz	530 — 1,620 kHz

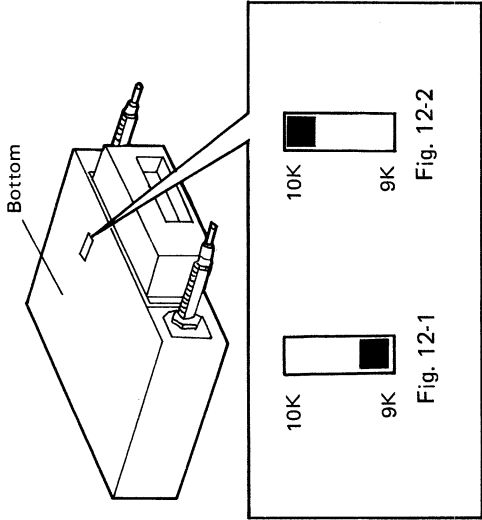


Fig. 13

6. DISASSEMBLY

- Removing the Case

1. Remove the four screws (A), and remove the Case

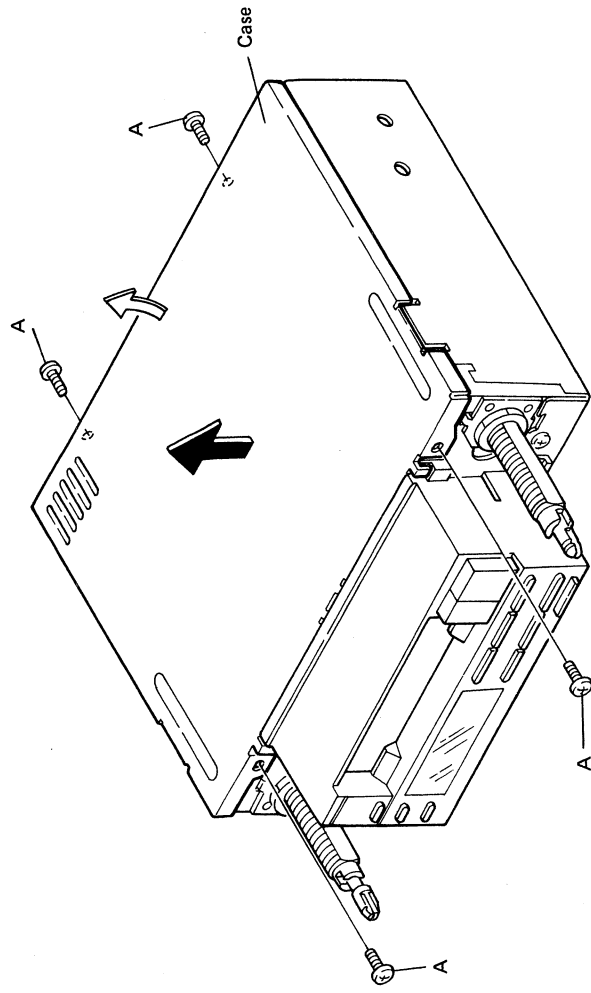


Fig. 14

- Removing the Grille Assy

1. Remove the two hooks.

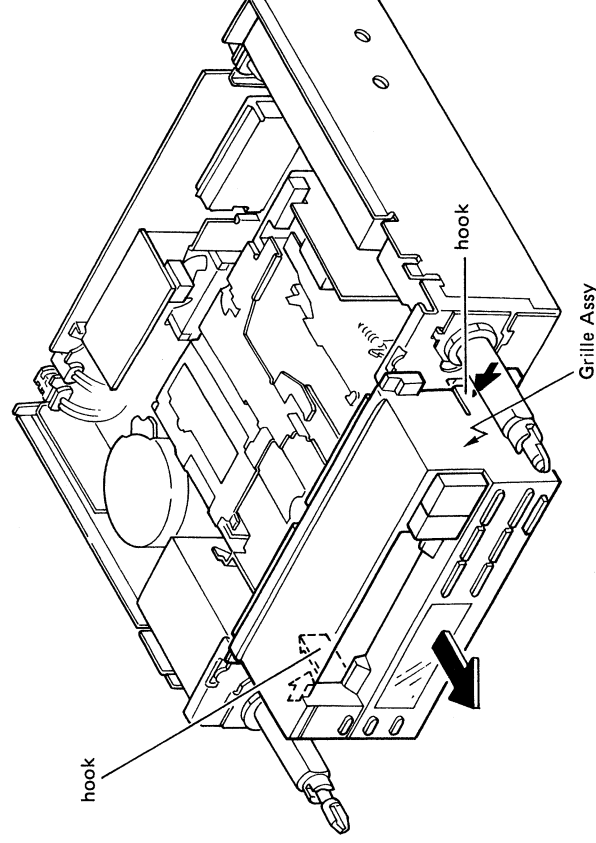


Fig. 15

- Removing the Cassette Mechanism Assy

1. Remove the Connectors (5P x 2).
2. Remove the four screws (B).

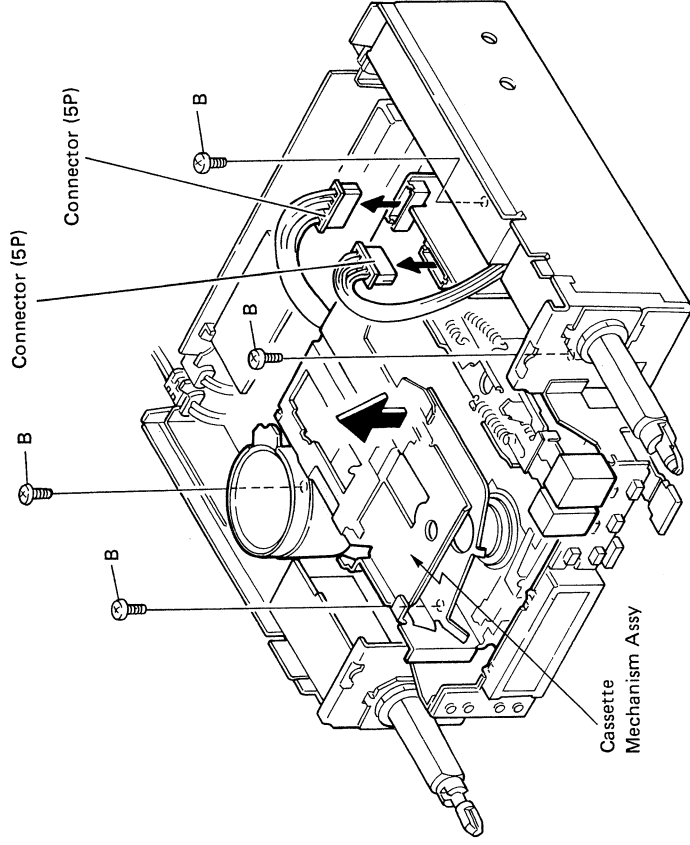


Fig. 16

- Removing the chassis Unit

1. Remove the five screws (C).
2. Stretch the claw.

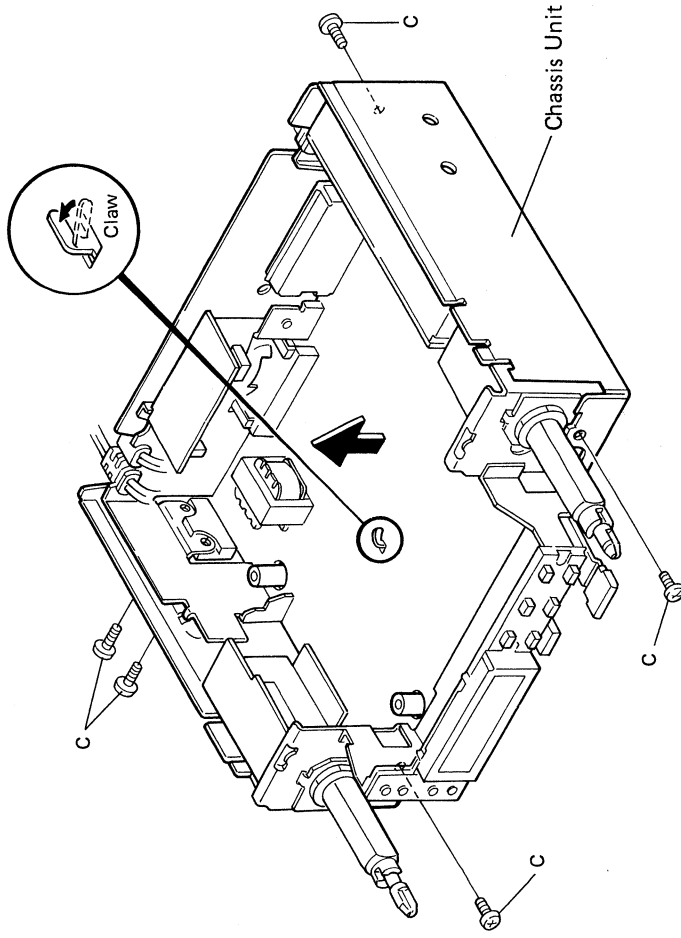


Fig. 17

7. ADJUSTMENT

7.1 HEAD AZIMUTH ADJUSTMENT

- Connection Diagram

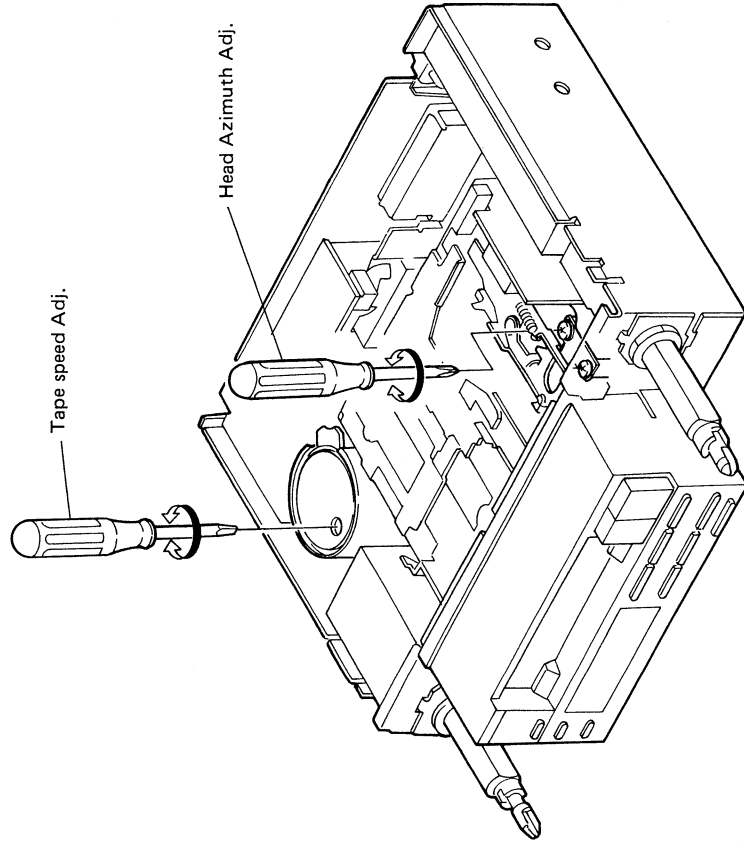


Fig. 18

- To Adjust

1. Play "A" side of STD-341A (10kHz, -20dB). Adjust each screw for maximum output in forward and reverse directions.
2. Play "B" side in forward and reverse directions to confirm adjustment.

7.2 TAPE SPEED ADJUSTMENT

- Connection Diagram (shown in Fig. 18)


- To adjust

1. Reproduce STD-301 (3kHz, -10dB). Adjust the semi-fixed resistor so that the frequency counter shows 3,010Hz (+30Hz, -30Hz).

7.3 FM IF ADJUSTMENT

● Connection Diagram

NOTICE:
Select C1 so that total capacity of 80pF is attained from the direction of the receiver jack.
Z: Output impedance of SSG.

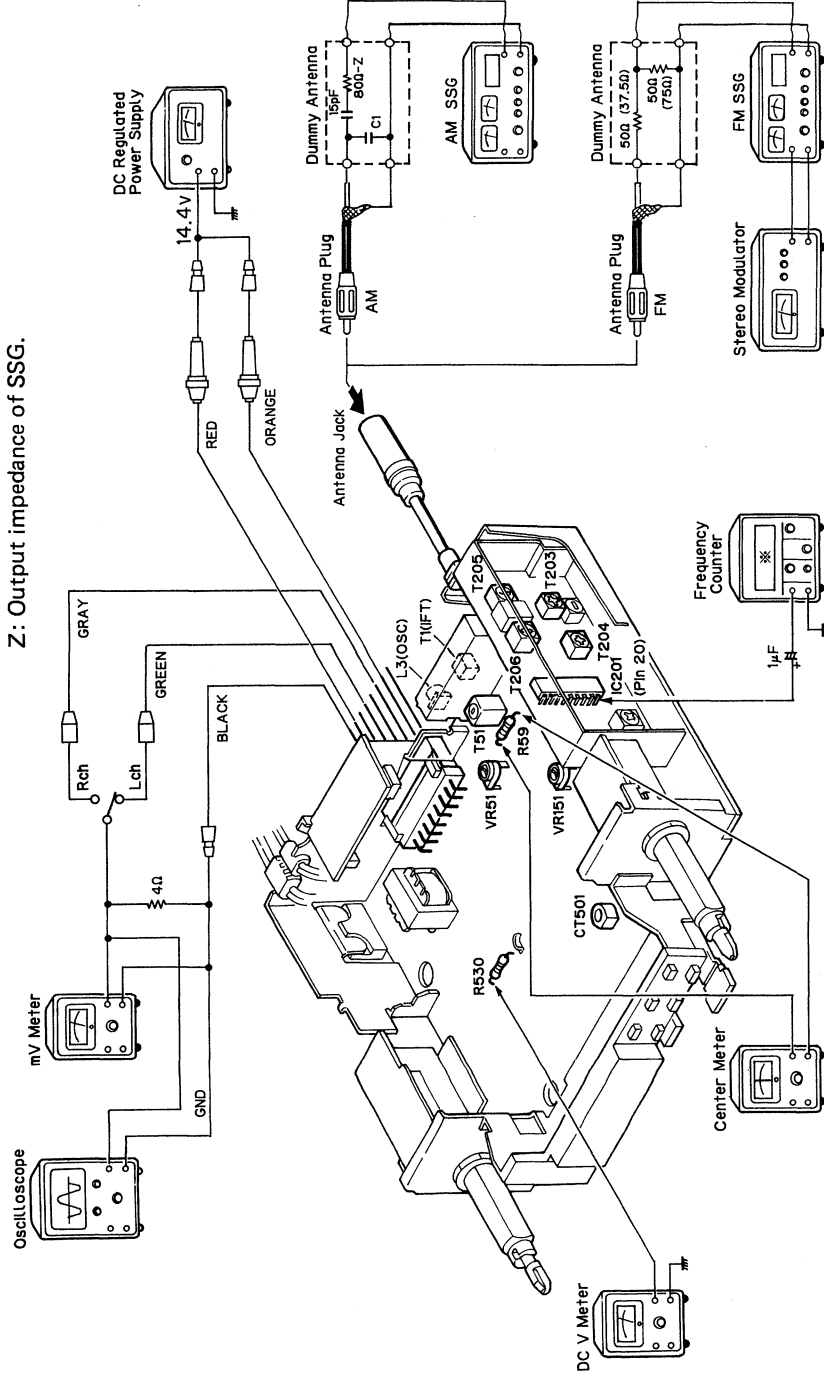

* 2070kHz: KE-3232/UC, 3011/US, 2222/UC, 2515/US
2052kHz: KE-3232/ES, 2222/ES

Fig. 19

● To Adjust

1. Apply a signal of 98.1MHz, 400Hz, 100% modulation and 60dB (μV) from the FM SSG and tuner 98.1MHz.
2. Adjust T51 to make the center meter show 0.

7.4 AUTO LEVEL ADJUSTMENT

● Connection Diagram (Shwon in Fig. 19)

● To Adjust

1. Set SSG at 98.1MHz and tune using the tuning button.
2. Set SSG to an output level of 35 dB (μV), and adjust VR151 to a separation of 5 dB (between the right and left channels).

7.5 FM SCAN SENSITIVITY

● Connection Diagram (Shown in Fig. 19)

● To Adjust

1. Turn off the Local Station Seek switch.
2. Add a 98.1MHz (400Hz, 100% modulation) output level 25dB (μV) signal from the SSG.
3. Push the SEEK button, and adjust VR51 so that the SEEK stops.
4. Set the SSG output level to 14dB (μV). And check to make sure that the SEEK doesn't stop.
5. Push the Local Station Seek switch and set it to Loc.S.
6. Check to make sure that the SEEK stops when the SSG output level is 47 ±10dB (μV).
7. If it is not within specifications, repeat the procedure starting at step one.

7.6 AM (MW) TRACKING ADJUSTMENT

- Connection Diagram (shown in Fig. 19)

- To Adjust (KE-3232/ES, 2222/ES)

Frequency of AM SSG	Displayed Frequency	Adjusting Point	DC V Meter	mV Meter
1.	1,602 kHz	For Conformation only	Less than 7.4V	
2.	531 kHz	For Conformation only	More than 0.7V	
3. 603 kHz (400 Hz, 30% modulation) output level 25 dB (μV)	603 kHz	T203, T204 T205, T206		Maximum output
603 kHz 4. 999 kHz (400 Hz, 30% modulation) 1,395 kHz output level 35 dB (μV)	603 kHz 999 kHz 1,395 kHz	For Conformation Only		The difference between the maximum and minimum output levels at 603 kHz, 999 kHz, and 1,395 kHz must be 6 dB or less.

- To Adjust (KE-3232/UC, 3011/US, 2222/UC, 2515/US)

Frequency of AM SSG	Displayed Frequency	Adjusting Point	DC V Meter	mV Meter
1.	1,620 kHz	For Conformation only	Less than 7.4V	
2.	530 kHz	For Conformation only	More than 0.7V	
3. 600 kHz (400 Hz, 30% modulation) output level 25 dB (μV)	600 kHz	T203, T204 T205, T206		Maximum output
600 kHz 4. 1,000 kHz (400 Hz, 30% modulation) 1,400 kHz output level 35 dB (μV)	600 kHz 1,000 kHz 1,400 kHz	For Conformation Only		The difference between the maximum and minimum output levels at 600 kHz, 1,000 kHz, and 1,400 kHz must be 6 dB or less.

7.7 FM TRACKING ADJUSTMENT

- Connection Diagram (shown in Fig. 19)

- To Adjust (KE-3232/ES, 2222/ES)

Frequency of FM SSG	Displayed Frequency	Adjusting Point	DC V Meter	mV Meter
1.	108 MHz	L3	Less than 7.4V	
2.	87.5 MHz		More than 1.6V	
3. 98.1 MHz (400Hz, 100% modulation) output level 5 ~ 10 dB (μV)	98.1MHz	T1		Maximum output

- To Adjust (KE-3232/UC, 3011/US, 2222/UC, 2515/US)

Frequency of FM SSG	Displayed Frequency	Adjusting Point	DC V Meter	mV Meter
1.	107.9 MHz	L3	Less than 7.4V	
2.	87.9 MHz		More than 1.6V	
3. 98.1 MHz (400 Hz, 100% modulation) output level 5 ~ 10 dB (μV)	98.1 MHz	T1		Maximum output

7.8 REFERENCE OSCILLATION FREQUENCY ADJUSTMENT

- Connection Diagram (shown in Fig. 19)

- To Adjust (KE-3232/UC, 3011/US, 2222/UC, 2515/US)

1. Set the AM position.
2. Set the LCD display to 1620KHz.
3. Adjust CT501 so that the frequency counter display becomes 2070kHz ±40Hz.

- To Adjust (KE-3232/ES, 2222/ES)


1. Set the AM position.
2. Set the LCD display to 1602KHz.
3. Adjust CT501 so that the frequency counter display becomes 2052kHz ±40Hz.

ICs and Transistors

2SK435



2SD667

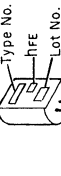


2SC2060




2SD1468S
2SA933S




2SC1740S
2SA1150
2SC2458
2SA1048
2SC3113

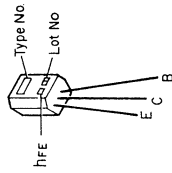

2SC2498
2SC2026

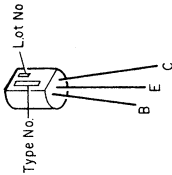


3SK181

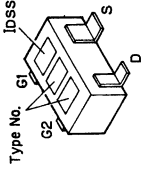


FM FRONT END

IC1: LA1175M

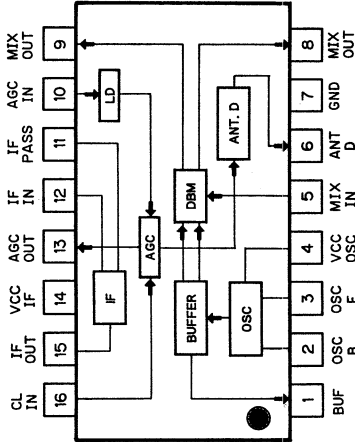


IC51: LA1140B

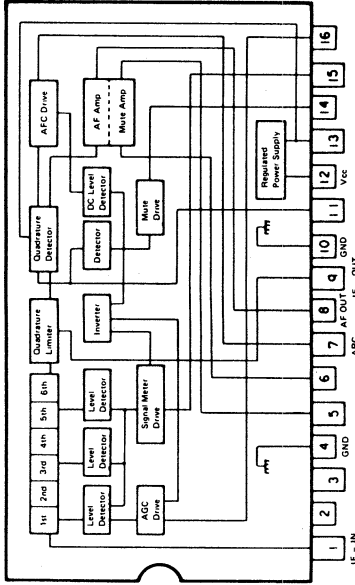


MOTHER UNIT


IC201: LA1135

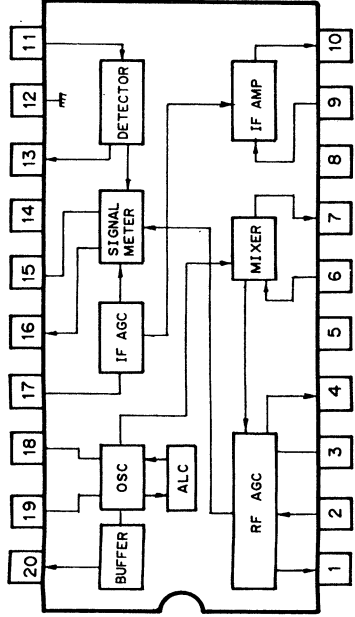


IC251: M51522AL

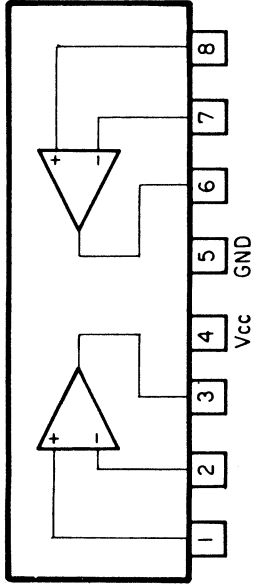


IC404: AN6540

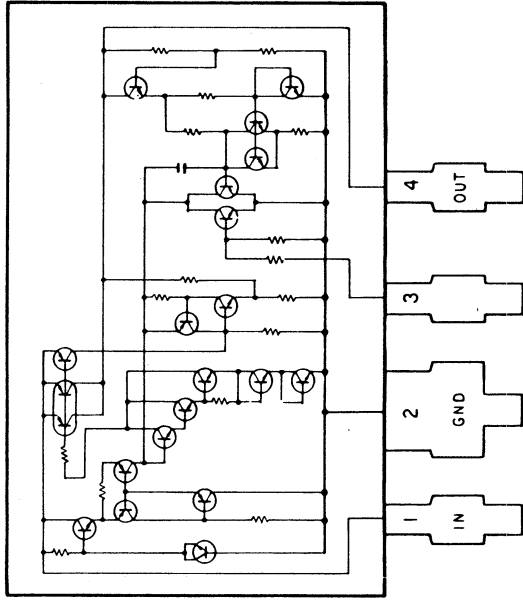


IC451: TA75558P

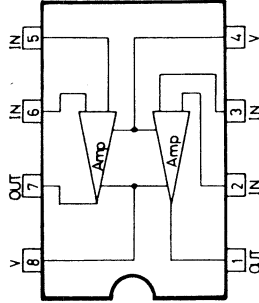

IC551: TA7280P

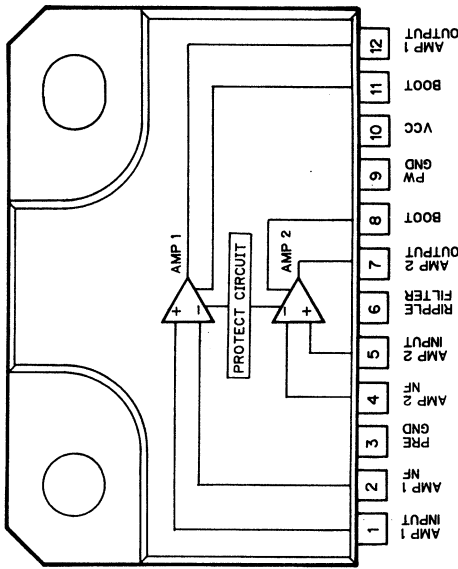


IC/51: LA3430

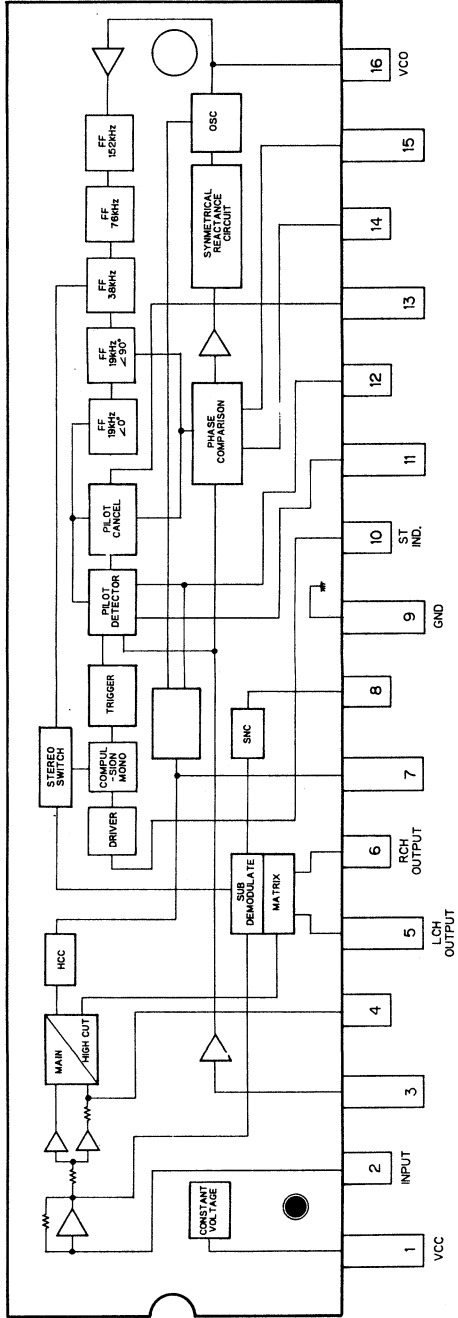

IC's marked by * are MOS type.
Be careful in handling them because they are very liable to be damaged by electrostatic induction.

*IC501: PD4073B

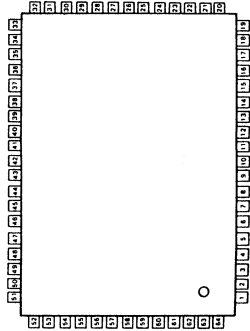

20




9. CONNECTION DIAGRAM (KE-3232/UC)


FM FRONT END IC1

1	2	3	4	5	6	7	8	9
1.6V	2.3V	1.7V	8.3V	3.6V	0V	0V	8.5V	8.5V
10	11	12	13	14	15	16	17	18
1.1V	3.0V	3.0V	8.4V	8.5V	5.4V	0V		


P.C. BOARD

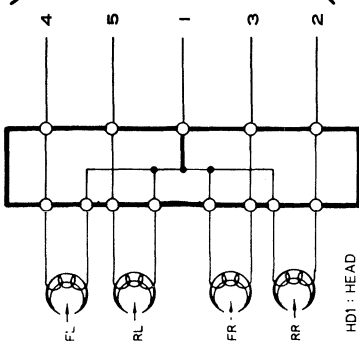

P.C. BOARD UNIT

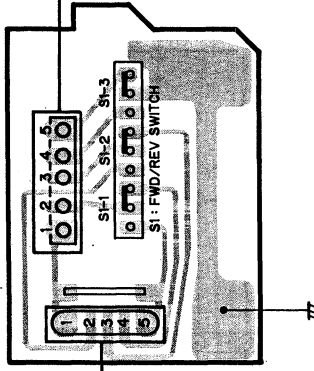

FM FRONT END (CWBI021)

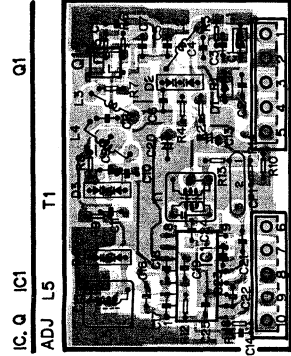


ANTENNA JACK


MOTHR UNIT (1/5)

MOTHR UNIT (1/5)


IC251 Q504	Q656 Q655	Q509 Q516 Q503 Q506 Q502 Q501 Q505	IC151	IC51 Q51 Q54
IC1 Q251 Q252	ADJ	T201	VR151	CT1501 T51

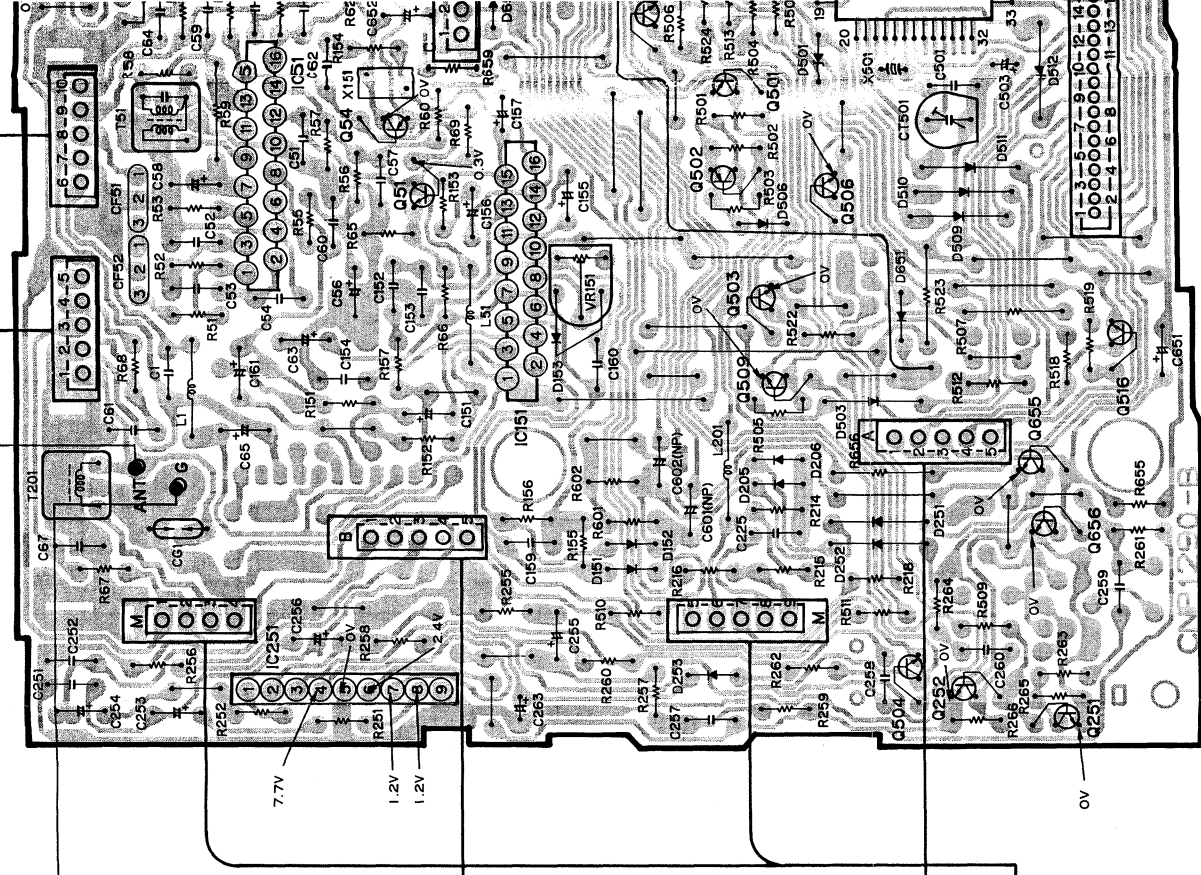

MOTHER UNIT (3/5)

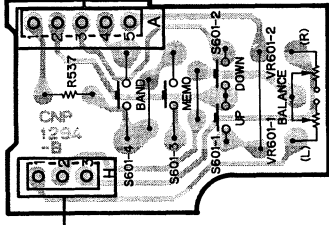

MOTHER UNIT (2/5)

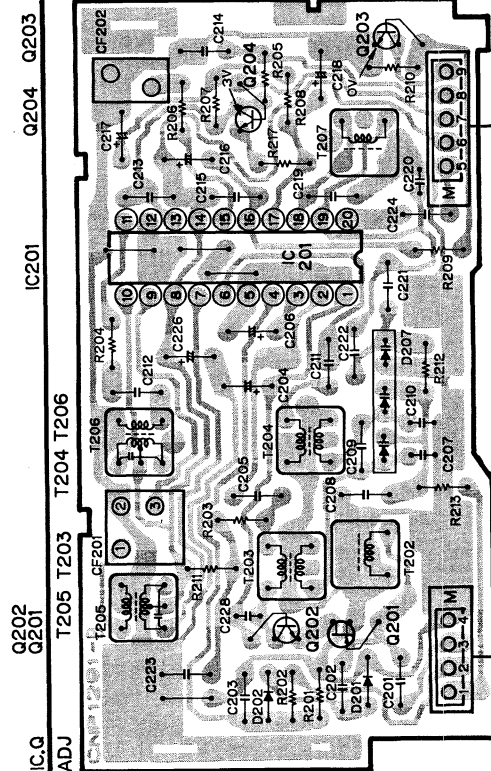

KEY BOARD UNIT

MOTHER UNIT (2/5) IC201


1	2	3	4	5	6	7	8	9	10
1.7V	2.1V		1.2V	0V	2.1V	8.4V	8.4V	0.8V	8.4V
11	12	13	14	15	16	17	18	19	20
0.7V	0V	3.0V		1.3V	6.6V	3.1V	5.7V	5.8V	3.1V

MOTHER UNIT (1/5) IC51

MOTHER UNIT (1/5) IC51

1	2	3	4	5	6	7	8
2.6V	2.6V		0V	2.0V	0V		4.9V
9	10	11	12	13	14	15	16
4.9V	0V	4.9V		4.9V	3.7V	0.3V	4.1V

10. SCHEMATIC CIRCUIT DIAGRAM (KE-3011/US)

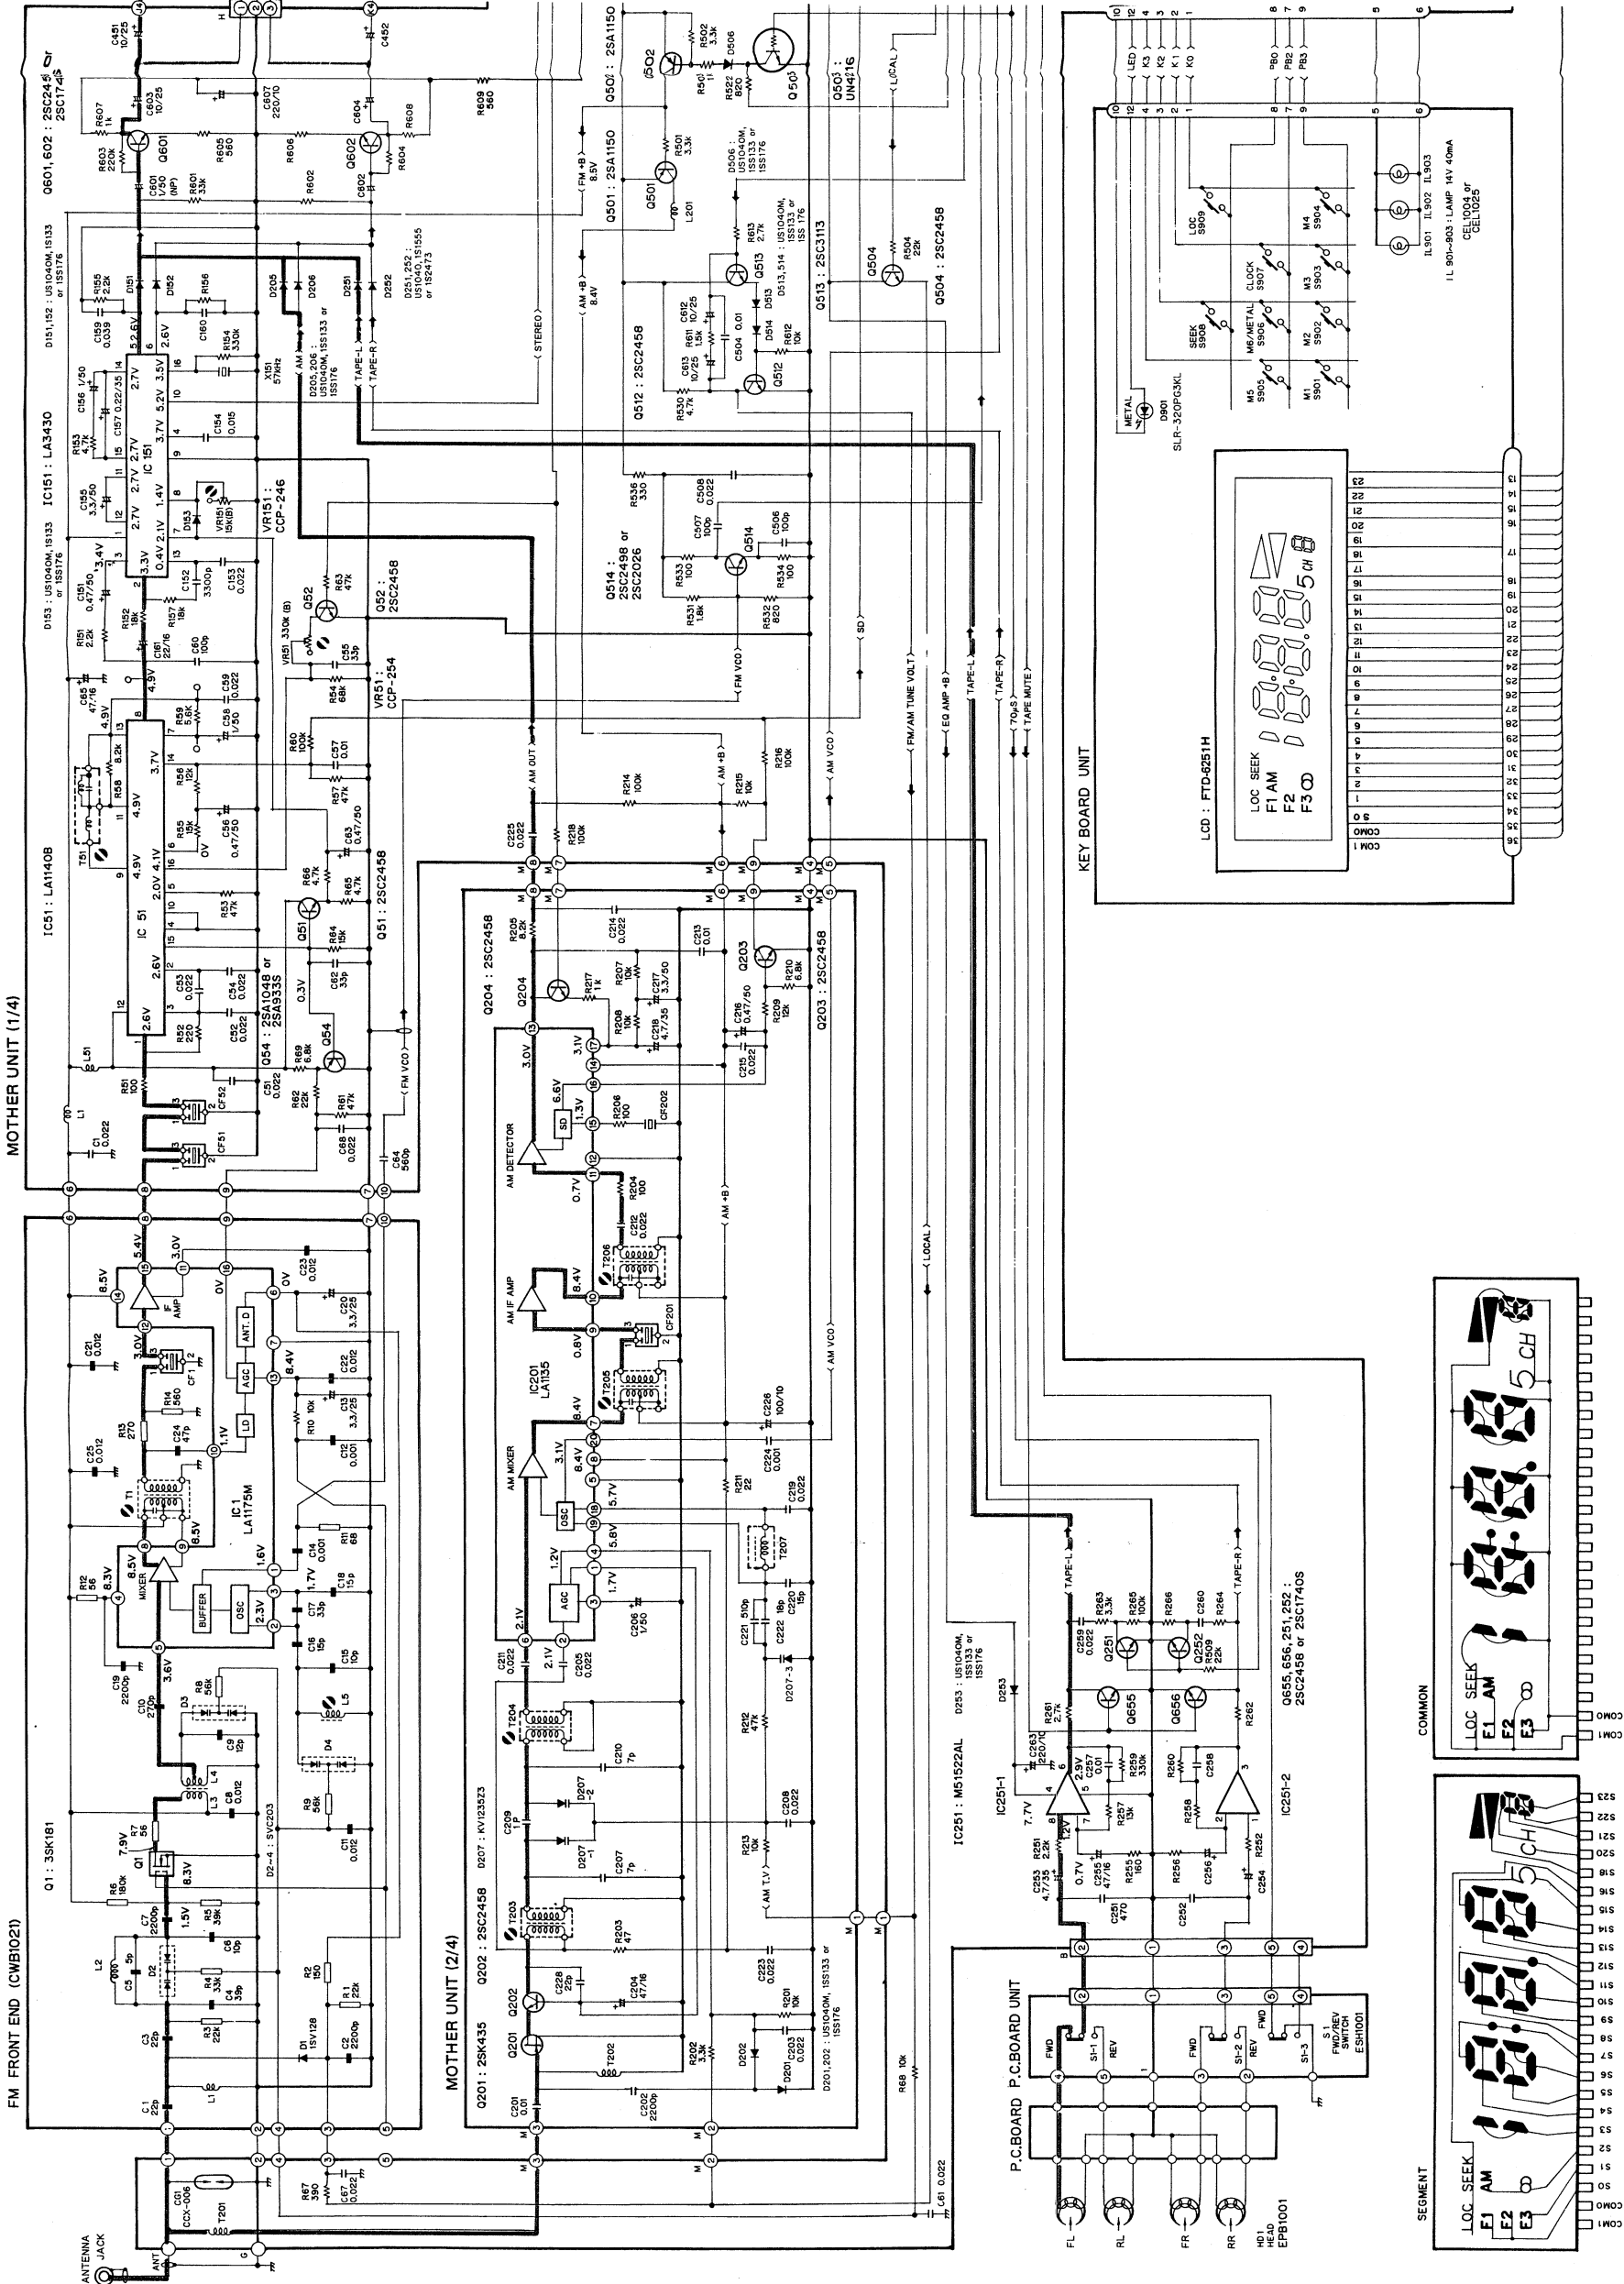

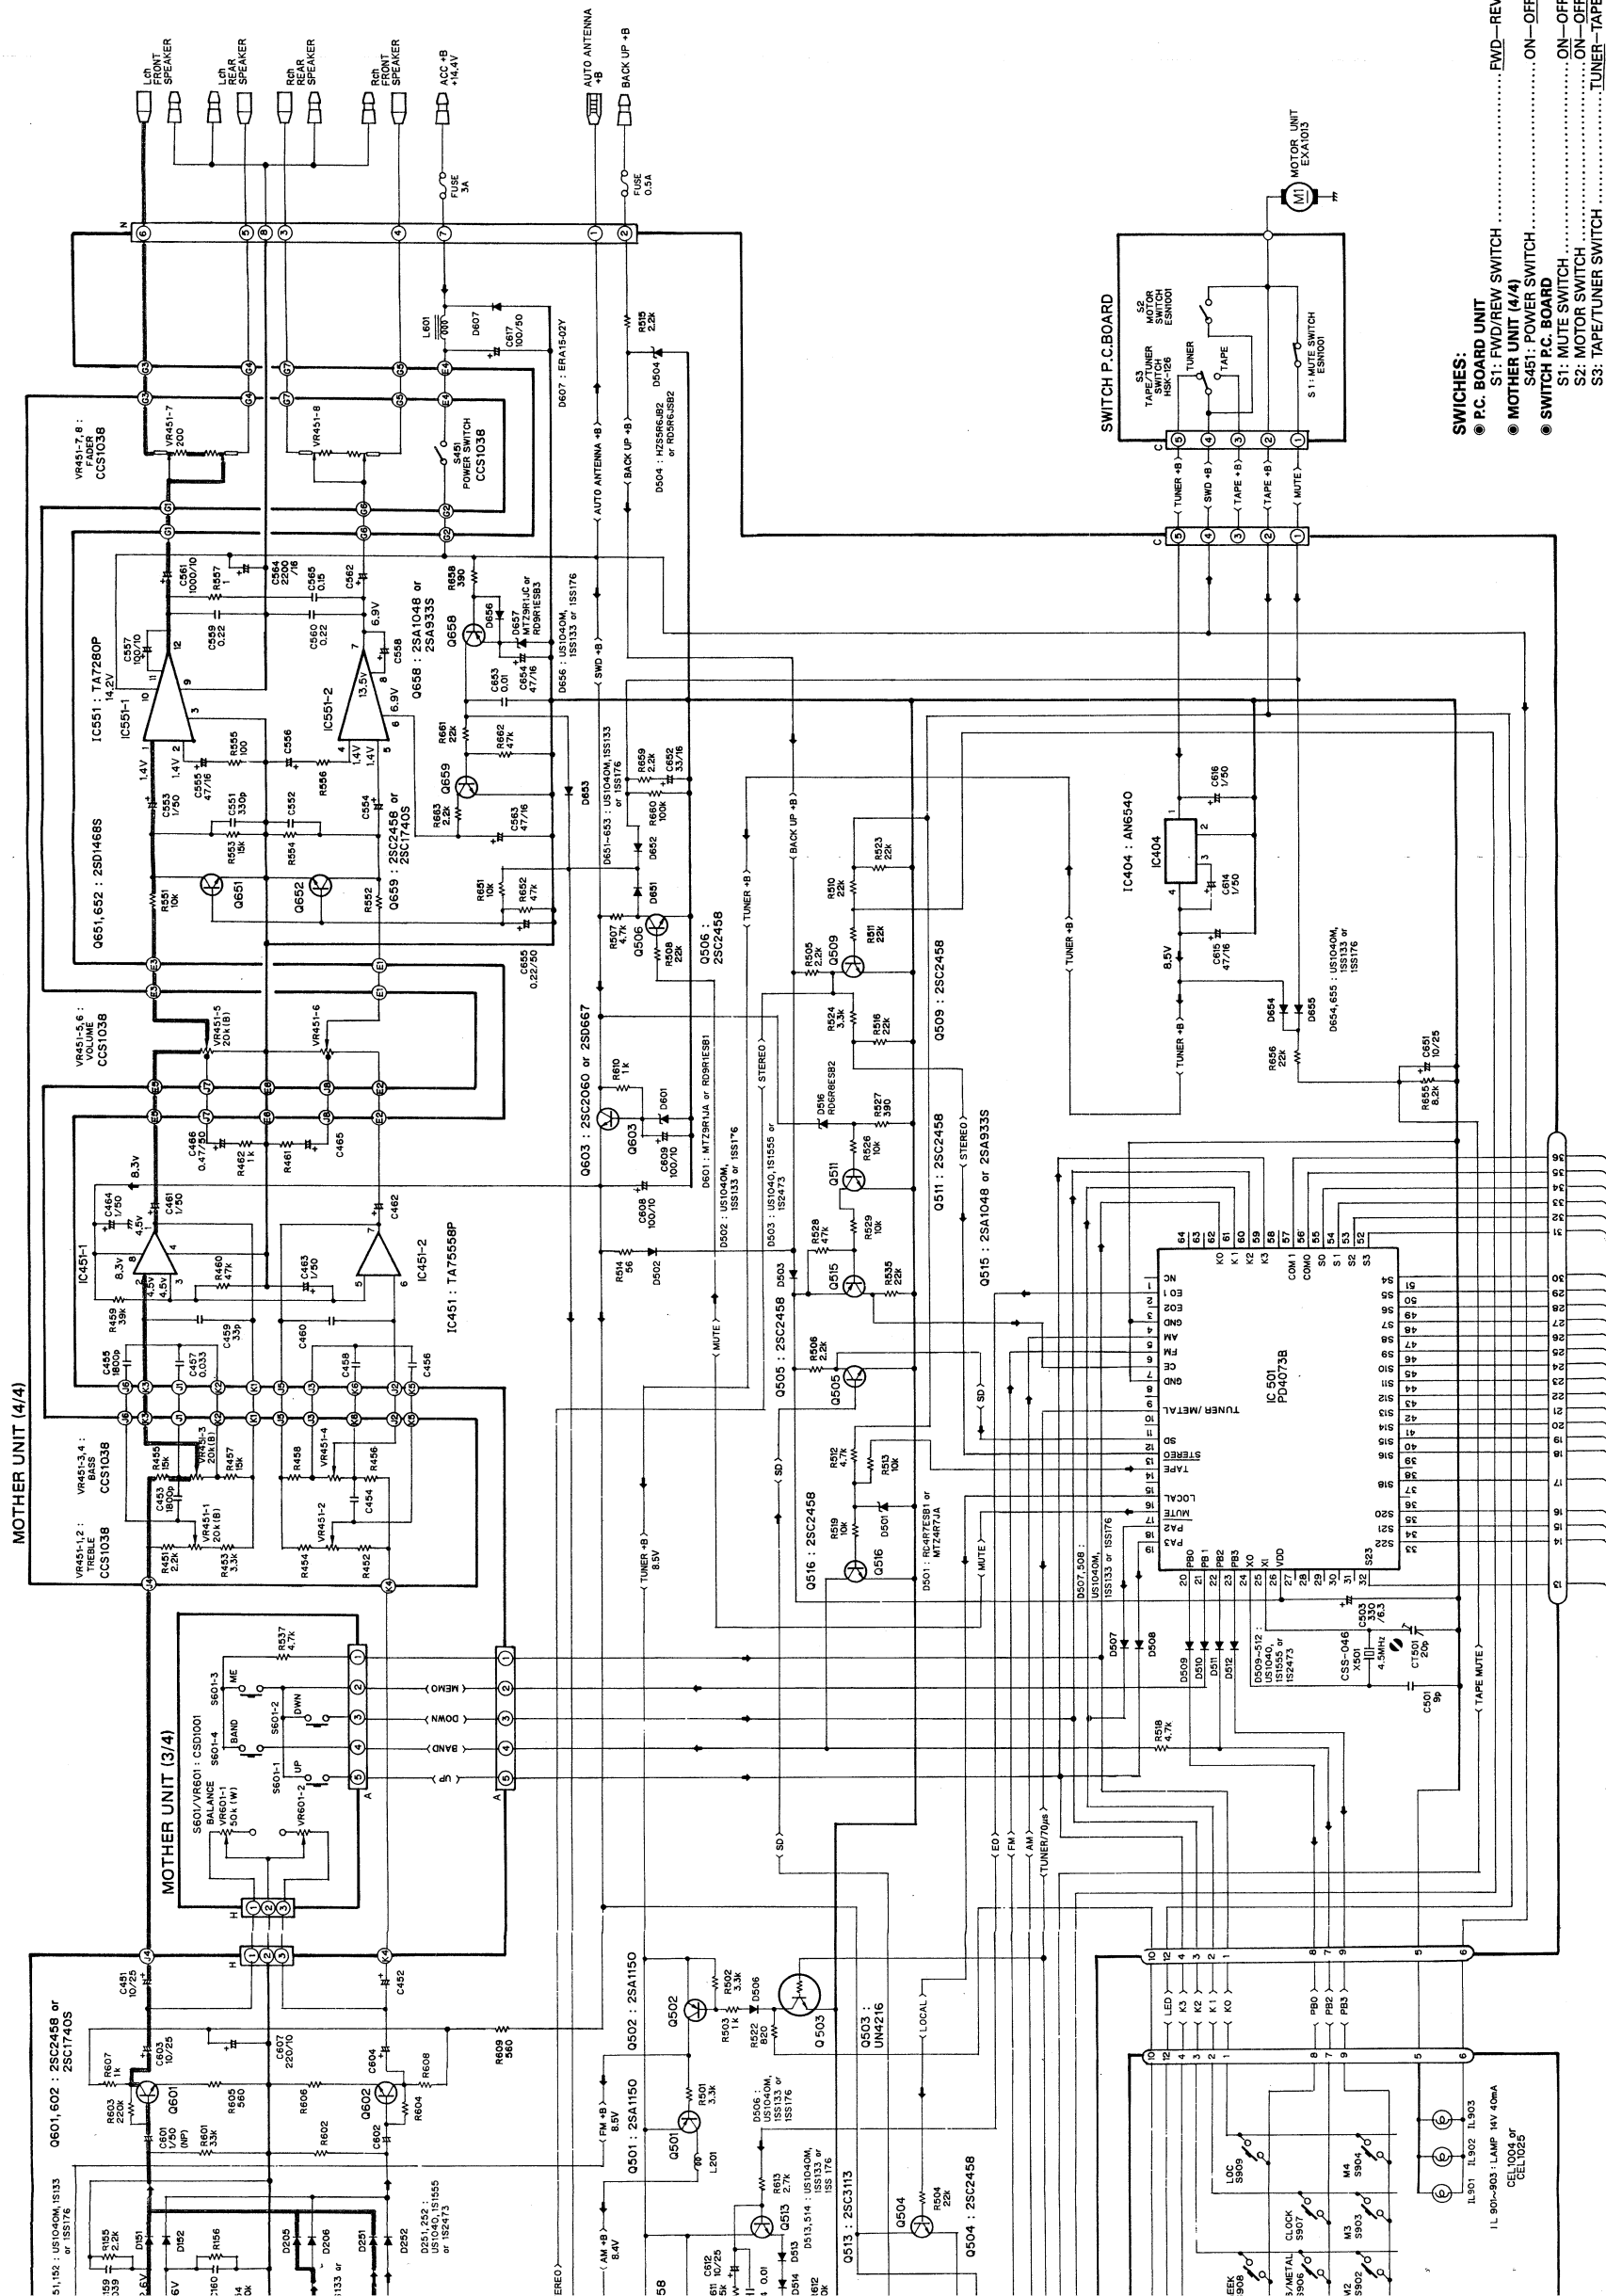



Fig. 22

11. CONNECTION DIAGRAM (KE-3011/US)


FM FRONT END IC1

1	2	3	4	5	6	7	8	9
1.6V	2.3V	1.7V	8.3V	3.6V	0V	0V	8.5V	8.5V
10	11	12	13	14	15	16	17	18
1.1V	3.0V	3.0V	8.4V	8.5V	5.4V	0V		

P.C. BOARD

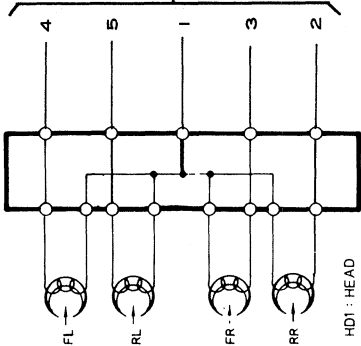


P.C. BOARD UNIT

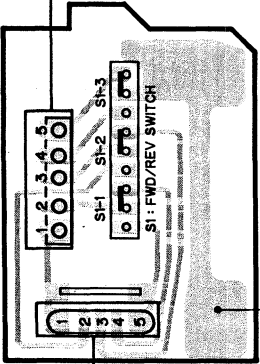


FM FRONT END (CWB1021)

IC.Q IC1
ADJ L5 T1

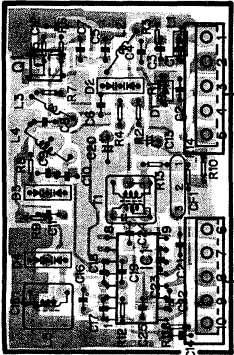


MOTHER UNIT (1/4)

IC251 Q504
IC.Q Q251 Q252
ADJ
Q656 Q655 Q509 Q516 Q503 Q506 Q502 Q501 Q505
VR151 CT501 T51

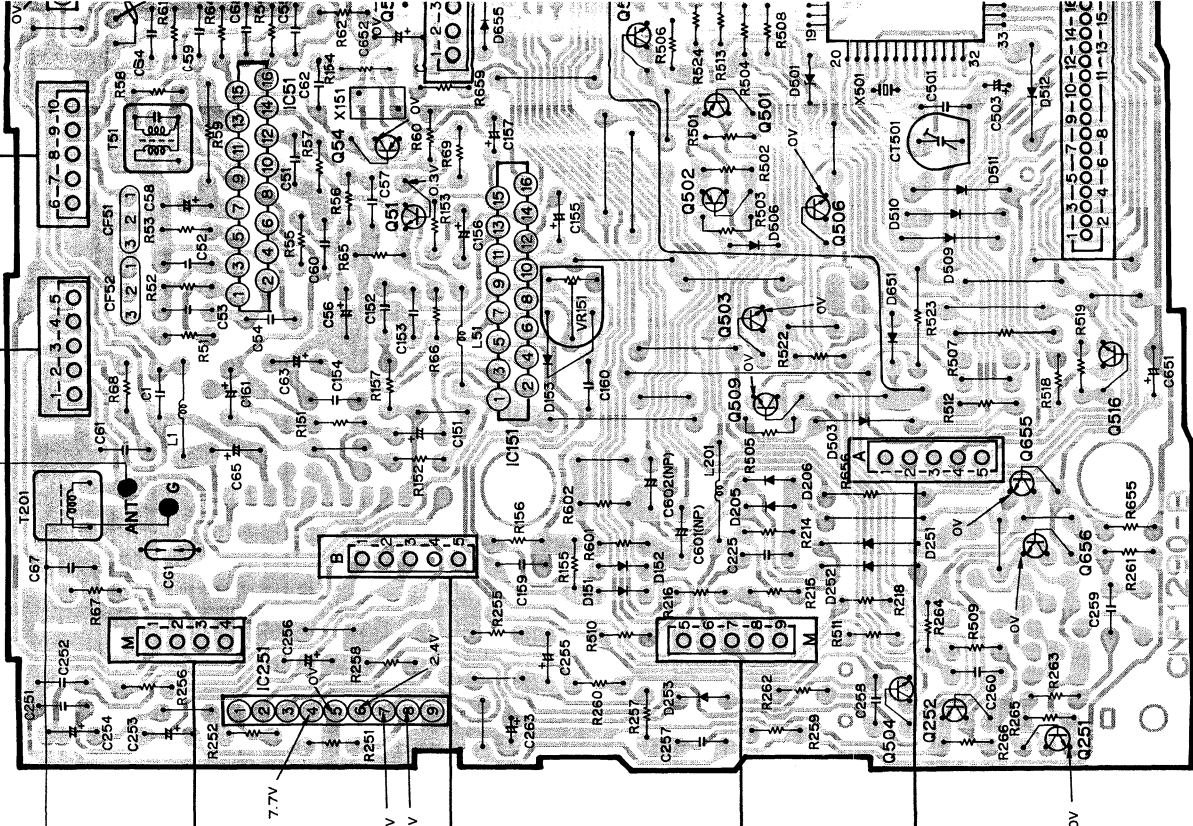


MOTHER UNIT (3/4)

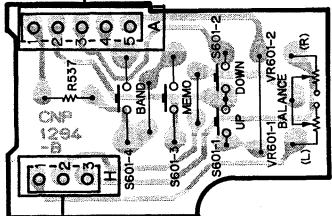

MOTHER UNIT (2/4)

IC.Q Q202 Q201
ADJ T205 T203 T204 T206 Q204 Q203

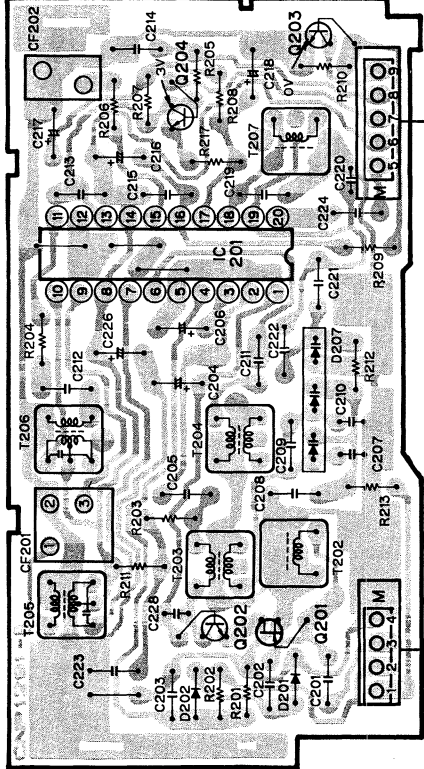

KEY BOARD UNIT

MOTHER UNIT (2/4) IC201


1	2	3	4	5	6	7	8	9	10
1.7V	2.1V		1.2V	0V	2.1V	8.4V	8.4V	0.8V	8.4V
11	12	13	14	15	16	17	18	19	20
0.7V	0V	3.0V		1.3V	6.6V	3.1V	5.7V	5.8V	3.1V

MOTHER UNIT (1/4) IC51

1	2	3	4	5	6	7	8
2.6V	2.6V		0V	2.0V	0V		4.9V
9	10	11	12	13	14	15	16
4.9V	0V	4.9V		4.9V	3.7V	0.3V	4.1V


60



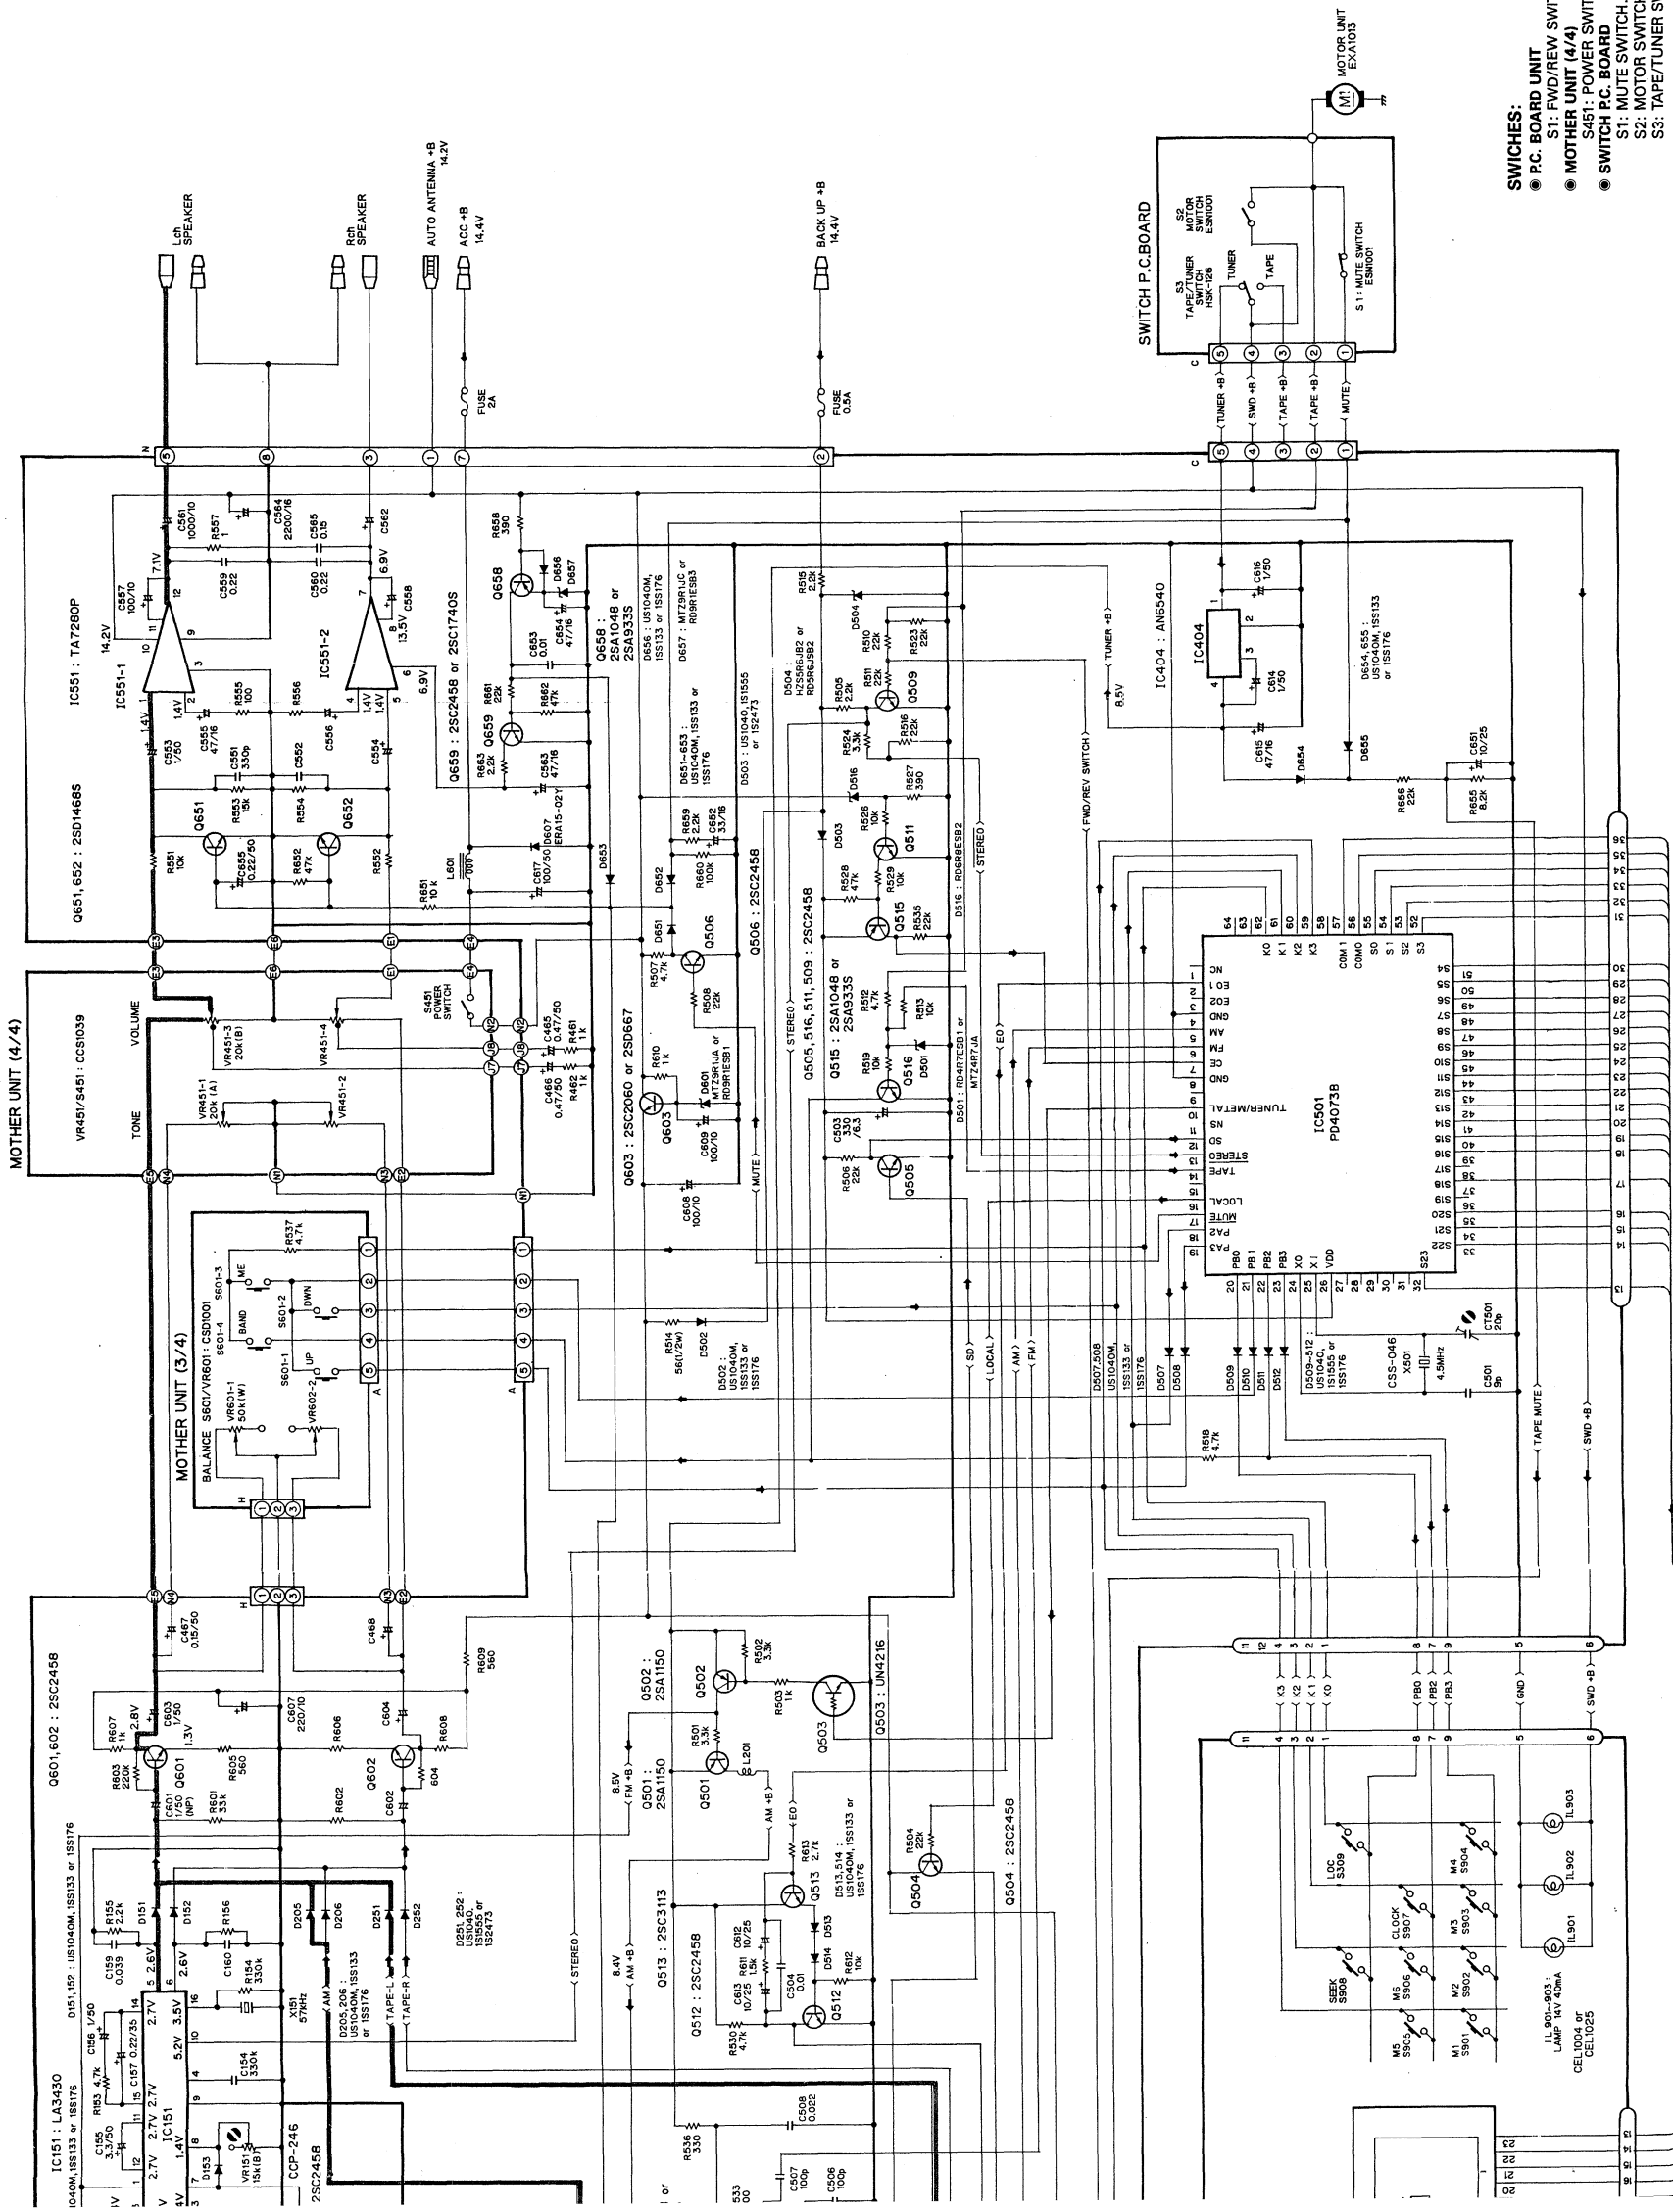


13. CONNECTION DIAGRAM (KE-2222/UC)

P.C. BOARD

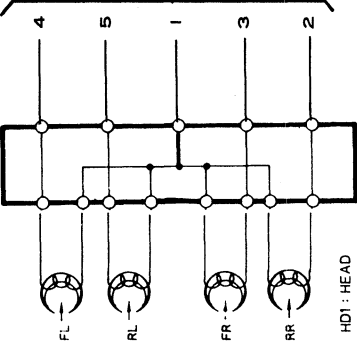


P.C. BOARD UNIT

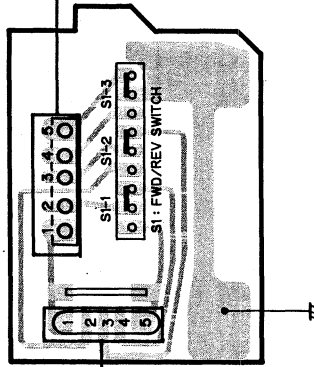


FM FRONT END (CWBI021)

IC, Q IC1
ADJ L5 T1 Q1

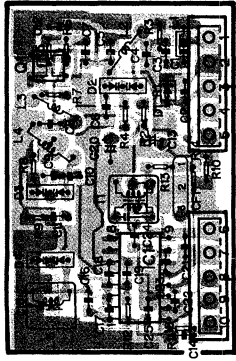


FM FRONT END IC1								
1	2	3	4	5	6	7	8	9
1.6V	2.3V	1.7V	8.3V	3.6V	0V	0V	8.5V	8.5V
10	11	12	13	14	15	16	17	18
1.1V	3.0V	3.0V	8.4V	8.5V	5.4V	0V		

MOTHER UNIT (2/4)

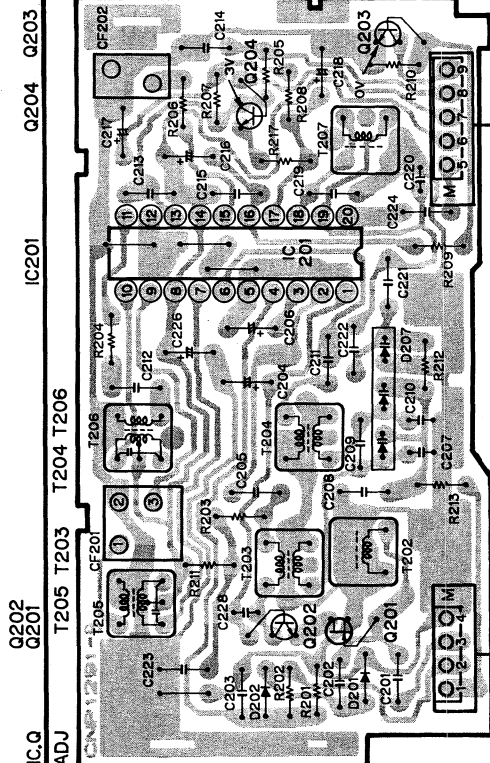


MOTHER UNIT (3/4)

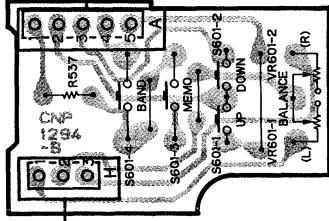


MOTHER UNIT (2/4) IC201

MOTHER UNIT (2/4) IC201									
1	2	3	4	5	6	7	8	9	10
1.7V	2.1V		1.2V	0V	2.1V	8.4V	8.4V	0.8V	8.4V
11	12	13	14	15	16	17	18	19	20
0.7V	0V	3.0V		1.3V	6.6V	3.1V	5.7V	5.8V	3.1V

KEY BOARD UNIT

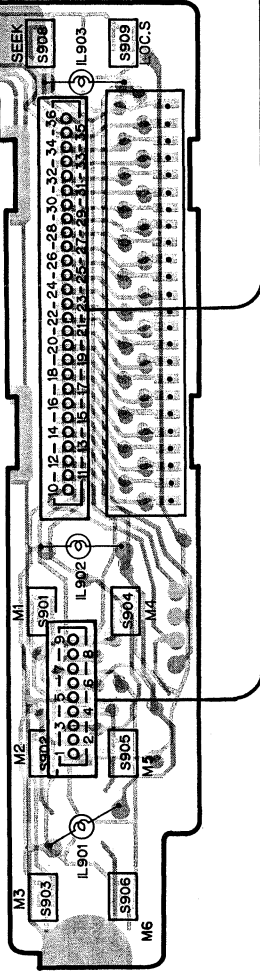


MOTHER UNIT (1/4)

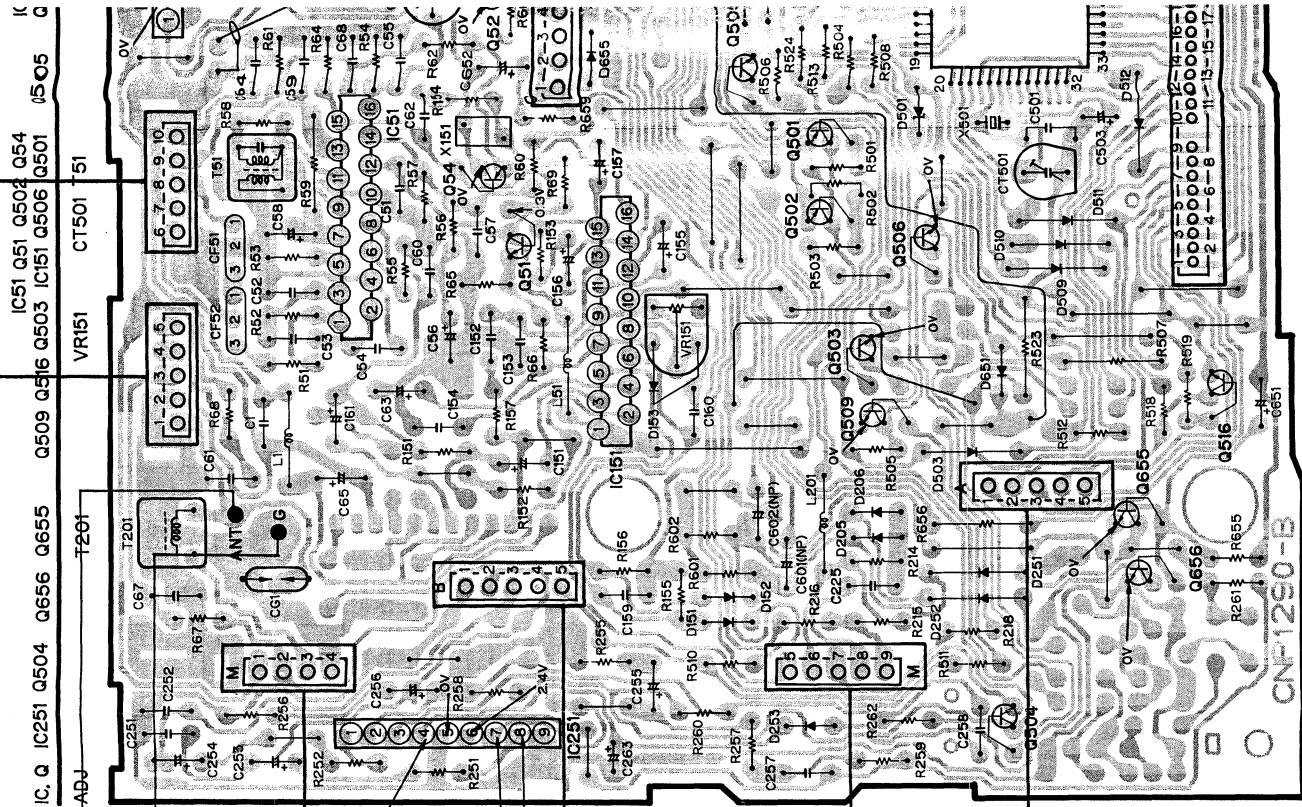

MOTHER UNIT (1/4) IC51


MOTHER UNIT (1/4) IC51							
1	2	3	4	5	6	7	8
2.6V	2.6V		0V	2.0V	0V		4.9V
9	10	11	12	13	14	15	16
4.9V	0V	4.9V		4.9V	3.7V	0.3V	4.1V

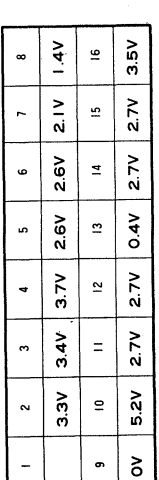


100

15. CONNECTION DIAGRAM (KE-2515/US)

P.C. BOARD

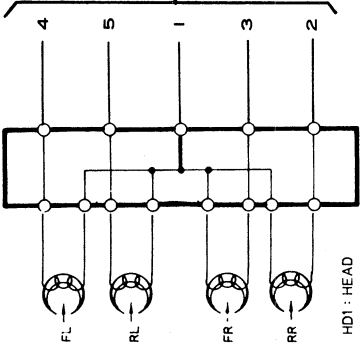


P.C. BOARD UNIT

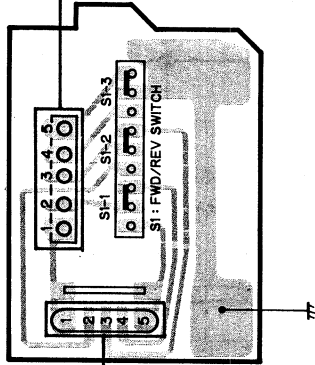


FM FRONT END (CWBI021)


IC.Q IC1
ADJ L5 T1 Q1

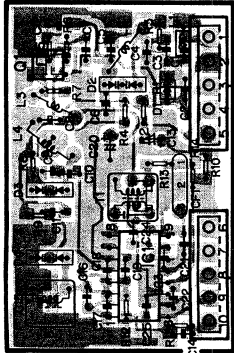


MOTHER UNIT (1/4)

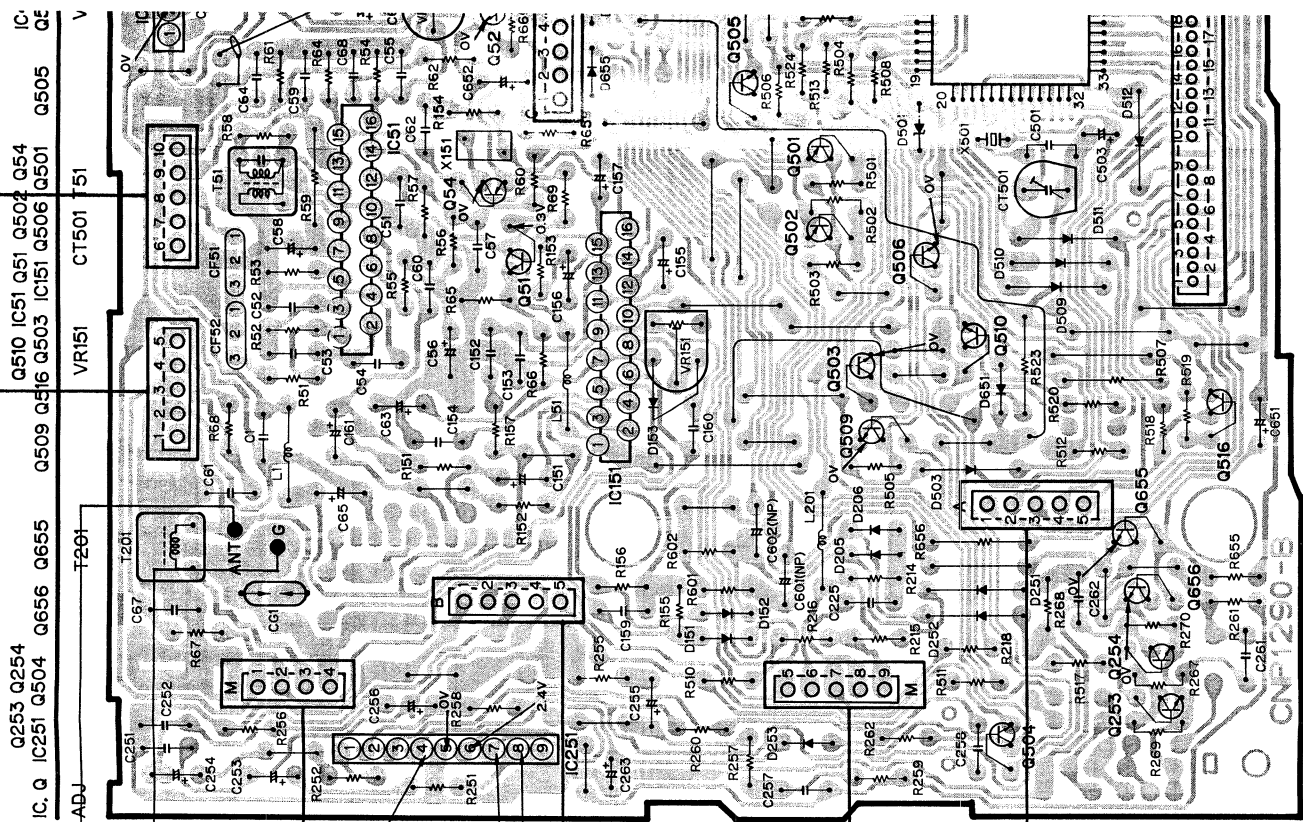


MOTHER UNIT (2/4)

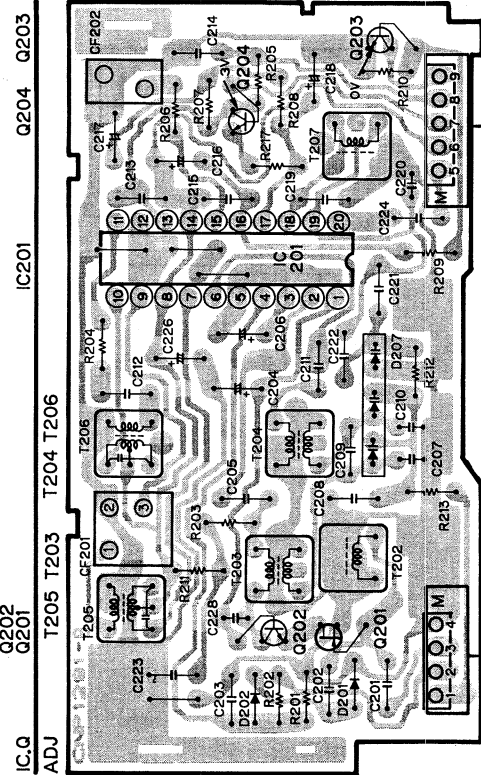

MOTHER UNIT (3/4)

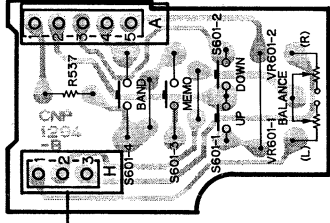

KEY BOARD UNIT

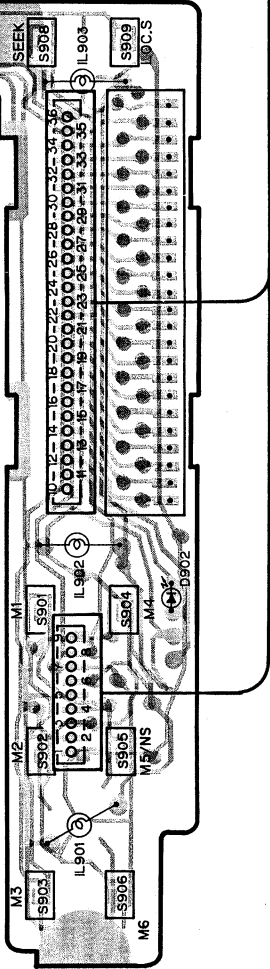

MOTHER UNIT (2/4) IC201

1	2	3	4	5	6	7	8	9	10
1.7V	2.1V		1.2V	0V	2.1V	8.4V	8.4V	0.8V	8.4V
11	12	13	14	15	16	17	18	19	20
0.7V	0V	3.0V		1.3V	6.6V	3.1V	5.7V	5.8V	3.1V

MOTHER UNIT (1/4) IC51

1	2	3	4	5	6	7	8
2.6V	2.6V		0V	2.0V	0V		4.9V
9	10	11	12	13	14	15	16
4.9V	0V	4.9V		4.9V	3.7V	0.3V	4.1V

FM FRONT END IC1

1	2	3	4	5	6	7	8	9
1.6V	2.3V	1.7V	8.3V	3.6V	0V	0V	8.5V	8.5V
10	11	12	13	14	15	16	17	18
1.1V	3.0V	3.0V	8.4V	8.5V	5.4V	0V		

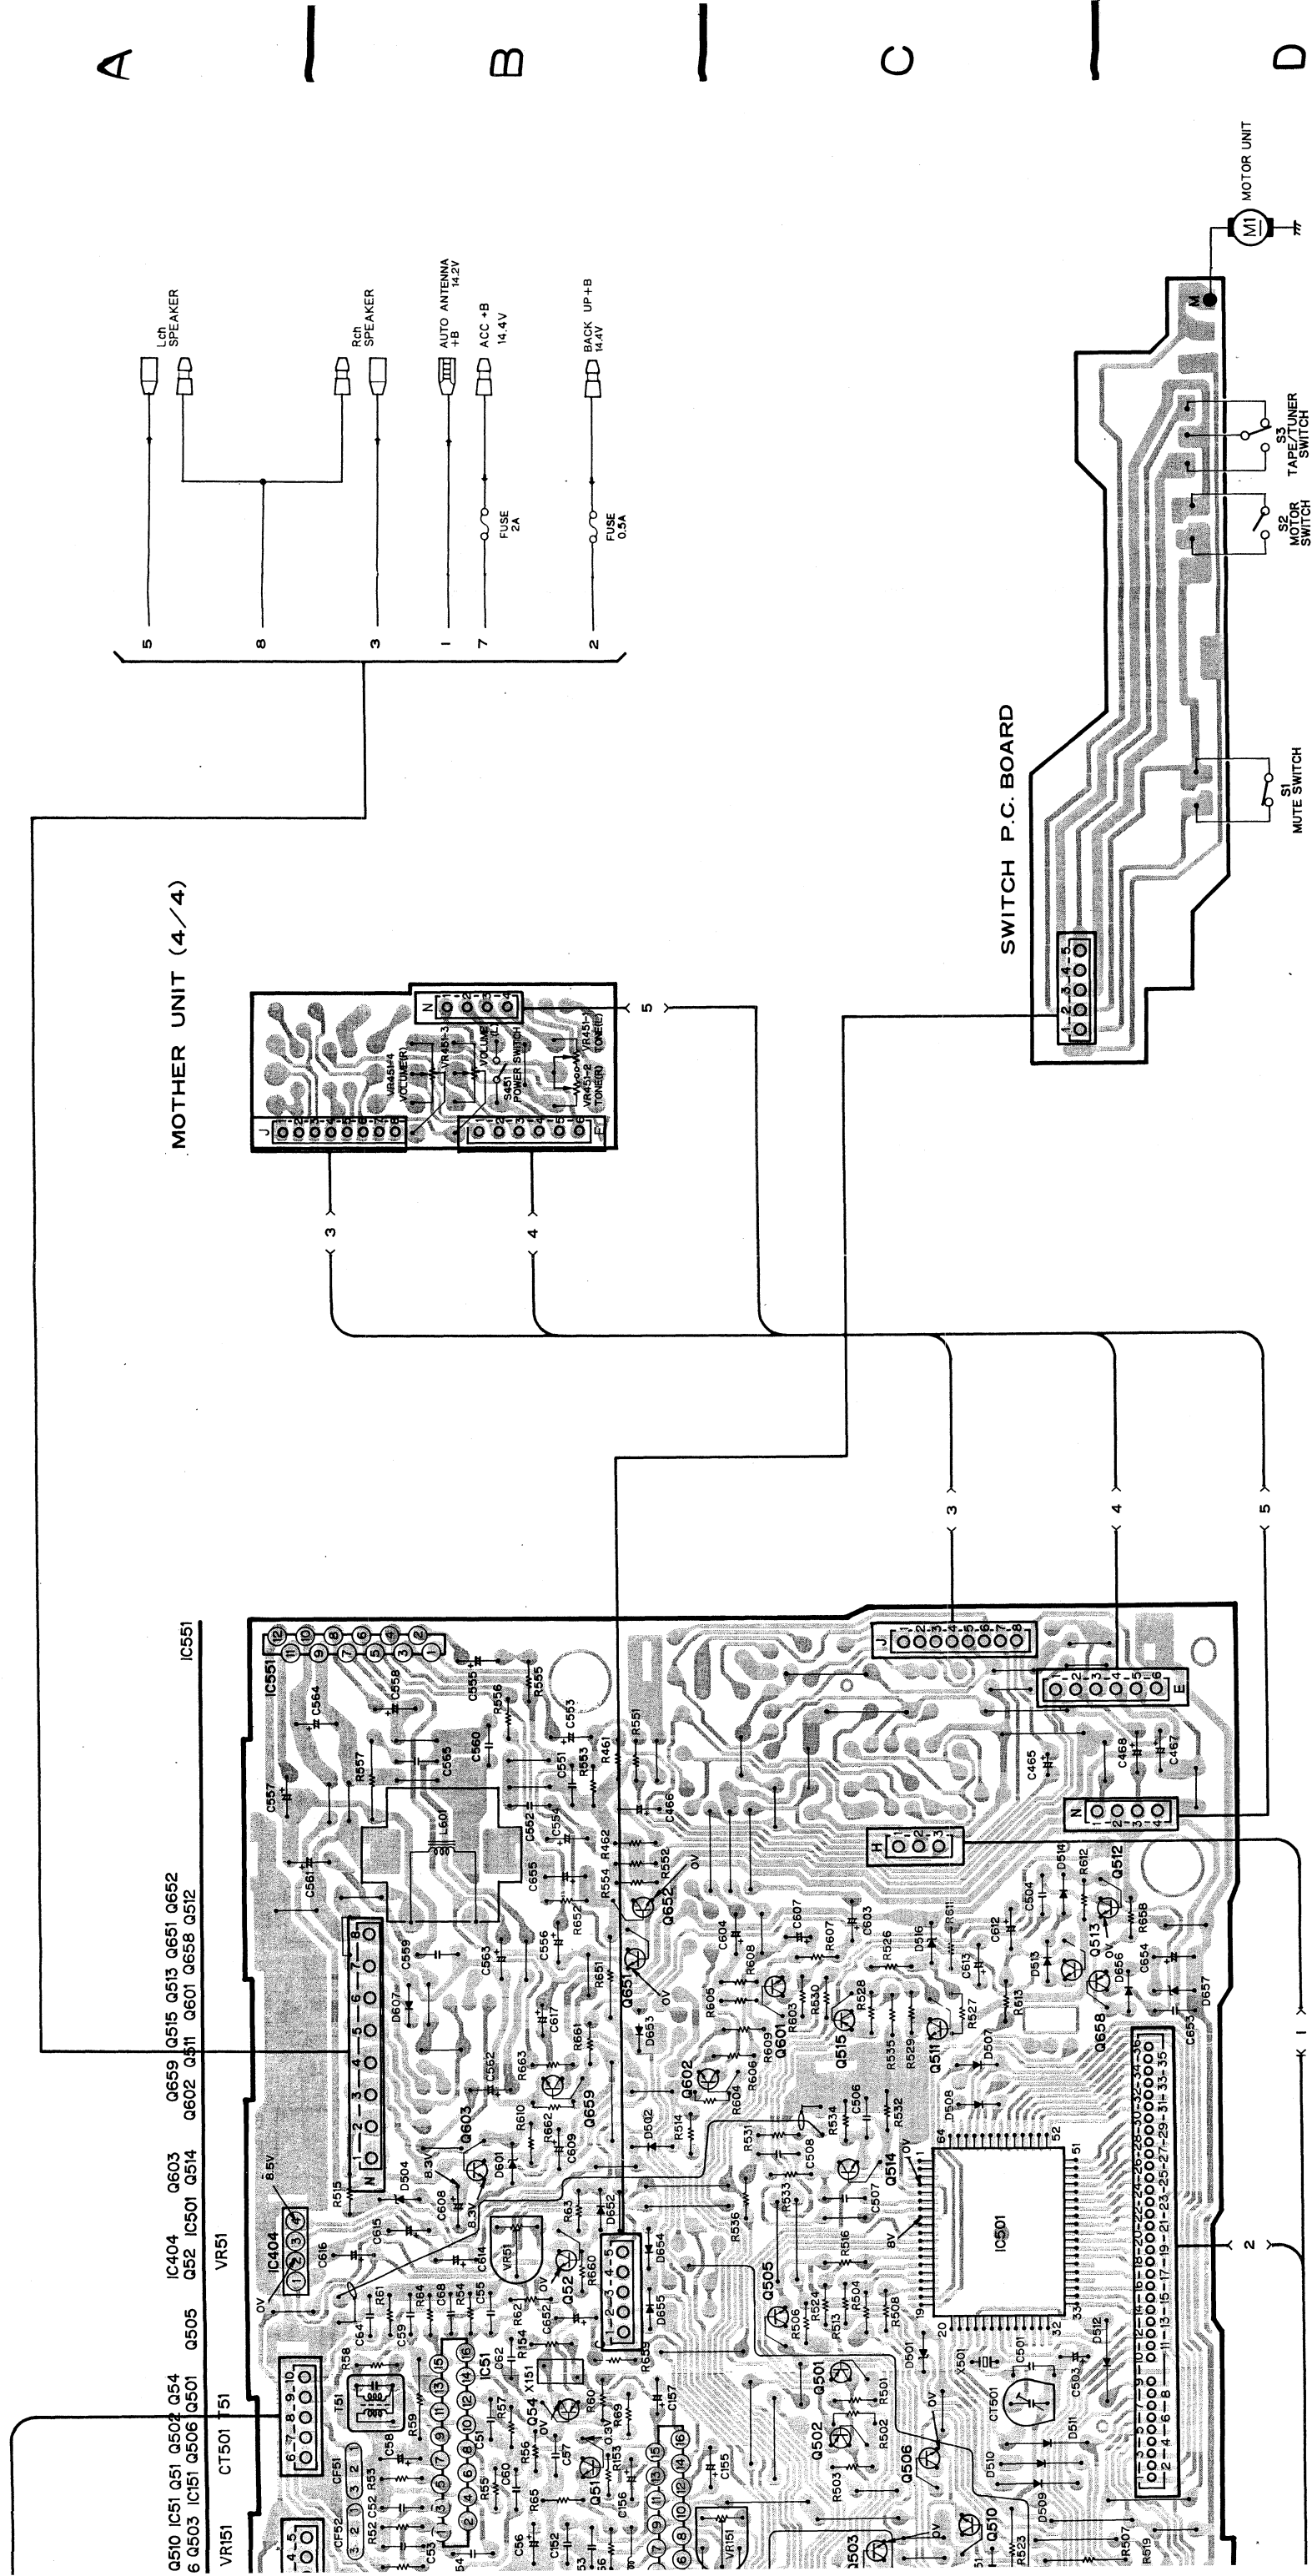



Fig. 27

	7	8
		4.9V
	15	16
V	0.3V	4.1V

MOTHER UNIT (1/4) IC151

1	2	3	4	5	6	7	8
	3.3V	3.4V	3.7V	2.6V	2.6V	2.1V	1.4V
9	10	11	12	13	14	15	16
0V	5.2V	2.7V	2.7V	0.4V	2.7V	2.7V	3.5V

16. SCHEMATIC CIRCUIT DIAGRAM (KE-3232/ES)

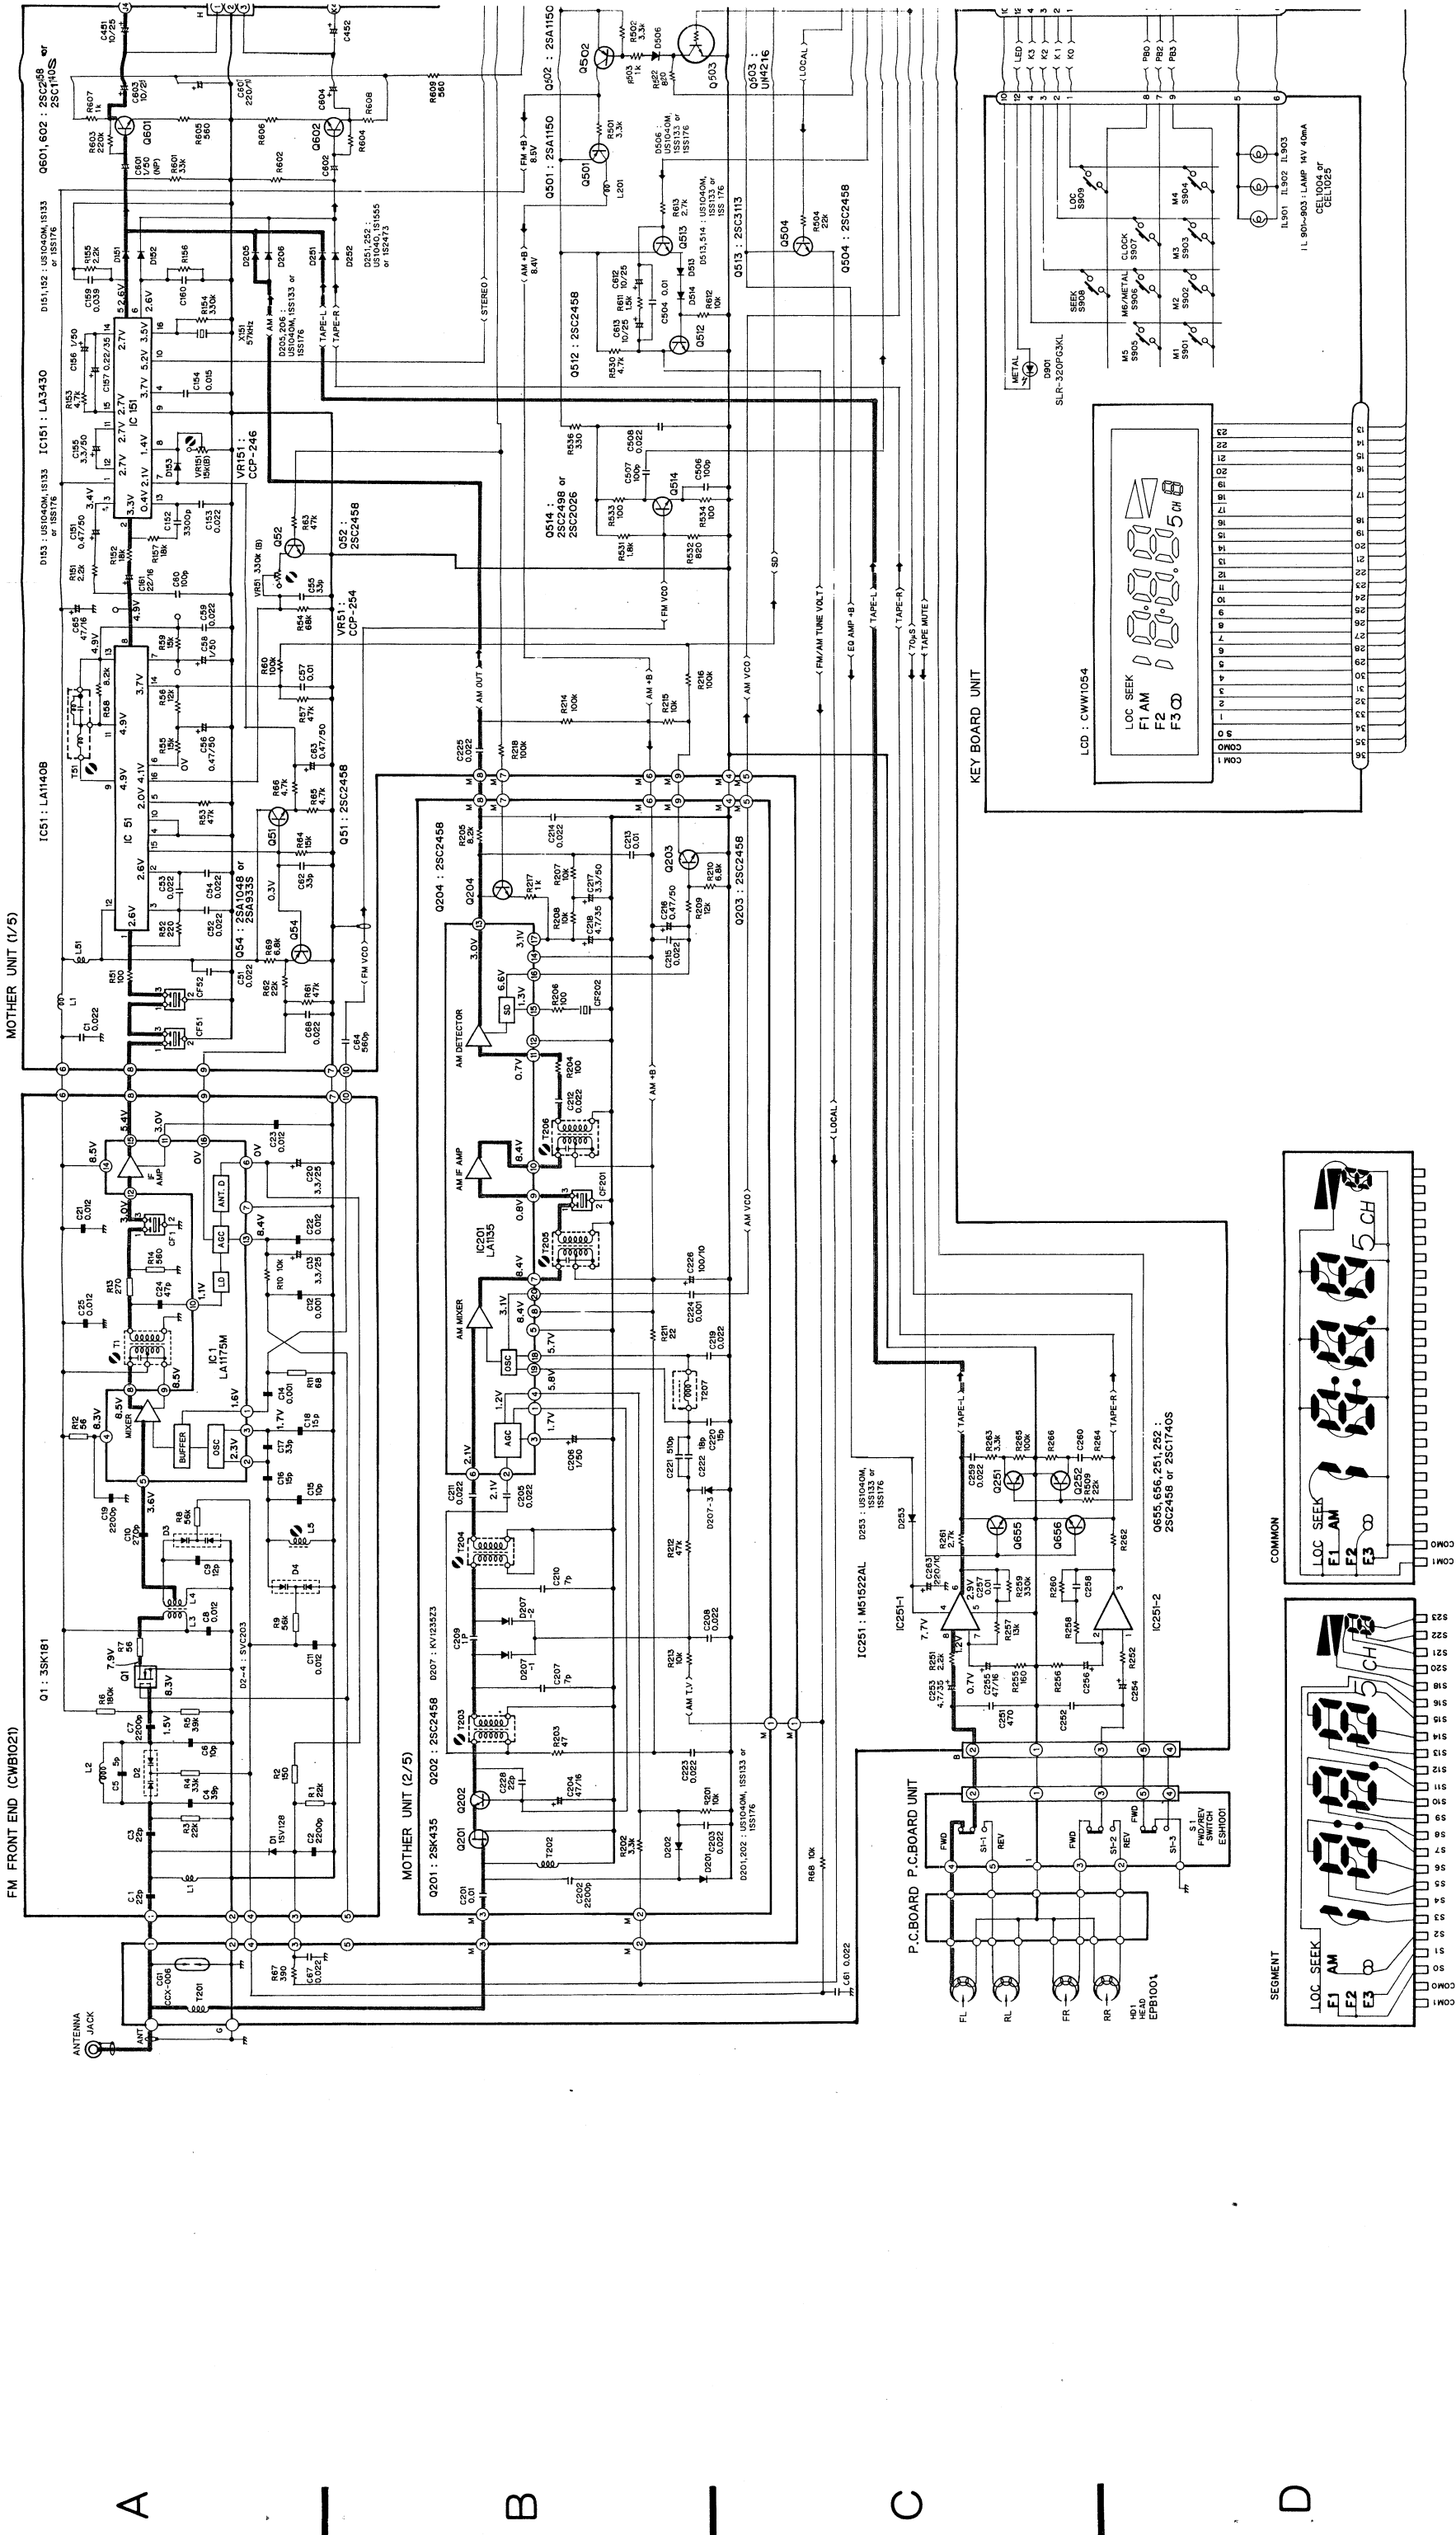


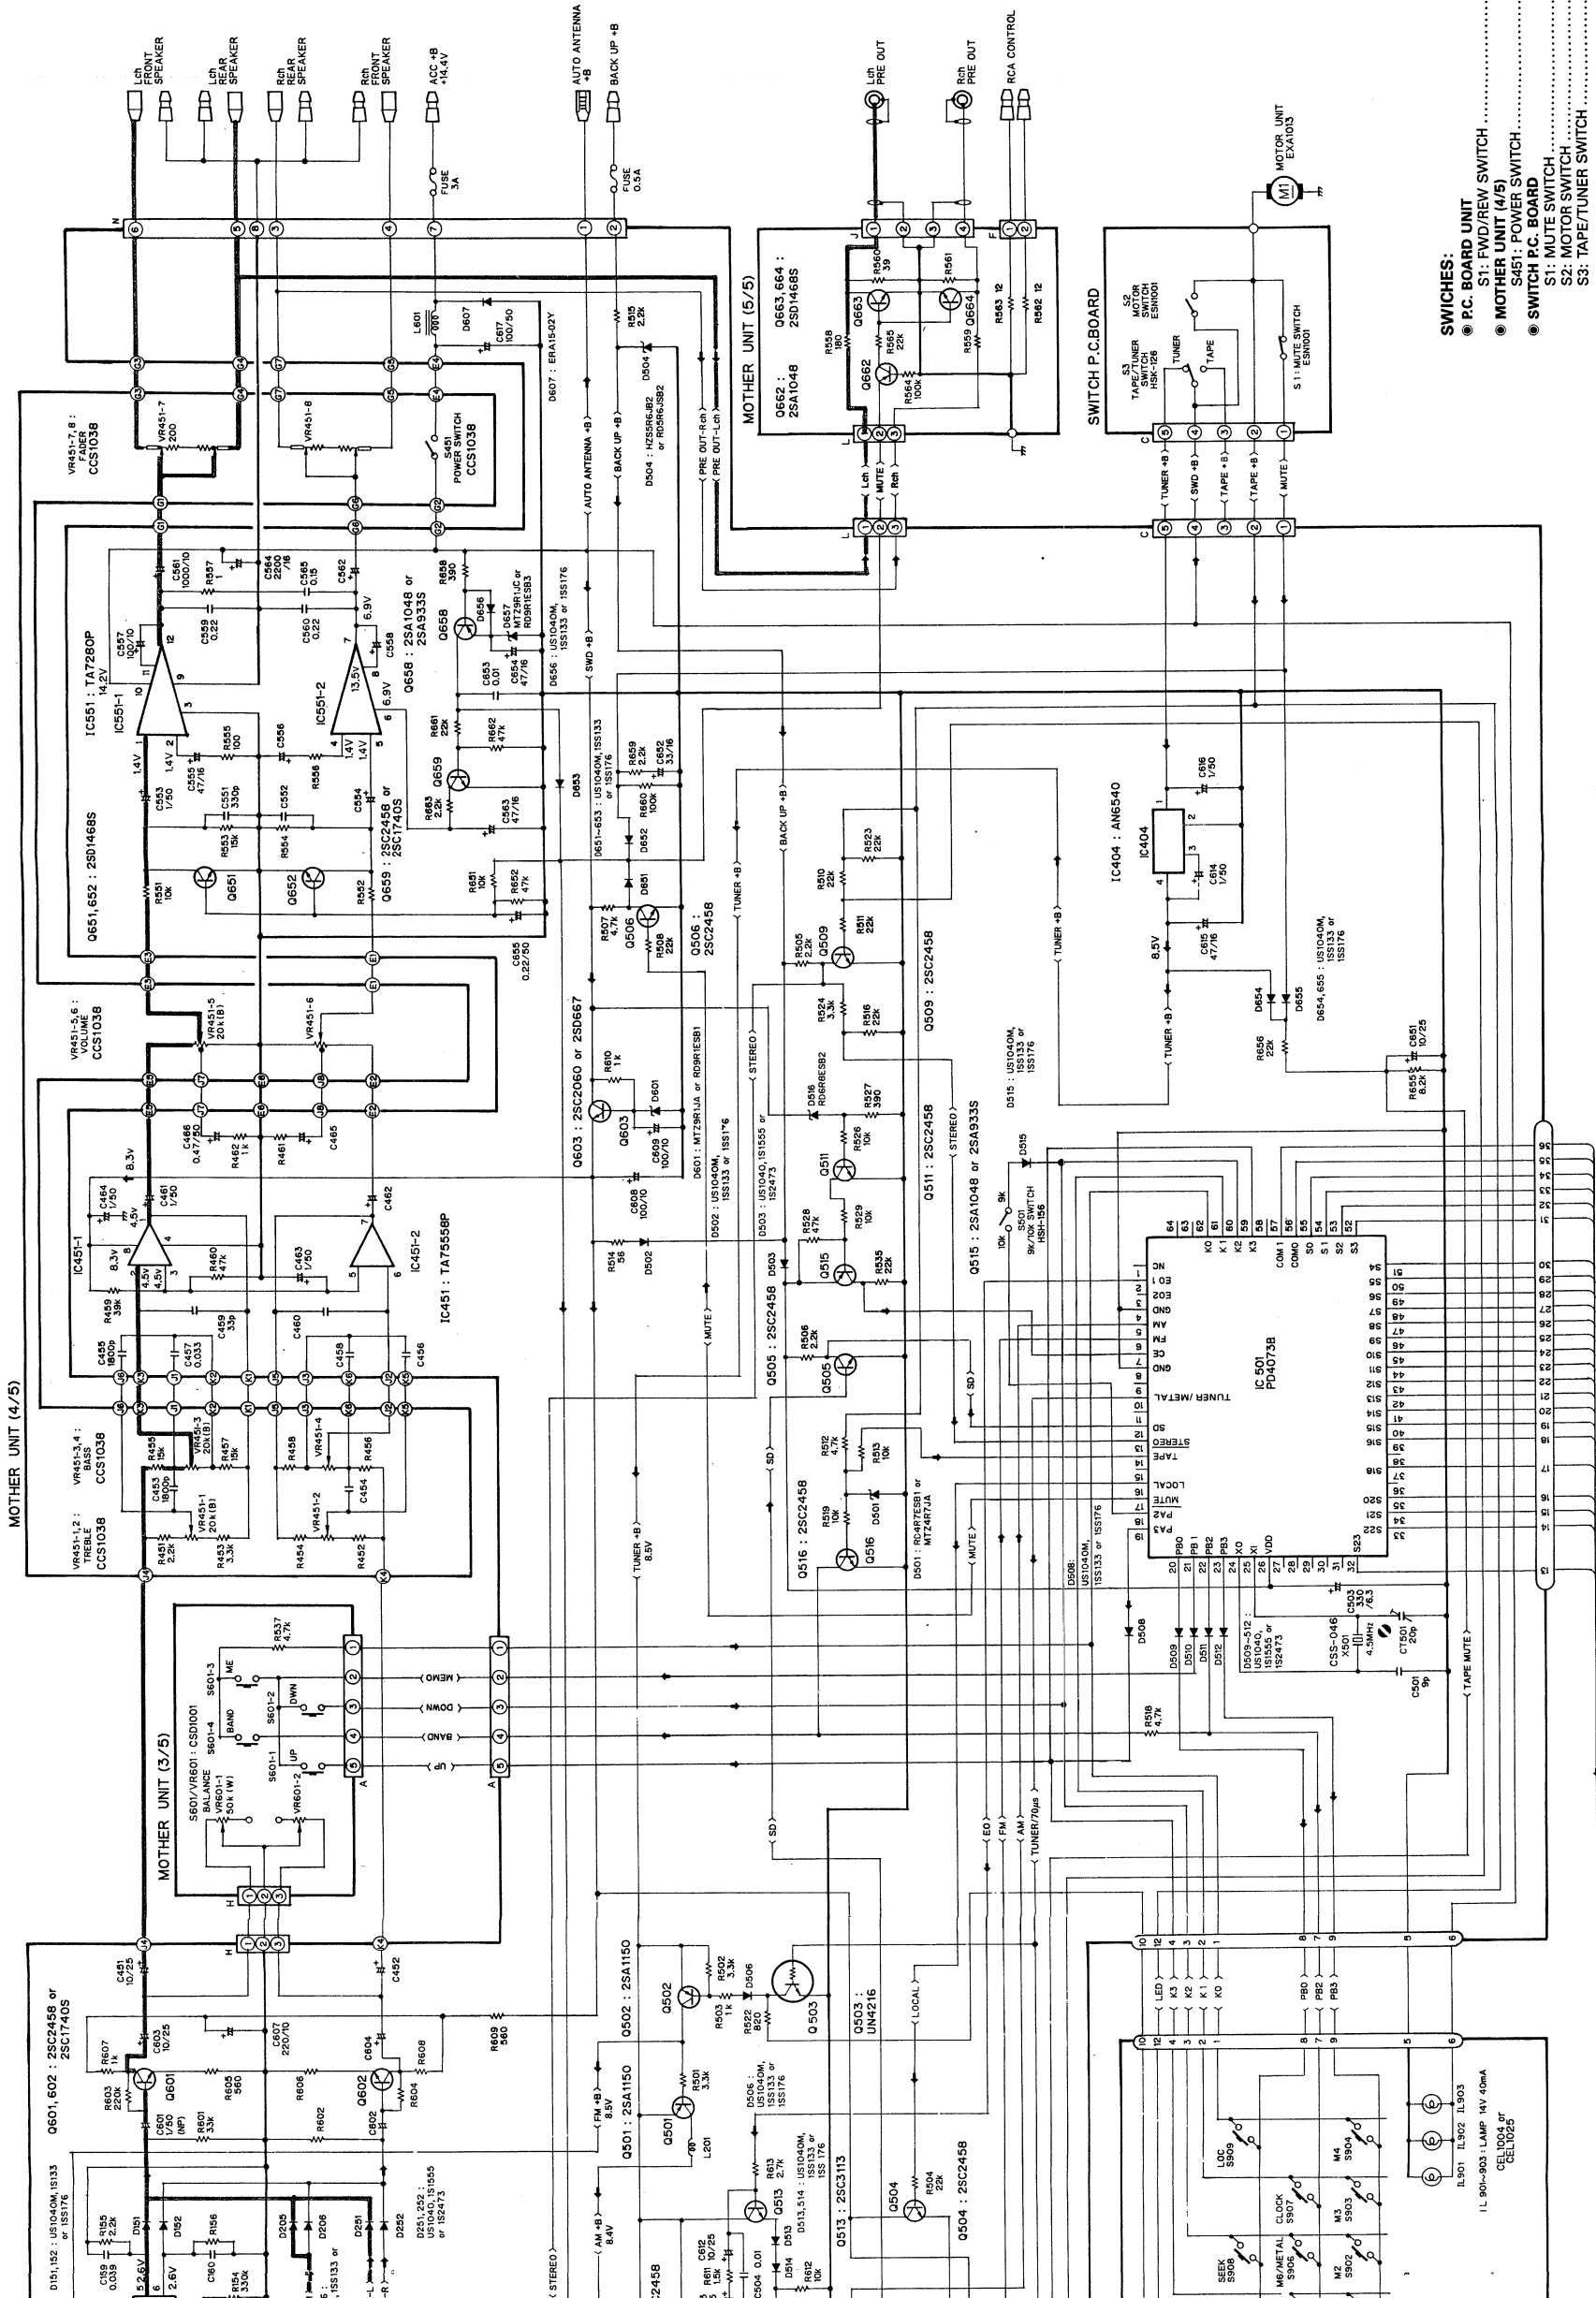



Fig. 28

17. CONNECTION DIAGRAM (KE-3232/ES)

P.C. BOARD

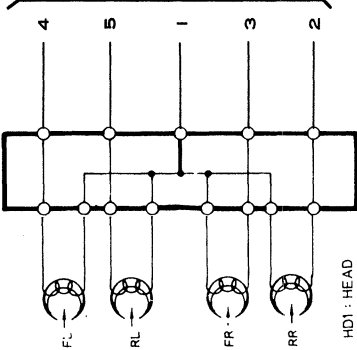


P.C. BOARD UNIT

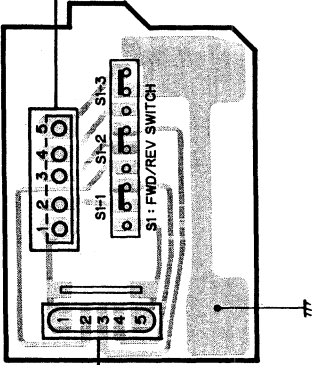

FM FRONT END (CWBI021)

IC, Q IC1
ADJ L5 T1 Q1

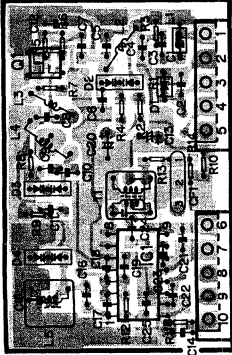


MOTHER UNIT (1/5)

IC251 Q504
IC, Q Q251 Q252
ADJ
Q656 Q655
T201
VR151
IC151 IC51 Q51 Q54
Q509 Q516 Q503 Q506 Q502 Q501 Q505
IC


ANTENNA JACK



MOTHER UNIT (2/5)

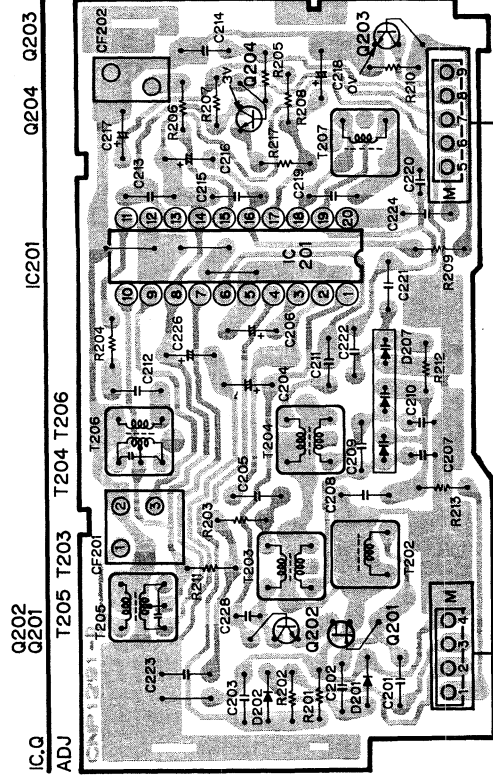

MOTHER UNIT (3/5)

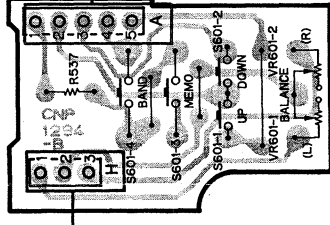

KEY BOARD UNIT (5/5)


MOTHER UNIT (2/5) IC201


1	2	3	4	5	6	7	8	9	10
1.7V	2.1V	1.2V	OV	OV	2.1V	8.4V	8.4V	0.8V	8.4V
11	12	13	14	15	16	17	18	19	20
0.7V	OV	3.0V	1.3V	6.6V	3.1V	5.7V	5.8V	3.1V	

MOTHER UNIT (1/5) IC51

1	2	3	4	5	6	7	8
2.6V	2.6V		OV	2.0V	OV		4.9V
9	10	11	12	13	14	15	16
4.9V	OV	4.9V		4.9V	3.7V	0.3V	4.1V




18. SCHEMATIC CIRCUIT DIAGRAM (KE-2222/ES)

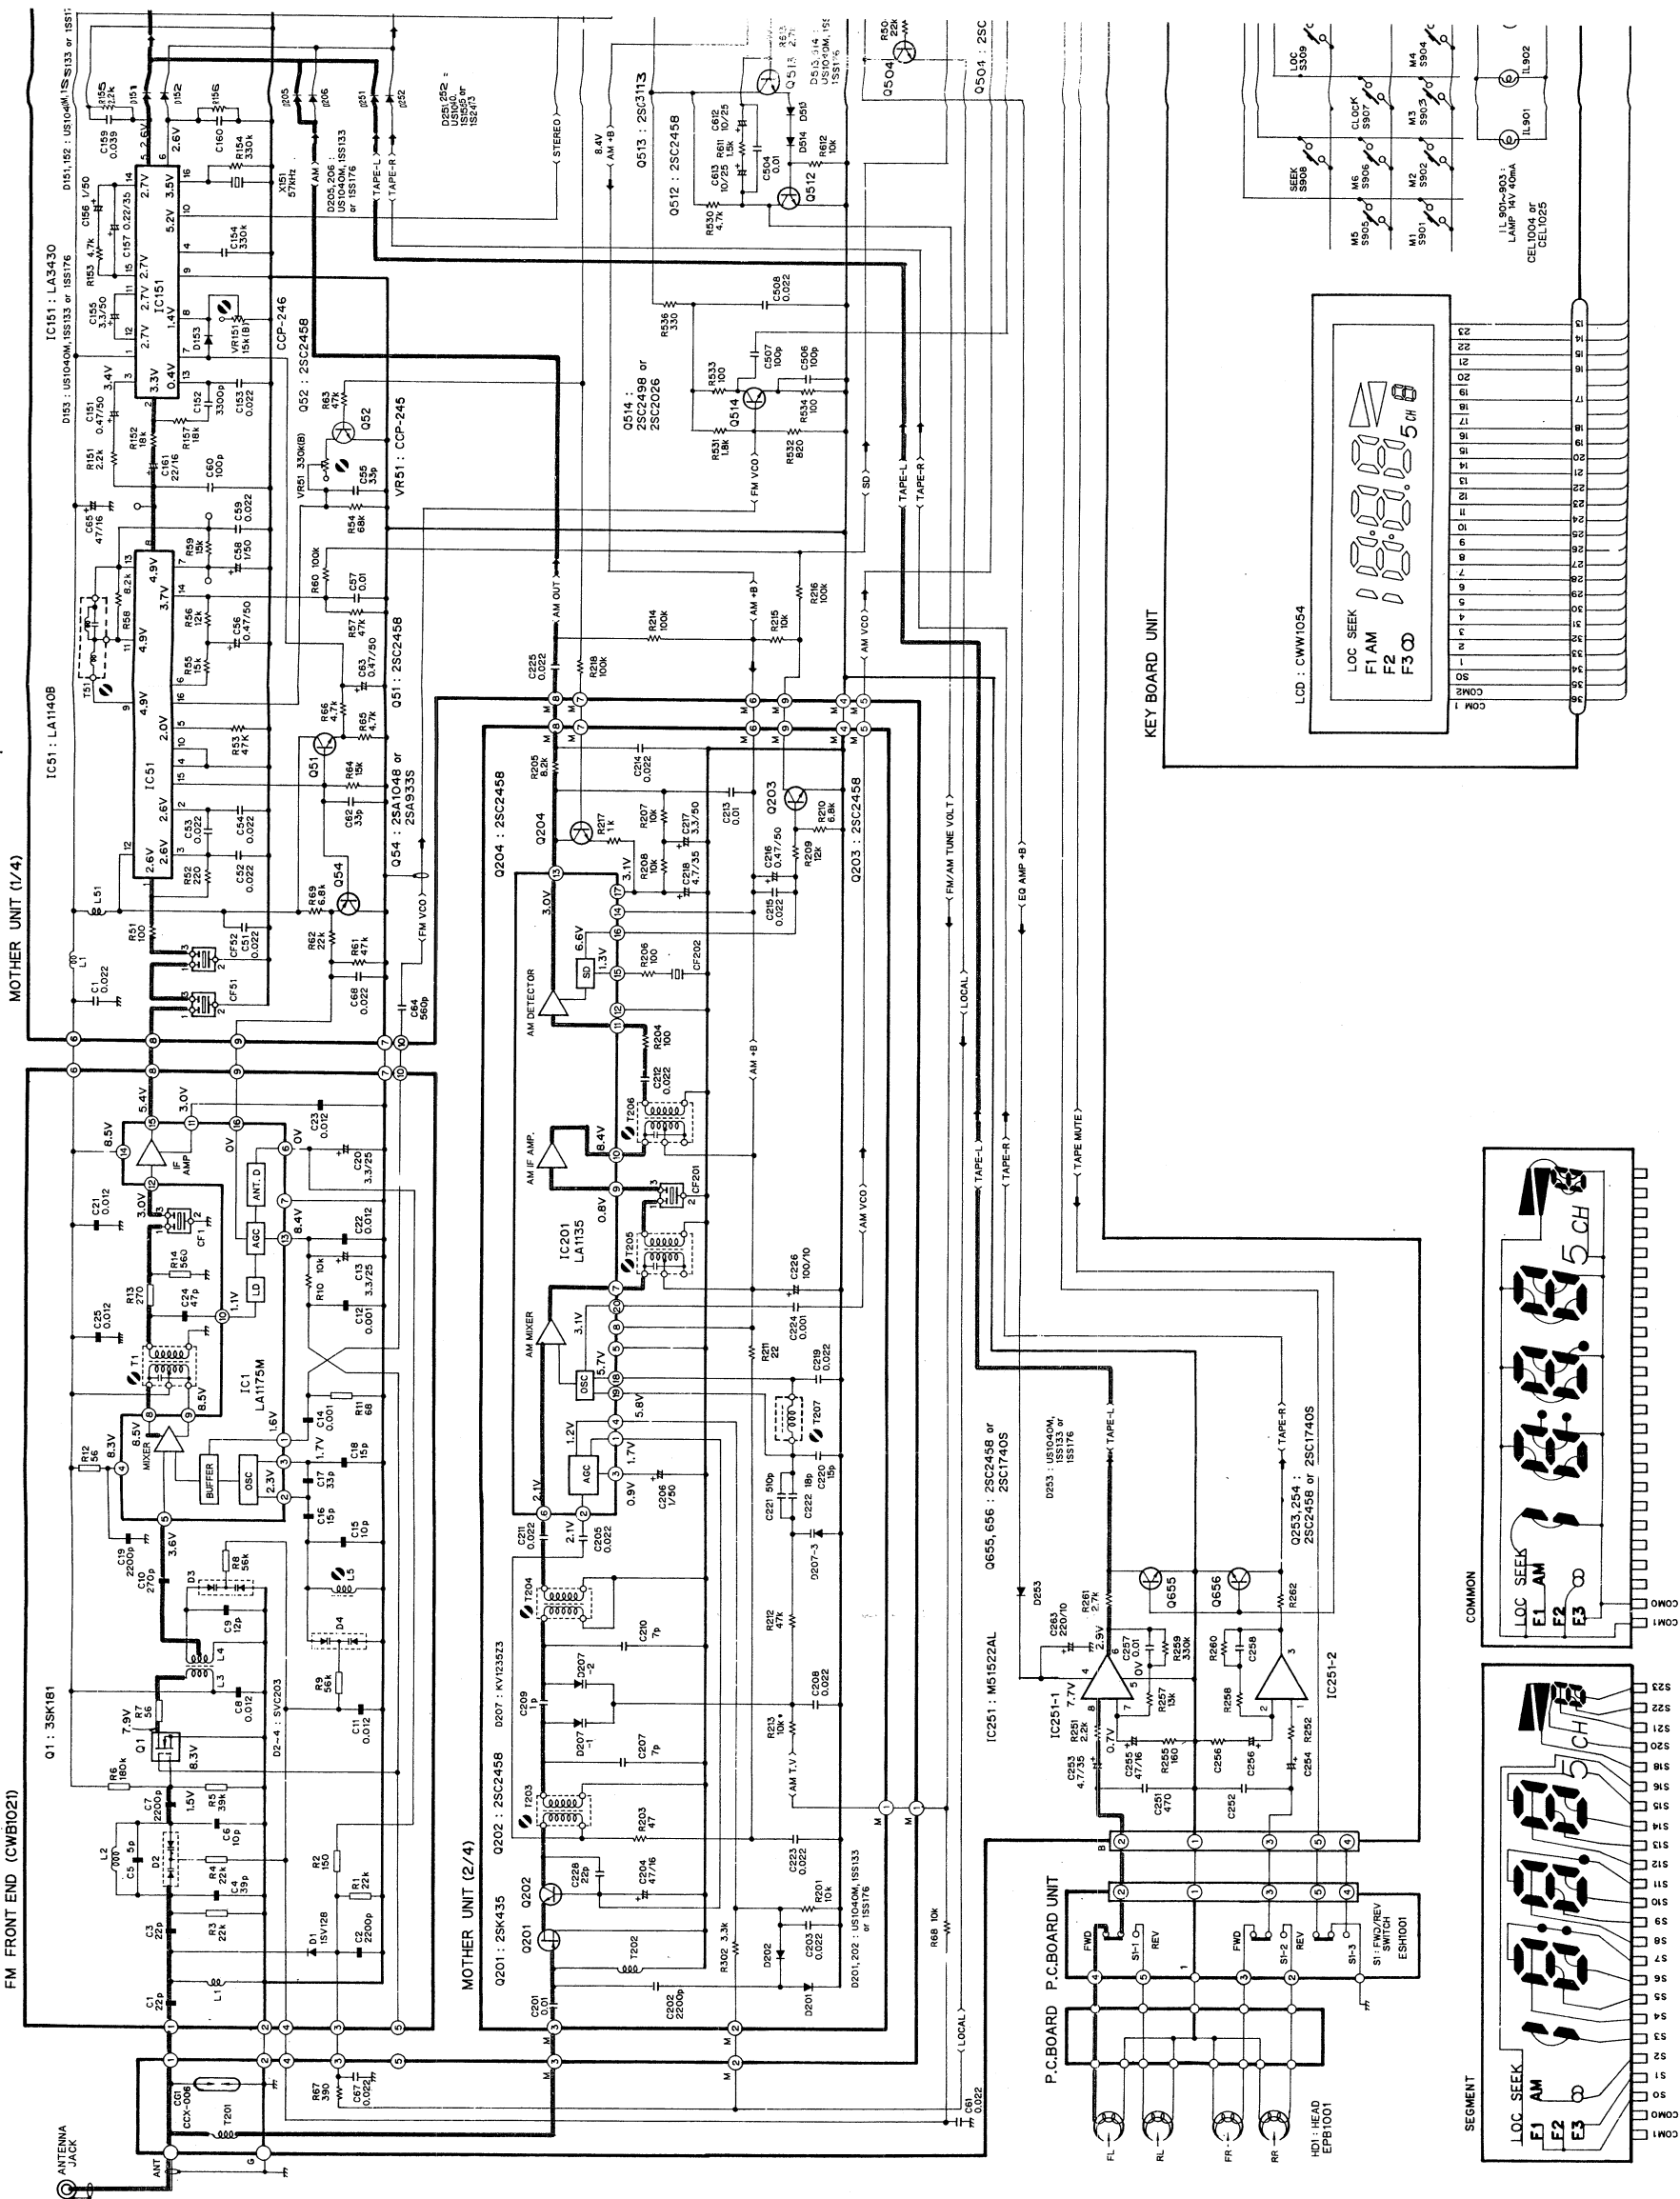

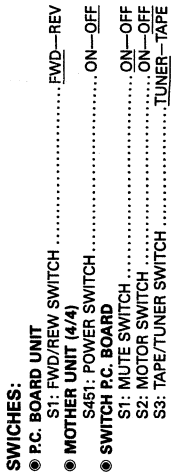

The underlined indicates the switch position.


19. CONNECTION DIAGRAM (KE-2222/ES)

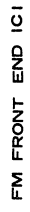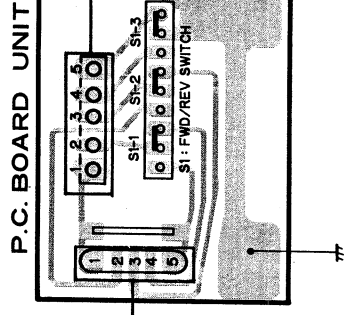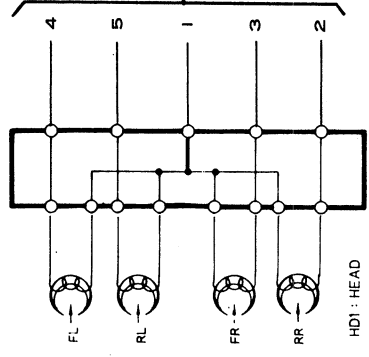

	1	2	3	4	5	6	7	8	9
	1.6V	2.3V	1.7V	8.3V	3.6V	0V	0V	8.5V	8.5V
	10	11	12	13	14	15	16	17	18
	1.1V	3.0V	3.0V	8.4V	8.5V	5.4V	0V		


FM FRONT END (CWB1021)

IC. Q	IC1	Q1
-------	-----	----

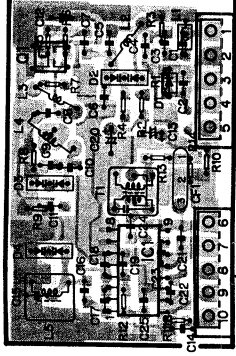


MOTHER UNIT (2/4)

Q202

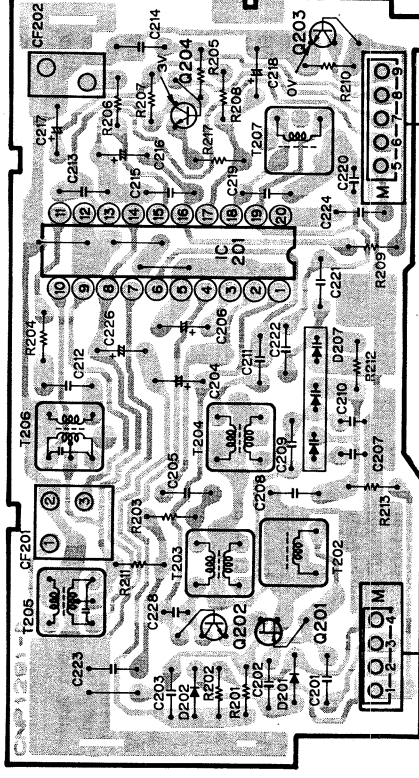


KEY BOARD UNIT

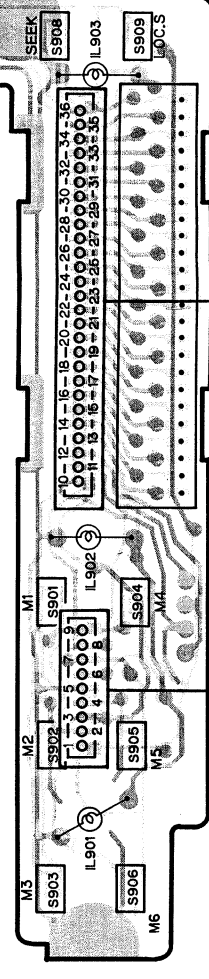


MOTHER UNIT (2/4) IC201										
1	2	3	4	5	6	7	8	9	10	
1.7V	2.1V		1.2V	0V	2.1V	8.4V	8.4V	0.8V	8.4V	
11	12	13	14	15	16	17	18	19	20	
0.7V	0V	3.0V		1.3V	6.6V	3.1V	5.7V	5.8V	3.1V	

MOTHER UNIT (1/4)

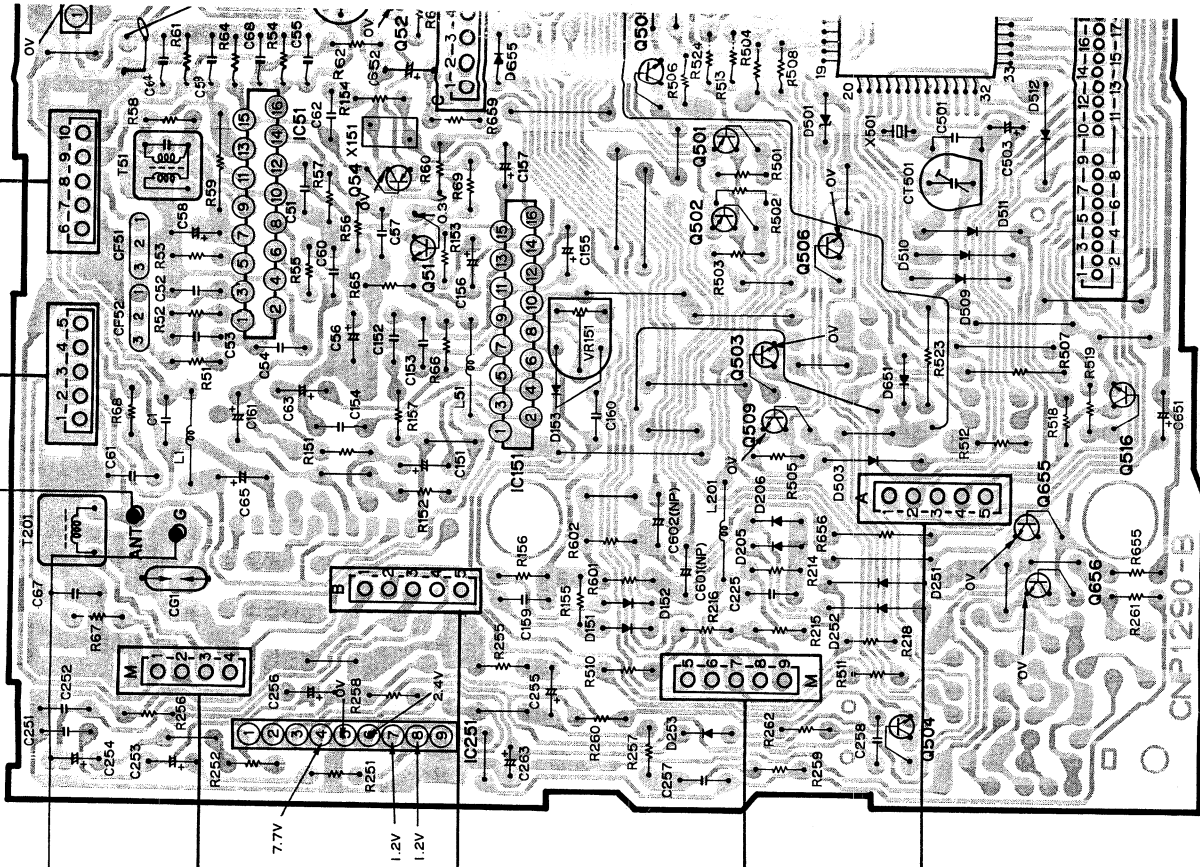[illegible]

MOTHER UNIT (3/4)

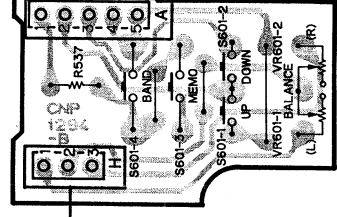

MOTHER UNIT (1/4) IC51

1	2	3	4	5	6	7	8
2.6V	2.6V		0V	2.0V	0V		4.9V
9	10	11	12	13	14	15	16
4.9V	0V	4.9V		4.9V	3.7V	0.2V	4.1V

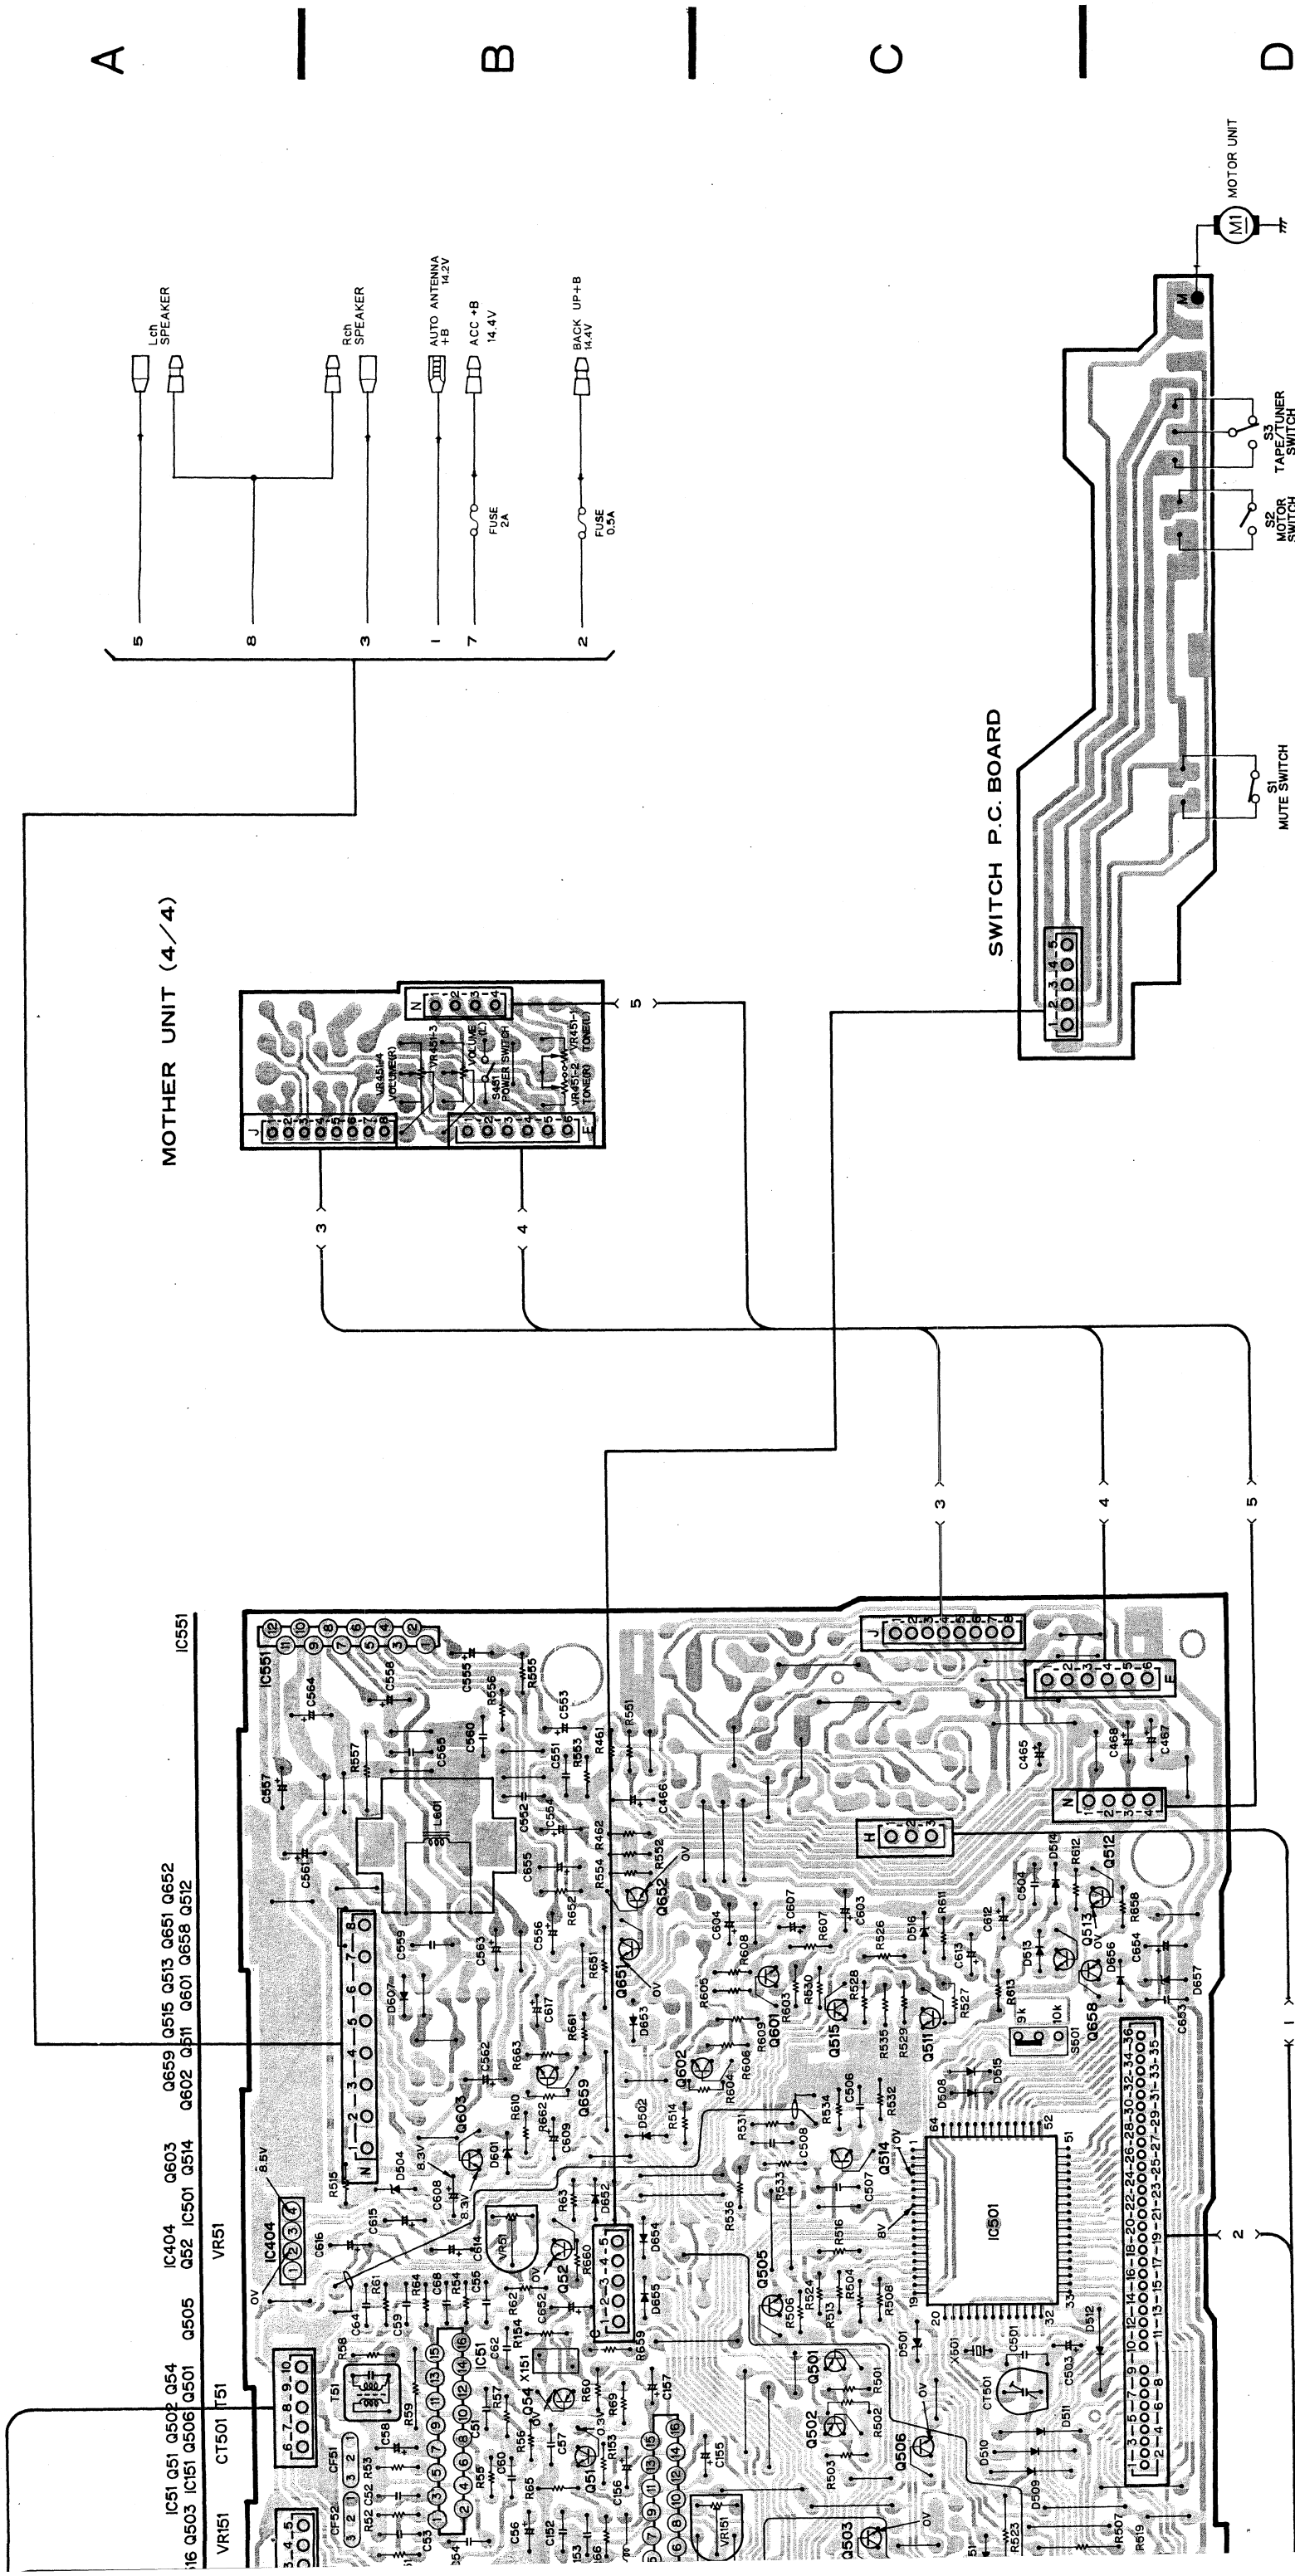


Fig. 31

20. EXPLODED VIEW

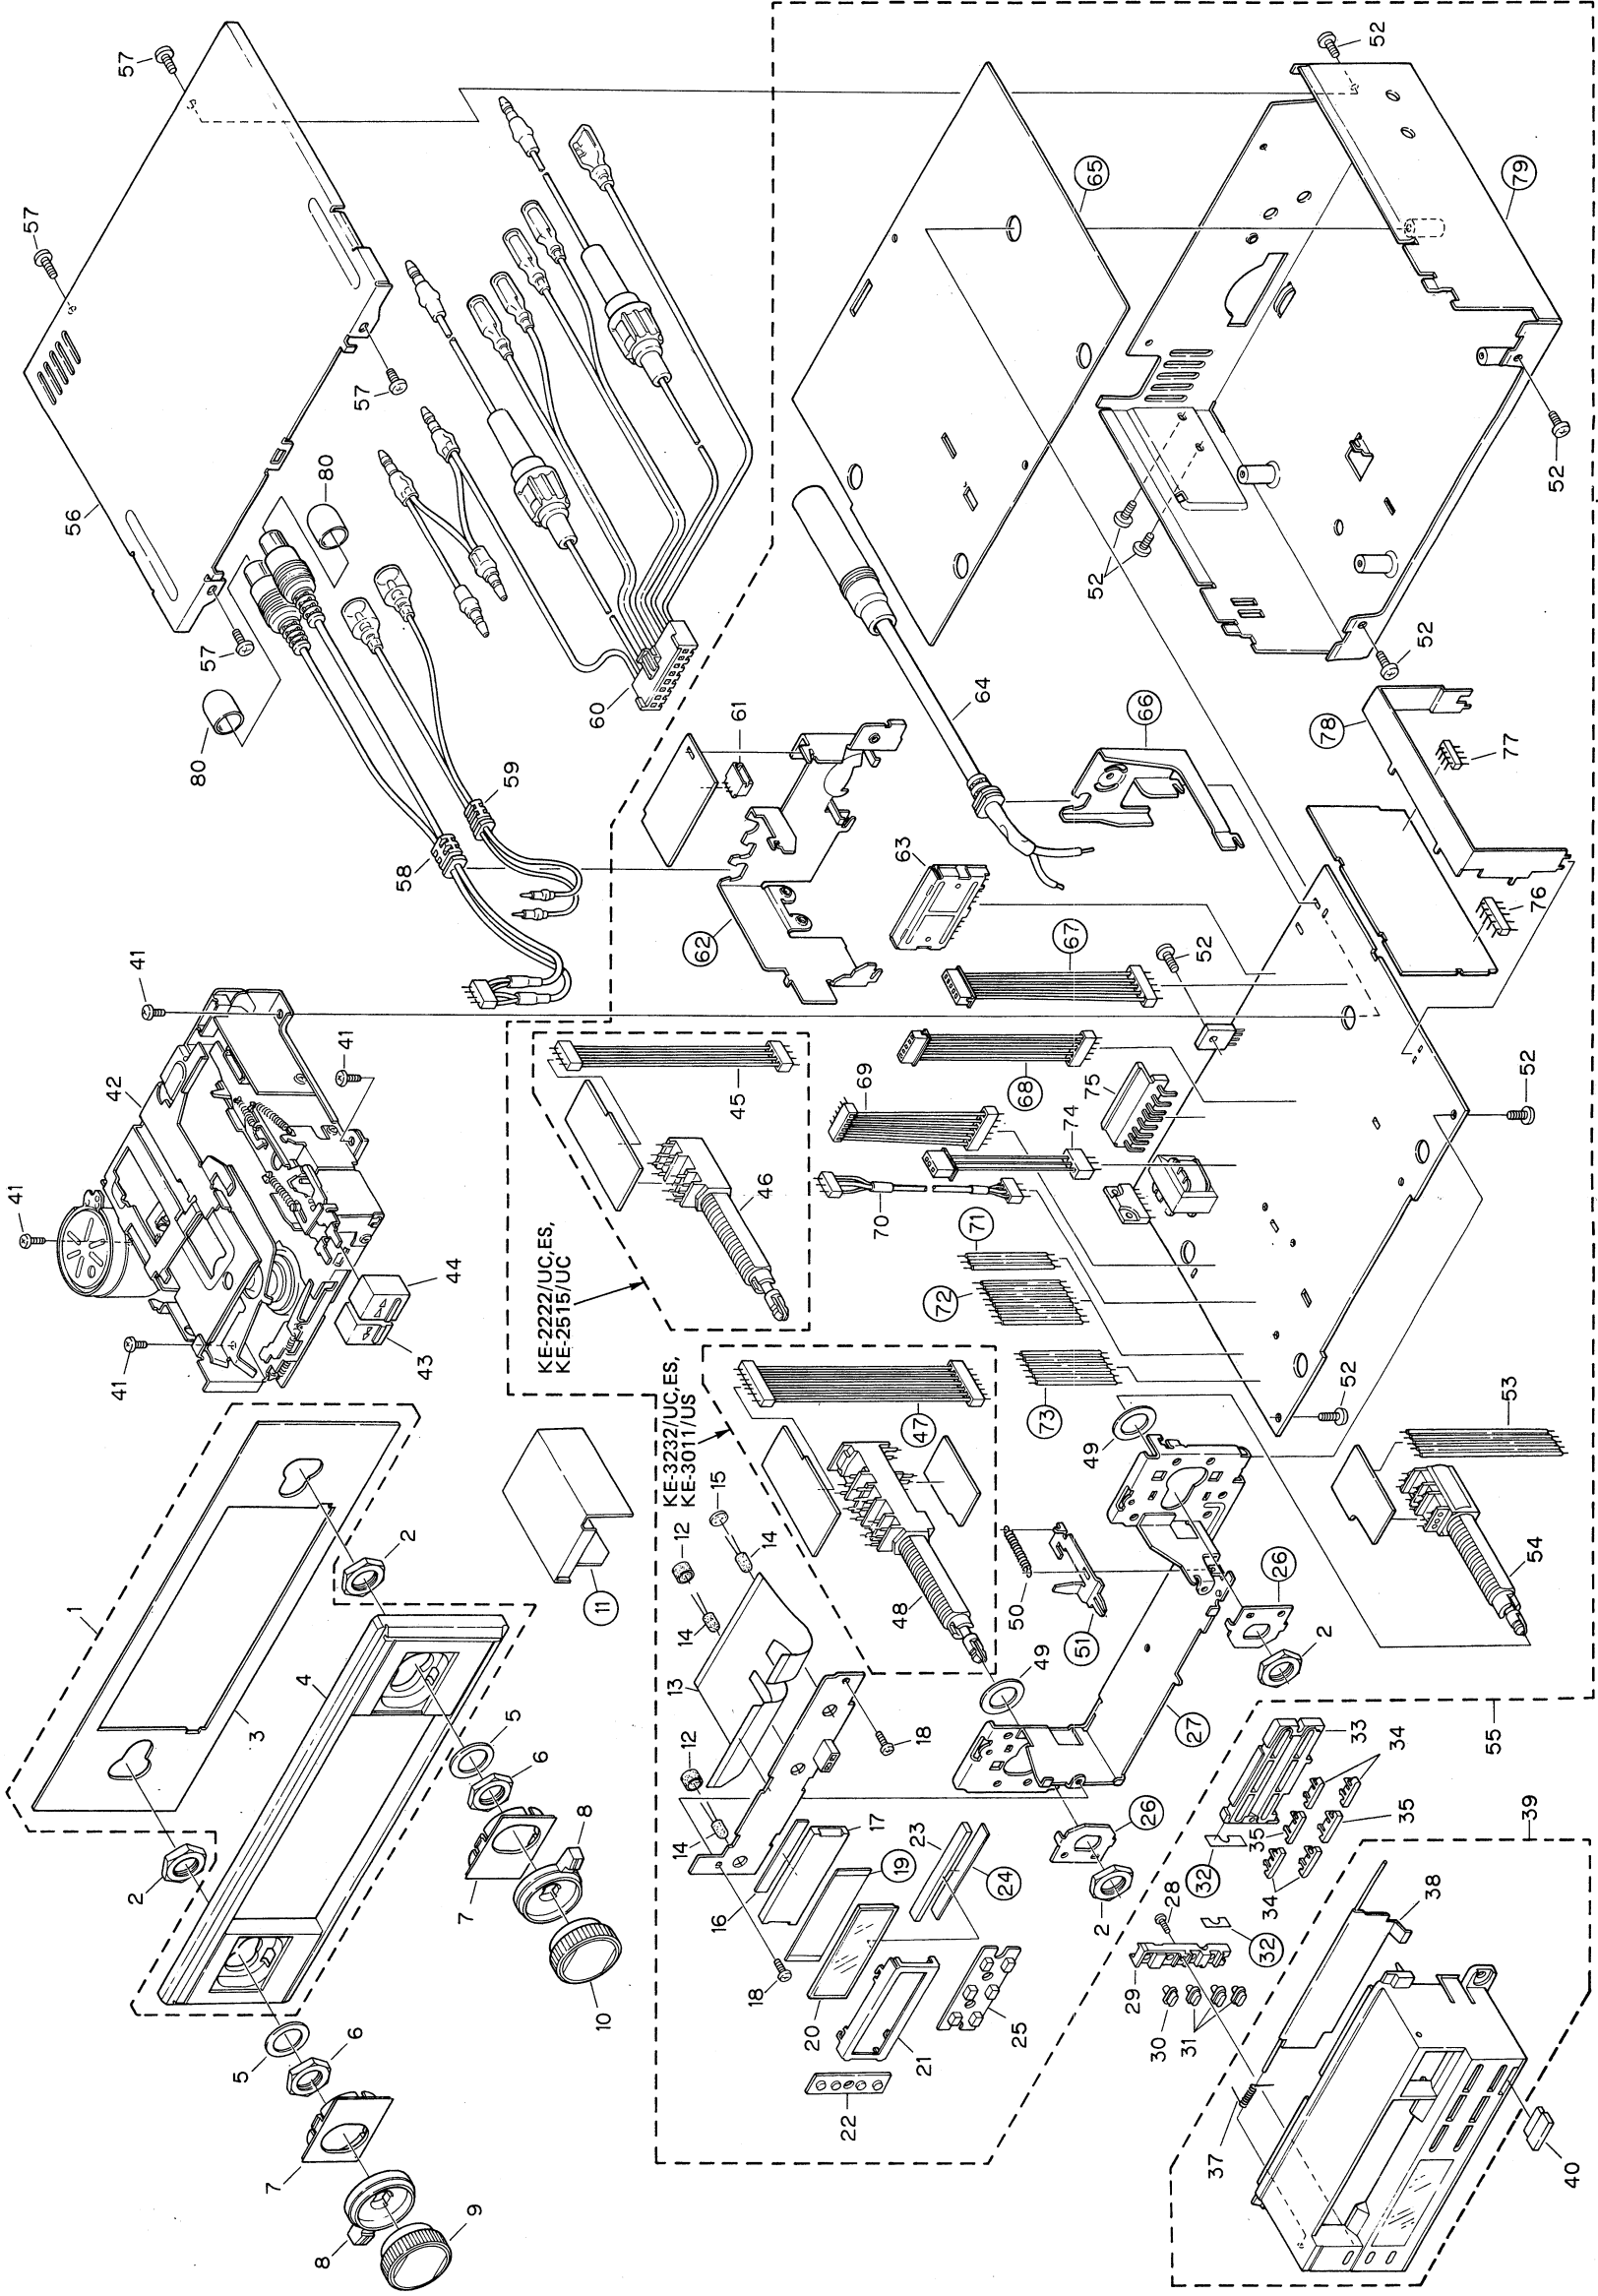


Fig. 32

● Parts List

NOTE:

- For your parts Stock Control, the fast moving items are indicated with the marks ★★ and ★
- ★★: GENERALLY MOVES FASTER THAN ★
- This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts whose parts numbers are omitted are subject to being not supplied.
- Parts marked by “●” are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

A

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	CXA1629 CXA1631	Panel Assy (KE-3232/UC, ES) Panel Assy (KE-2222/UC, ES, ES, 2515/US)		39.	CXA1583 CXA1584 CXA1585 CXA1586	Grille Unit (KE-3232/UC, ES) Grille Unit (KE-2222/UC, ES) Grille Unit (KE-3011/US) Grille Unit (KE-2515/US)
	2.	CXA1642	Panel Assy (KE-3232/UC, ES)		★ 40.	CAC1278	Button (KE-3232/UC, ES, 2222/UC, ES, 2515/US)
	3.	CBN-028	Nut			CAC1354	Button (KE-3011/US)
	4.	CNG-633	Plate		● 41.	BMZ26P050FMC	Screw
		CNS1226	Panel (KE-2222/UC, ES, 2515/US)		42.	EXK1130	Cassette Mechanism Assy
	5.	CNS1228	Panel (KE-3232/UC, ES, 2515/US)		★ 43.	CAC1277	Button (KE-3232/UC, ES, 2222/UC, ES, 2515/US)
		CNS1233	Panel (KE-3011/US)			CAC1330	Button (KE-3011/US)
	6.	CNC1528	Spacer (KE-3232/UC, ES, 2222/UC, ES, 2515/US)		★ 44.	CAC1276	Button (KE-3232/UC, ES, 2222/UC, ES, 2515/US)
		CBN-028	Nut (KE-3232/UC, ES, 2222/UC, ES, 2515/US)			CAC1329	Button (KE-3011/US)
	7.	CBN1001	Nut (KE-3011/US)		45.	CDF-637	Connector (KE-2222/UC, ES, 2515/US)
		CNK-292	Cap (KE-3232/UC, ES, 2222/UC, ES, 2515/US)		★ 46.	CCS1039	Volume/switch (KE-2222/UC, ES, 2515/US)
★	8.	CAA1054	Knob (KE-3232/UC, ES, 2222/UC, ES)		★ 47.	CCS1038	Connectotr (KE-3232/UC, ES, 3011/US)
		CAA1058	Knob (KE-2515/US)			CBE-084	Volume/switch (KE-3232/UC, ES, 3011/US)
★	9.	CAA1083 CAA1083 CAA1011	Knob (KE-3011/US) Knob (KE-3232/UC, ES, 2222/UC, ES, 2515/US) Knob (KE-3232/UC, ES, 2222/UC, ES, 2515/US)	★	48.	CBH1084	Spacer
		CAA-603	Knob (KE-3011/US)		49.	CBH1084	Spring
★	10.	CAA1055	Knob (KE-3232/UC, ES, 2222/UC, ES, 2515/US)		50.	BMZ30P060FMC	Screw
		CAA1056	Knob (KE-3011/US)		51.	CDE1126	Screw
	11.	CNV1088	Insulator		53.	CSD1001	Connector
	12.	CNV1370	Bush (KE-3232/UC, ES, 2222/UC, ES, 2515/US)	★	★ 54.	CNM1246	Volume/switch
		CNP1296	Bush (UC, ES, 2515/US)	●	55.	CNM1248	Tuner Amp Assy (KE-3232/UC)
	13.	CNL1004 or CEL1025	P.C. Board			CNM1249	Tuner Amp Assy (KE-3232/ES)
★	★ 14.	CNV1102	Lamp, 14V 40mA			CNM1250	Tuner Amp Assy (KE-2222/UC)
		CNV1371	Bush (KE-3232/UC, ES, 2222/UC, ES, 2515/US)			CNM1251	Tuenr Amp Assy (KE-3011/US)
	16.	CNN-137	Bush (KE-3011/US)		56.	CNM1252	Tuner Amp Assy (KE-2515/US)
	17.	CNV-215	Spacer		57.	BMZ30P040FMC	Case
	18.	PMZ20P050FMC	Lens		58.	CDE1381	Screw
	19.	FTZ-6251H	Screw		59.	CDE1345	Connector (KE-3232/UC, ES)
★	★ 20.	CNW1054	Plate		60.	CDE1419	Cord Assy (KE-2222/UC, ES, 2515/US)
		CNH-136	LCD (KE-3011/US)			CKS-469	Cord Assy (KE-3232/UC, ES, 3011/US)
	21.	CNV1375	LCD (KE-3232/UC, ES, 2222/UC, ES, 2515/US)		61.	CWB1021	Plug (KE-3232/UC, ES)
	22.	CNV-214	Holder		62.	CDH1054	Heat Sink
	23.	CNV1299	Rubber		63.		FM Front End
	24.		Connector		64.		Antenna Cable
	25.		Insulator		65.		Holder
	26.		Rubber		66.		Holder
	27.		Holder		67.		Connector (5P)
	28.	PTZ14P045FZK	Frame Unit		68.		Connector (5P)
	29.	CNV1298	Screw		69.	CDE1412	Connector (6P) (KE-3232/UC, ES, 3011/US)
★	★ 30.	CAC1281	Lens		70.	CDK-206	Connector (3P)
★	★ 31.	CAC1281	Button (KE-3011/US)				Connector (3P)
	32.	CNV1297	Plate		71.		Connector (3P) (KE-2222/UC, ES, 2515/US)
★	★ 33.	CAC1279	Lens		72.		Connector (8P) (KE-3232/UC, ES, 3011/US)
		CAC1404	Button (KE-3232/UC, ES, 2222/UC, ES, 2515/US)		73.	CDE1410	Connector (6P)
★	★ 35.	CAC1280	Button (KE-3232/UC, ES, 2222/UC, ES, 2515/US)		74.	CKS-465	Connector (3P) (KE-3232/UC, ES)
		CAC1405	Button (KE-3011/US)		75.	CKS-128	Plug (8P)
	36.	VACANT	Button (KE-3232/UC, ES)		76.	CKS-127	Plug (5P)
	37.	CBH1033	Button (KE-3232/UC, ES)		77.		Plug (4P)
	38.	CAT1042	Button (KE-3011/US)		78.		Holder
		CAT1043	Spring Door (KE-3232/UC, ES, 2222/UC, ES)		79.	CNW-829	Chassis Unit
		CAT1046	Door (KE-2515/US)		80.		Cap (KE-3232/UC, ES)
			Door (KE-3011/US)				

21. CASSETTE MECHANISM ASSY EXPLODED VIEW

● Parts List

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
★ ★	1.	EXA1013	Motor Assy		59.	BMZ20P040FMC	Screw
	2,3.	VACANT		★ ★	60.	EPB1001	Head
	4.	BMZ20P025FMC	Screw		61.	CBH-198	Spring
	5.	EBH1011	Holder		62.	ENP1003	P. C. Board
	6.		Spring		63.		Arm
	7.	CBF-166	Washer		64.	EXA1004	Head Base Unit
	8.	EXA1012	Reel Unit		65.	EBH1004	Spring
	9.	BMZ23P030FMC	Screw		66.	EBH1003	Spring
	10.	BSZ23P040FMC	Screw		67.		Cushion
	11.		Bracket		68.	YE20FUC	Washer
	12.	PMS26P025FUC	Screw		69.	EXA1002	Roller Unit
	13.		Cassette Holder		70.	EBF1004	Chassis Unit
	14.	EBH1019	Spring		71.	ENV1009	Washer
	15.	EBA1002	Screw		72.		Pulley
	16.	ELA1019	Collar		73.		Lever
	17.	ENV1022	Arm		74.	EBH1025	Spring
	18.	ENV1021	Arm		75.	EBL1001	Spring
	19.	YE12FUC	Washer		76.	ENV1010	Pulley
20-22.	VACANT				77.		Arm
23.	YE15FUC		Washer		78.	HBA-147	Screw
24.	CBH-165		Washer		79.	ENV1015	Gear
25.	EBH1035		Spring		80.	ELA1018	Collar
26.			Arm		81.		Arm
27.	EBH1037		Spring		82.		Plug
28.	EBH1039		Spring		83.	ENV1011	Gear
29.			Arm		84.		Arm
30.			Arm		85.	EBH1024	Spring
31.	EBH1010		Spring		86.		Ratchet
32.			Arm	★ ★	87.	EBH1018	Spring
33.	EBH1008		Spring		88.	EXA1003	Roller Unit
34.			Arm Unit		89.		Arm
35.	CBG1001		Washer		90.		Lever
36.	HBH-179		Washer		91.	EBH1013	Spring
37.	ENV1019		Flywheel (N)		92.	EXA1006	Arm Unit
38.	ENV1020		Flywheel (R)		93.	EXA1020	Gear unit
★ ★	39.	CNT-091	Belt		94.	ELA1032	Collar
	40.		Roller		95.	HBA-212	Screw
	41.		Cassette Frame Unit		96.	EBH1007	Spring
	42.	PMS20P040FMC	Screw		97.	EBH1006	Spring
	43.	ENV1016	Tape Guide		98.	EBH1014	Spring
	44.	EBH1020	Spring		99.	CBF1001	Washer
	45.		Lever		100.		Arm Unit
	46.		Arm		101.	ENV1018	Gear
	47.	EBH1040	Spring		102.	ENV1017	Gear
	48.	EBH1041	Spring		103.	EBH1022	Spring
	49.	EBH1021	Spring		104.	EXA1005	Arm Unit
	50.		Lever		105.		Plug
	51.	EBE1001	Washer		106.	EBA1006	Screw
	52.	EBH1009	Spring		107.	BMZ20P070FUC	Bracket Unit
★ ★	53.	ENT1002	Belt		108.		
	54.	ENV1012	Gear		109.	EBH1016	Spring
	55.	CBH-135	Washer		110.		Lever Unit
	56.	ENV1014	Gear		111.	EBH1017	Spring
	57.	EBA1007	Cover		112.	EBH1005	Spring
	58.		Screw		113.		Lever
					114.		Lever
					115.		Arm

Mark	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
	C555, 556, 563	CEA470M16L2	★	D501	RD4R7ESB1 or MTZ4R7JA
	C557, 558	CEA101M10L2			HZS5R6JB2 or RD5R6JSB2
	C559, 560	CQMA224J50L	★	D504	
	C561, 562	CEA102M10L2			
	C564	CEA222M16L2	★	D507	US1040M or 1SS176 or 1SS133
	C565	CQMA154J50L			
	C601, 602	CEA010M50NPLL			
	C603, 604	CEA100M25LS	★	D515	US1040M or 1SS176 or 1SS133
	C607	CEA221M10L2			
	C608, 609	CEA101M10L2			
	C612, 613	CEA100M25LS	★	D516	RD6R8ESB2
	C615	CEA470M16L2	★	D601	MTZ9R1JA or RD9R1ESB1
	C617	CEA101M50L2			
	C651	CEA100M25LS			
	C652	CEA330M16LS	★	D607	ERA15-02Y
			★	D657	MTZ9R1JC or RD9R1ESB3
	C654	CEA470M16LS		L1	CTF-156
	C655	CEAR22M50LS2		L51	CTF-155
MOTHER UNIT					
(KE-2222/UC, ES, 2515/US)					
MISCELLANEOUS					
Mark	Symbol & Description	Part No.			
★ ★	IC51	LA1140B			CTB1013
★ ★	IC151	LA3430			CTE1011
★ ★	IC201	LA1135			CTE1012
★ ★	IC251	M51522AL			CTB1014
★ ★	IC404	AN6540			CTF-182
★ ★	IC501	PD4073B			CTF-240
★ ★	IC551	TA7280P			CTF-247
★ ★	Q51, 52, 202 — 204, 601, 602	2SC2458	★ ★	VR51	CCP-254
★ ★	Q54, 515, 658	2SA1048 or 2SA933S	★ ★	VR151	CCP-246
			★ ★	VR451/S451	CCS1039
★	Q201	2SK435			(TONE, VOLUME/POWER)
★	Q253, 254 (KE-2515/US)	2SC2458 or 2SC1740S		CG1	CCX-006
				CT501	CCG-070
★	Q501, 502	2SA1150		X151	Ceramic Resonator, 57kHz CSS1019
★	Q503	UN4216			
★	Q504 — 506, 509, 511, 512, 516 (KE-2515/US)	2SC2458		X501	CSS-046
★	Q510	UN4216	★ ★	S501	X'tal, 4.5MHz
★	Q513	2SC3113	★ ★	S501	Switch (9k/10k SELECTOR) (KE-2222/ES)
★	Q514	2SC2498 or 2SC2026	★ ★	S601/VR601	Switch/Volume (BAND, MEMO/TONE, BALANCE)
					CSD1001
★	Q603	2SC2060 or 2SD667			
★	Q651, 652	2SD1468S			
★	Q655, 656, 659	2SC2458 or 2SC1740S			
★	D151 — 153, 201, 202, 205, 206, 253, 502, 508, 513, 514, 651 — 656	US1040M or 1SS176 or 1SS133			
★	D207	KV1235Z3			
★	D251, 252, 503, 509 — 512	US1040 or 1S1555 or 1S2473			

**KEY BOARD UNIT
(KE-3232/UC, ES, 3011/US)**

Mark	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
★	LCD (KE-3232/UC, ES)	CWW1054	★ ★	S1, 2	Switch (MUTE, MOTOR)
★	LCD (KE-3011/US)	FTD-6251H	★ ★	S3	Switch (TAPE/TUNER)
★	D901 LED (METAL)	SLR-320PG3KL			ESN1001
★ ★	IL901 — 903 Lamp, 14V 40mA	CEL1004 or CEL1025			HSK-126

**KEY BOARD UNIT
(KE-2222/UC, ES, 2515/US)**

Mark	Symbol & Description
★	LCD
★	D902 (KE-2515/US)
★ ★	IL901 — 903 Lamp, 14V 40mA


P.C. BOARD UNIT

Mark	Symbol & Description	Part No.
★ ★	S1	Switch (FWD/REV)
		ESH1001

Miscellaneous Parts List

Mark	Symbol & Description	Part No.
★ ★	HD1	Head
★ ★	M1	Motor
		EPB1001
		EXA1013

23. PACKING METHOD

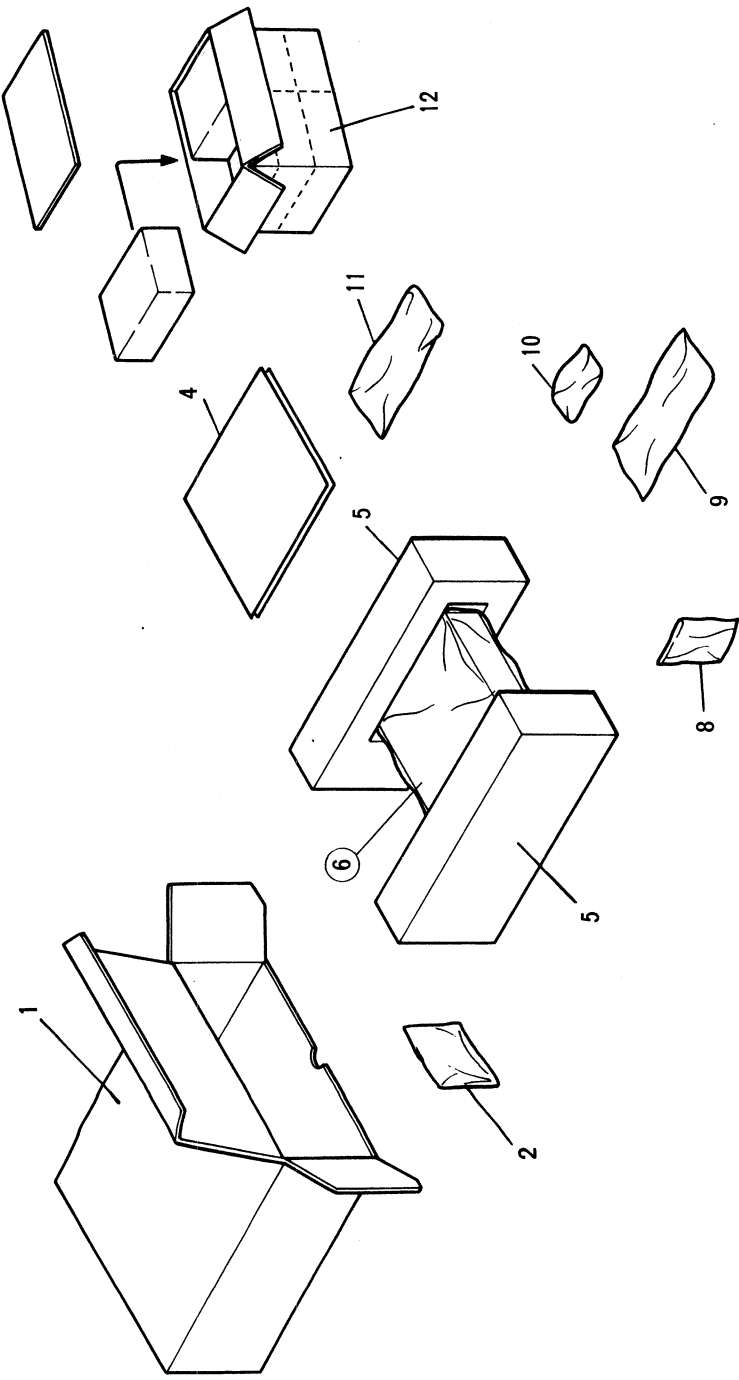

● Parts List

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	CHG1270	Carton (KE-3232/UC)	★	2-8	CAA1058	Knob (KE-2515/US)
		CHG1273	Carton (KE-3232/ES)		3.	VACANT	Owner's Manual (KE-3011/US)
		CHG1274	Carton (KE-3011/US)		4.	CRB1068	Owner's Manual (KE-2515/US)
		CHG1275	Carton (KE-2222/UC)			CRB1069	Owner's Manual
		CHG1278	Carton (KE-2222/ES)			CRD1080	(KE-3232/ES, 2222/ES)
		CHG1279	Carton (KE-2515/US)				Owner's Manual (KE-3232/UC, 2222/UC)
	2.	CXA1634	Knob Assy (KE-2222/UC, ES)			CRD1124	Styrofoam
		CXA1636	Knob Assy (KE-3011/US)		5.	CHP1064	Polyethylene Bag
		CXA1637	Knob Assy (KE-2515/US)		6.		
		CXA1773	Knob Assy (KE-3232/UC, ES)		7.	VACANT	
★	2-1.	CAA1011	Knob (KE-3232/UC, ES, 2222/UC, ES, 2515/US)		8.	CNS-962	Cover
★	2-2.	CAA1054	Knob (KE-3232/UC, ES, 2222/UC, ES, 2515/US)		9.	CEA-550	Accessory Kit (KE-3232/UC, ES, 2222/UC, ES, 2515/US)
★	2-3.	CAA1055	Knob (KE-3232/UC, ES, 2222/UC, ES)			CEA1196	Accessory Kit (KE-3011/US)
					9-1.	CDE1289	Cord
	2-4.	CNK-292	Cap (KE-3232/UC, ES, 2222/UC, ES, 2515/US)		9-2.	CNV-769	Washer
★	2-5.	CAA-603	Knob (KE-3011/US)		9-3.	CNS-722	Cover
★	2-6.	CAA1056	Knob (KE-3011/US)		9-4.	CNC-975	Strap
★	2-7.	CAA1083	Knob (KE-3011/US)		9-5.		Screw Kit
					9-5-1.	CBA-028	Screw for strap

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	9-5-2.	CBN-028	Nut		11.	CXA1629	Panel Assy (KE-3232/UC, ES)
	9-5-3.	B20-013	Washer (KE-3011/US)			CXA1631	Panel Assy
	9-5-4.	CND-646	Spacer (KE-3232/UC, ES, 2222/UC, ES, 2515/US)			CXA1642	(KE-2222/UC, ES, 2515/US)
	9-5-5.	NF40FMC	Nut (KE-3232/UC, ES, 2222/UC, ES, 2515/US)		11-1.	CNS1226	Panel Assy (KE-3011/US)
					11-2.	CNS1228	Panel (KE-3232/UC, ES)
	9-5-6.	NF50FMC	Nut (KE-3232/UC, ES, 2222/UC, ES, 2515/US)		11-3.	CNS1233	Panel (KE-2222/UC, ES, 2515/US)
	9-5-7.	CBN1001	Nut (KE-3011/US)		11-4.	CNG-633	Plate
	9-5-8.	CNC1528	Spacer (KE-3011/US)		12.	CHL1270	Contain Box (KE-3232/UC)
	9-5-9.	WS40FMC	Washer (KE-3232/US, ES, 2222/UC, ES, 2515/US)			CHL1274	Contain Box (KE-3011/US)
						CHL1275	Contain Box (KE-2222/UC)
						CHL1279	Contain Box (KE-2515/US)
	9-5-10.	PMB50Y160FMC	Cord Assy				
	10.	CDE1345	(KE-2222/UC, ES, 2515/US)				
		CDE1419	Cord Assy				
			(KE-3232/UC, ES, 3011/US)				